



# **X3-NEO-LV**

**5 kW / 8 kW / 10 kW /**  
**12 kW / 15 kW / 20 kW**

## **User Manual**

Version 2.0

[www.solaxpower.com](http://www.solaxpower.com)



eManual in the QR code or  
at <http://solaxpower.com/>



# STATEMENT

---

## Copyright

Copyright © SolaX Power Network Technology (Zhejiang) Co., Ltd. All rights reserved.

No part of this manual may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means without the prior written permission of SolaX Power Network Technology (Zhejiang) Co., Ltd.

## Trademarks



and other symbol or design (brand name, logo) that distinguishes the products or services offered by SolaX has been trademark protected. Any unauthorized use of the above stated trademark may infringe the trademark right.

## Notice

Please note that certain products, features, and services mentioned in this document may not be within the scope of your purchase or usage. Unless otherwise specified in the contract, the contents, information, and recommendations presented in this document are provided "as is" by SolaX. We do not provide any warranties, guarantees, or representations, whether express or implied.

The content of the documents is reviewed and updated as needed. However, occasional discrepancies may occur. SolaX retains the right to make improvements or changes in the product(s) and the program(s) described in this manual at any time without prior notice.

The images included in this document are solely for illustrative purposes and may differ based on the specific product models.

For more detailed information, kindly visit the website of SolaX Power Network Technology (Zhejiang) Co., Ltd. at [www.solaxpower.com](http://www.solaxpower.com).

SolaX retains all rights for the final explanation.

# About This Manual

---

## Scope of Validity

This manual is an integral part of X3-NEO-LV series inverter. It describes the transportation, storage, installation, electrical connection, commissioning, maintenance and troubleshooting of the product. Please read it carefully before operating.

This manual is valid for the following inverter models:

- X3-NEO-5K-LV
- X3-NEO-8K-LV
- X3-NEO-10K-LV
- X3-NEO-12K-LV
- X3-NEO-15K-LV
- X3-NEO-20K-LV

### Model description

# X3-NEO-5K-LV



Item	Meaning	Description
1	Product family name	"X3-NEO": energy storage series inverter that supports grid connection of photovoltaic system.
2	Power	"5K": rated output power of 5 kW.
3	Voltage	"LV": low voltage battery.

## Target Group

The installation, maintenance and grid-related setting can only be performed by qualified personnel who:

- Are licensed and/or satisfy state and local regulations.
- Have good knowledge of this manual and other related documents.

## Conventions

The symbols that may be found in this manual are defined as follows.

Symbol	Description
 <b>DANGER</b>	Indicates a hazardous situation which, if not avoided, will result in death or serious injury.
 <b>WARNING</b>	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
 <b>CAUTION!</b>	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
 <b>NOTICE!</b>	Provides tips for the optimal operation of the product.

## Change History

Version 1.0 (2025-12-01)

Normative updates for the whole documentation

### ["2.7 Working mode"](#)

Added Load First option to SBU Mode, Force Time Use Mode, and MKS/EPS Mode with description.

Updated MKS/EPS Mode table: corrected "SUB" to "SBU" and added notes for Load First.

Enhanced No PV input description with charge source behavior details.

Renamed "Battery Charging And Discharging Situation" to "Battery Charge Source".

### ["2.8.1 Self Use Mode"](#)

Updated period names: removed "forced" and "allowed".

### ["5.3 Additionally Required Materials"](#)

Updated circuit breaker recommendation: 50 A for 15 kW models.

### ["9 Communication Connection"](#)

Restructured communication connection content title, updated the pin assignment description, and added COM description for emergency shutdown, Modbus RS-485, and EV charger.

Updated Meter/CT diagram.

Updated Parallel Connection CAN DIP switch settings.

[\*\*"10.2 Powering on the System"\*\*](#)

Added Grid terminal connection note for "Installation Check"

[\*\*"11.2 Introduction of Menu Interface"\*\*](#)

Added Today/Total energy statistics to PV display

Expanded Setting options with Smart Load

[\*\*"11.4 Grid Settings"\*\*](#)

Renamed from Grid Control and added Active Power Limit function

[\*\*"11.5 Battery Setting"\*\*](#)

Removed User battery type and added new Li-ion settings

[\*\*"11.6 Smart Load"\*\*](#)

Standardized SOC term and added Generator option

[\*\*"11.8.2 Advanced Setting"\*\*](#)

Added Micro Grid, Connection Point and enhanced Meter/CT State parameters

[\*\*"11.9 Logs"\*\*](#)

Renamed from History Errors

[\*\*"15 Technical Data"\*\*](#)

Added EPS Output load requirements

Updated X3-NEO-20K-LV parameters and Rated output current values

Changed Switch time to 3 ms

Changed Communication Interfaces to RS485, CAN, USB, DI/DO

[\*\*"16 Appendix"\*\*](#)

Enhanced wiring diagrams with Meter1/Meter2 designations

Restructured Application of Generator Micro-grid content and added meter application

Updated parallel system requirements and wiring diagrams

Added Smart Load application

[\*\*Version 1.0 \(2025-01-08\)\*\*](#)

DC Switch to PV Switch;

Updated "Upgrade preparation";

Updated "2.6 Working State";

Updated "2.7 Working mode (For Pakistan)";

Added "2.8 Working mode (For countries other than Pakistan)";

Updated "Figure3-1 System diagram";

Added "16 Appendix";

Updated "11 Operation on LCD";

Updated "13.2 Troubleshooting";

Added 20kW model, updated related parameters "15 Technical Data";

**Version 1.0 (2024-10-31)**

Updated [service@solaxpower.com.au](mailto:service@solaxpower.com.au)

**Version 0.0 (2024-04-26)**

Initial release

# Table of Contents

---

1	Safety .....	1
1.1	General Safety .....	1
1.2	Safety Instructions of PV, Inverter and Grid .....	1
1.2.1	Safety Instructions of PV .....	2
1.2.2	Safety Instructions of Inverter .....	2
1.2.3	Safety Instructions of Utility Grid .....	3
2	Product Overview .....	4
2.1	Product Introduction .....	4
2.2	Appearance .....	4
2.3	Supported Power Grid .....	5
2.4	Symbols on the Label and Inverter .....	7
2.5	Working Principle .....	8
2.5.1	Circuit Diagram .....	8
2.5.2	Application Schemes .....	9
2.6	Working State .....	11
2.7	Working Mode (For Pakistan) .....	12
2.7.1	SUB Mode .....	12
2.7.2	SBU Mode .....	13
2.7.3	MKS/EPS Mode .....	14
2.7.4	Force Time Use Mode .....	15
2.7.5	Manual Mode .....	15
2.8	Working Mode (For Countries other than Pakistan) .....	16
2.8.1	Self Use Mode (Priority: Loads > Battery > Grid) .....	16
2.8.2	Feed-in Priority (Priority: Loads > Grid) .....	17
2.8.3	Backup Mode (Priority: Loads > Battery > Grid) .....	19
2.8.4	Peak Shaving Mode .....	20
2.8.5	Manual Mode .....	21
2.8.6	Period Setting .....	21
2.9	Grid Control Function .....	22
3	System Overview .....	23
4	Transportation and Storage .....	25
5	Preparation before Installation .....	26
5.1	Selection of Installation Location .....	26
5.1.1	Environment Requirement .....	26

5.1.2	Installation Carrier Requirement .....	28
5.1.3	Clearance Requirement .....	28
5.2	Tools Requirement .....	30
5.3	Additionally Required Materials .....	31
<b>6</b>	<b>Unpacking and Inspection .....</b>	<b>33</b>
6.1	Unpacking .....	33
6.2	Scope of Delivery .....	34
<b>7</b>	<b>Mechanical Installation .....</b>	<b>36</b>
7.1	Dimensions for Mounting .....	37
7.2	Installation Procedures .....	38
<b>8</b>	<b>Electrical Connection .....</b>	<b>41</b>
8.1	Overview of Electrical Connection .....	41
8.1.1	Terminals of Inverter .....	41
8.1.2	Cable Connections of Inverter .....	42
8.2	PE Connection .....	44
8.3	Battery Power Cable Connection .....	46
8.4	AC Connection .....	49
8.5	PV Connection .....	54
<b>9</b>	<b>Communication Connection .....</b>	<b>58</b>
9.1	Pin Assignment of COM Terminal .....	58
9.2	COM1 Communication Connection .....	59
9.3	COM2 Communication Connection .....	59
9.4	COM4 Communication Connection .....	59
9.4.1	Generator Communication Connection .....	60
9.5	COM5 Communication Connection .....	61
9.5.1	Battery Communication Connection .....	61
9.6	COM6 Communication Connection .....	64
9.6.1	Meter/CT Connection .....	64
9.6.2	CT Connection Procedure .....	67
9.6.3	(Optional) Meter Connection Procedure .....	68
9.7	COM7/COM8 Communication Connection .....	69
9.7.1	Pin assignment of the COM7/COM8 Terminal .....	69
9.7.2	Parallel Communication Connection .....	69
9.8	Upper Cover Installation .....	70
9.9	Monitoring Connection .....	71
<b>10</b>	<b>System Commissioning .....</b>	<b>74</b>
10.1	Checking Before Power-on .....	74

10.2	Powering on the System.....	75
<b>11</b>	<b>Operation on LCD.....</b>	<b>77</b>
11.1	Introduction of Control Panel.....	77
11.2	Introduction of Menu Interface .....	79
11.3	Work Mode Setting.....	80
11.3.1	Work Mode for Pakistan .....	81
11.3.2	Work Mode for other Countries.....	84
11.4	Grid Settings.....	87
11.5	Battery Setting .....	88
11.5.1	Li-ion Battery Setting.....	88
11.5.2	Lead Acid Battery Setting.....	89
11.5.3	No Battery .....	89
11.6	Smart Load.....	89
11.7	Parallel Setting .....	91
11.8	Setting .....	91
11.8.1	Basic Setting.....	91
11.8.2	Advanced Setting .....	93
11.9	Logs .....	96
11.10	About.....	97
<b>12</b>	<b>Operation on SolaX App and Web.....</b>	<b>98</b>
12.1	Introduction of SolaXCloud .....	98
12.2	Operation Guide on SolaXCloud App .....	98
12.2.1	Downloading and Installing App .....	98
12.2.2	Operation on the SolaXCloud App .....	99
12.3	Operations on SolaXCloud Web Page.....	99
<b>13</b>	<b>Troubleshooting and Maintenance .....</b>	<b>100</b>
13.1	Power-off .....	100
13.2	Troubleshooting.....	100
13.3	Maintenance.....	108
13.3.1	Maintenance Routines .....	108
13.3.2	Replacement of Fans.....	109
13.3.3	Upgrading Firmware.....	110
<b>14</b>	<b>Decommissioning .....</b>	<b>112</b>
14.1	Disassembling the Inverter .....	112
14.2	Packing the Inverter .....	113
14.3	Disposing of the Inverter .....	113
<b>15</b>	<b>Technical Data .....</b>	<b>114</b>

16	Appendix .....	119
16.1	Application of Generator .....	119
16.1.1	Introduction of Generator Application .....	119
16.1.2	Generator Wiring Connection Diagram .....	119
16.1.3	Generator Control Mode .....	122
16.1.4	Cable Connection.....	123
16.1.5	Inverter settings for Meter1.....	123
16.2	Application of Parallel Function .....	124
16.2.1	Introduction of Parallel Application.....	124
16.2.2	Notice for Parallel Application.....	124
16.2.3	System Wiring Diagram .....	125
16.2.4	System Wiring Procedure.....	126
16.2.5	Settings for Parallel Connection.....	128
16.2.6	Parallel Display .....	129
16.3	Application of Micro-grid .....	129
16.3.1	Introduction of Micro-grid Application.....	129
16.3.2	System Wiring Diagram .....	130
16.3.3	Cable Connection.....	134
16.3.4	Inverter Settings for Meter2.....	134
16.4	Application of AC Coupling .....	134
16.4.1	Introduction of AC Coupling .....	134
16.4.2	System Wiring Diagram .....	135
16.4.3	Cable Connection.....	135
16.4.4	Inverter Settings for Meter2.....	136
16.5	Application of Meter .....	136
16.5.1	Introduction of Meter Connection .....	136
16.5.2	System Wiring Diagram .....	136
16.5.3	Pin Assignment of COM6 .....	139
16.5.4	Inverter Settings for Meter1.....	139
16.5.5	Inverter Settings for Meter2.....	139
16.6	Application of Smart Load.....	140
16.6.1	Introduction of Smart Load.....	140
16.6.2	System Wiring Diagram .....	140

# 1 Safety

---

## 1.1 General Safety

The series inverter has been meticulously designed and tested to comply with the relevant state and international safety standards. Nevertheless, like all electrical and electronic equipment, safety precautions must be observed and followed during the installation of the inverter to minimize the risk of personal injury and ensure a safe installation.

Please carefully read, comprehend, and strictly adhere to the comprehensive instructions provided in the user manual and any other relevant regulations prior to the installation of the inverter. The safety instructions in this document serve as supplementary guidelines to local laws and regulations.

SolaX shall not be liable for any consequences resulting from the violation of the storage, transportation, installation, and operation regulations outlined in this document. Such consequences include, but are not limited to:

- Inverter damage caused by force majeure events, such as earthquakes, floods, thunderstorms, lightning, fire hazards, volcanic eruptions, and similar events.
- Inverter damage due to human causes.
- Inverter damage caused by strong vibrations from external factors before, during and after installation.
- Usage or operation of the inverter in violation of local policies or regulations.
- Failure to comply with the operation instructions and safety precautions provided with the product and in this document.
- Improper installation or usage of the inverter in unsuitable environmental or electrical conditions.
- Unauthorized modifications to the product or software.
- Inverter damage occurring during transportation by the customer.
- Storage conditions that do not meet the requirements specified in this document.
- Installation and commissioning performed by unauthorized personnel who lack the necessary licenses or do not comply with state and local regulations.

## 1.2 Safety Instructions of PV, Inverter and Grid

Save these important safety instructions. Failure to follow these safety instructions may result in damage to the inverter and injury or even loss of life.

### 1.2.1 Safety Instructions of PV

#### DANGER!

Potential risk of lethal electric shock as associated with the photovoltaic (PV) system

- Exposure to sunlight can result in the generation of high DC voltage by PV modules, which can lead to electric shock causing severe injuries or even death.
- Never touch the positive or negative poles of the PV connecting device, and avoid touching both poles simultaneously.
- Do not ground the positive or negative poles of the PV modules.
- Only qualified personnel can perform the wiring of the PV modules.

#### WARNING!

- Overvoltage protection with surge arresters should be provided when the PV system is installed. The inverter is fitted with SPDs on both PV input side and MAINS side.
- Please consult professionals before installing SPDs.

#### WARNING!

- Make sure that the input DC voltage does not exceed the maximum DC input voltage specified for the inverter. Overvoltage can cause irreversible damage to the inverter, and such damage is not covered by the warranty.

### 1.2.2 Safety Instructions of Inverter

#### DANGER!

Potential risk of lethal electric shock as associated with the inverter

- Only operate the inverter if it is in a technically faultless condition. Operating a faulty inverter may lead to electric shock or fire.
- Do not attempt to open the enclosure without authorization from SolaX. Unauthorized opening of the enclosure will void the warranty and can result in lethal danger or serious injury due to electric shock.
- Make sure that the inverter is reliably grounded before any operation to prevent the risk of electric shock causing lethal danger or serious injury.
- Only qualified personnel can perform the installation, wiring, maintenance of the inverter by following this document and the related regulations.

#### WARNING!

- During operation, avoid touching any parts of the inverter other than the PV switch and LCD panel.
- Never connect or disconnect the AC and DC connector while the inverter is running.
- Prior to conducting any maintenance, turn off the AC and DC power and disconnect them from the inverter. Wait for 5 minutes to fully discharge the energy.

 **WARNING!**

**Potential danger of scalding due to the hot enclosure of the inverter**

- Avoid touching the inverter while it is running, as it becomes hot during operation and may cause personal injuries.

 **WARNING!**

- When handling the battery, carefully follow all safety instructions provided in the battery manual. The battery used with the inverter must meet the specified requirements of the series inverter.

 **WARNING!**

- Use insulated tools when installing the device, and always wear personal protective equipment during installation and maintenance.

 **WARNING!**

- SolaX assumes no responsibility for any problems arising from the use of third-party lithium batteries connected as lead-acid batteries.
- Prohibit the use of SolaX lithium battery in Lead-acid mode. Any consequences arising from the use of lead-acid mode shall be borne by users themselves, and SolaX will not provide warranty!

 **CAUTION!**

- Make sure that children are supervised to prevent them from playing with the inverter.
- Pay attention to the weight of the inverter and handle it properly to avoid personal injuries.

**NOTICE!**

- If an external Residual Current Device (RCD) is required by local regulations, verify the type of RCD required. It is recommended to use a Type-A RCD with a rating of 300 mA. When required by local regulations, the use of a Type-B RCD is permitted.
- Keep all product labels and the nameplate on the inverter clearly visible and well-maintained.

### 1.2.3 Safety Instructions of Utility Grid

**NOTICE!**

- Only connect the inverter to the grid with the permission of the local utility grid company.

## 2 Product Overview

---

### 2.1 Product Introduction

The X3-NEO-LV series is an energy storage PV grid-connected inverter. It supports various intelligent solutions such as load management, wireless metering, dual battery terminals, micro-grids, etc. to achieve efficient and economical energy utilization. The X3-NEO-LV series inverter is compatible with both Lithium-ion batteries and lead-acid batteries.

### 2.2 Appearance

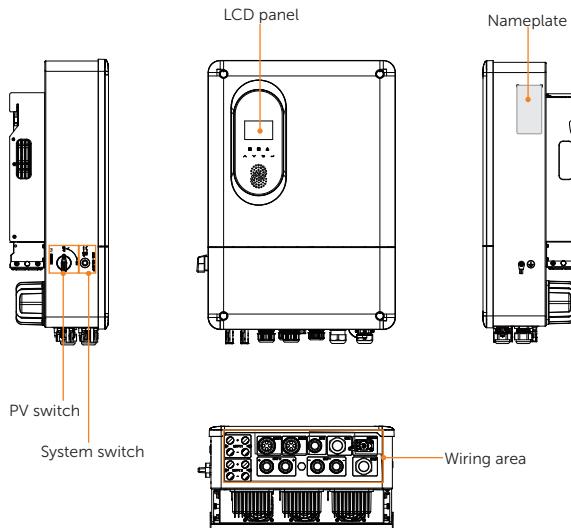


Figure 2-1 Appearance

Table 2-1 Description of appearance

Item	Description
Nameplate	Nameplate clearly identifies the device type, serial number, specific DC/AC parameters, certification, etc.
LCD panel	Including screen, indicators and keys. Screen displays the information; indicators indicate the status of inverter. Keys are used to perform the parameter setting.
PV switch	Disconnect the DC input when necessary.

Item	Description
System switch	Button pressed: <b>ON</b> , the system is allowed to operate; Button released: <b>OFF</b> , the system is not allowed to operate .
Wiring area	Including PV terminals, battery terminals, Grid terminals, GEN terminals, EPS terminals, communication terminals, and more.

## 2.3 Supported Power Grid

There are different ways of wiring for different grid systems. TT, TN-S, and TN-C-S are shown as below:

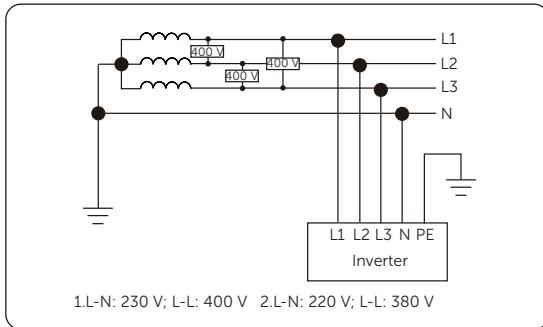


Figure 2-2 Supported power grid-TT

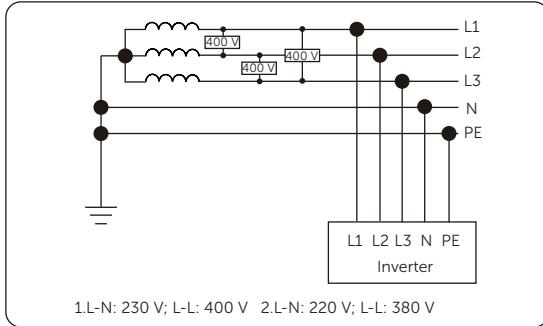


Figure 2-3 Supported power grid-TN-S

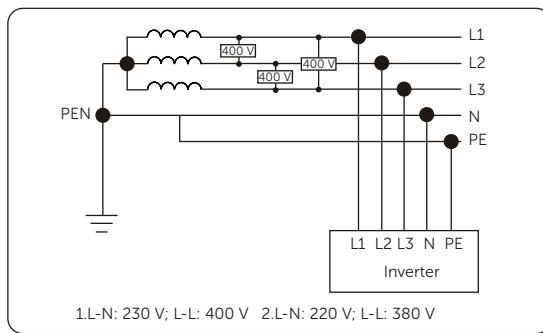


Figure 2-4 Supported power grid-TN-C-S

## 2.4 Symbols on the Label and Inverter

Table 2-2 Description of symbols

Symbol	Description
	CE mark. The inverter complies with the requirements of the applicable CE guidelines.
	TUV certified.
	Additional grounding point.
	Beware of hot surface. Do not touch a running inverter, as the inverter becomes hot during operation!
	Risk of electric shock. High voltage exists after the inverter is powered on!
	Risk of danger. Potential hazards exist after the inverter is powered on!
	Read the enclosed documentations.
	Do not dispose of the inverter together with household waste.
	Do not operate this inverter until it is isolated from battery, mains and on-site PV generation source.
 	Danger of high voltage. Do not touch live parts for 5 minutes after disconnection from the power sources.

## 2.5 Working Principle

### 2.5.1 Circuit Diagram

The inverter is equipped with multi-channel MPPT for DC input to ensure maximum power even under different photovoltaic input conditions. The inverter unit converts direct current into alternating current that meets the requirements of the power grid and feeds it into the power grid. The principle design of inverter is shown in the figure below:

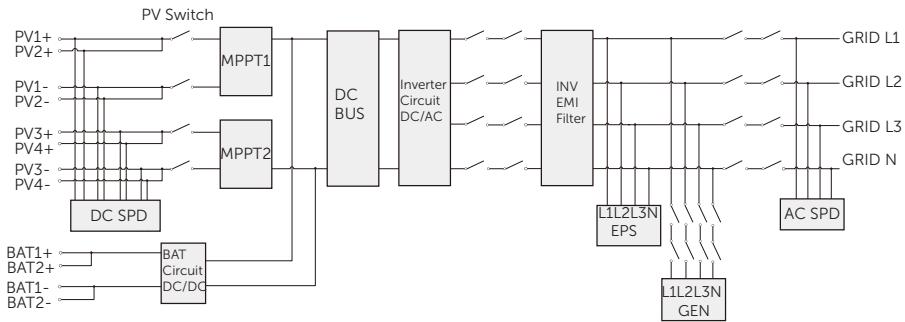


Figure 2-5 Circuit Diagram for X3-NEO-LV series inverter

### 2.5.2 Application Schemes

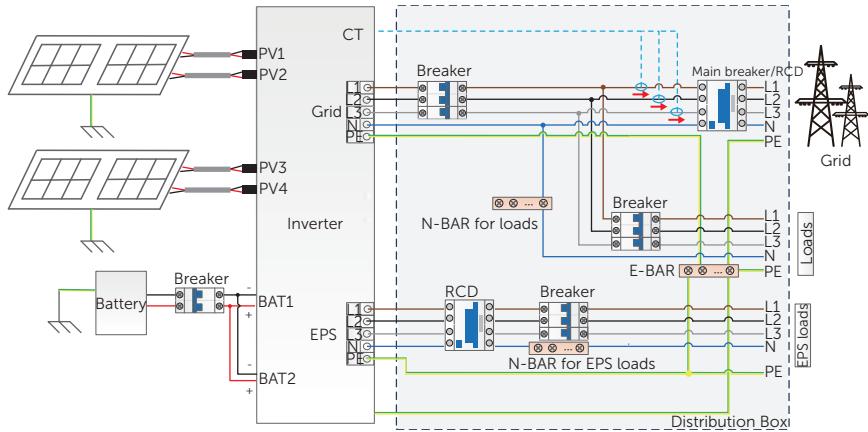


Figure 2-6 Partial home backup for most countries

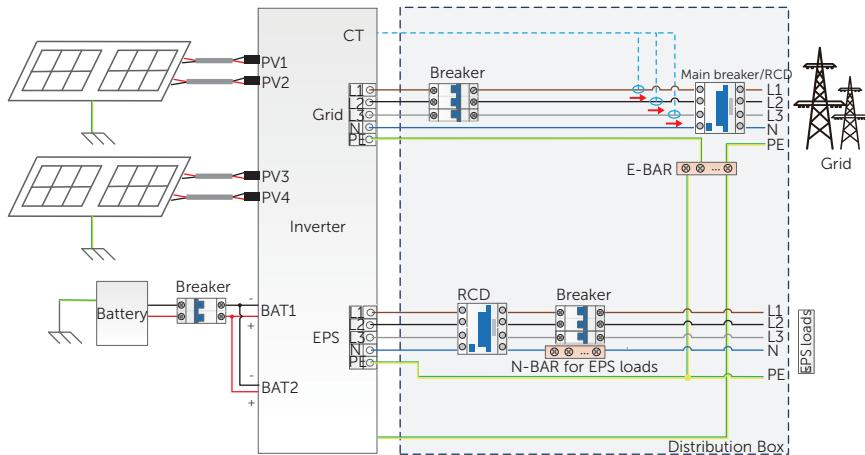


Figure 2-7 Whole home backup for most countries

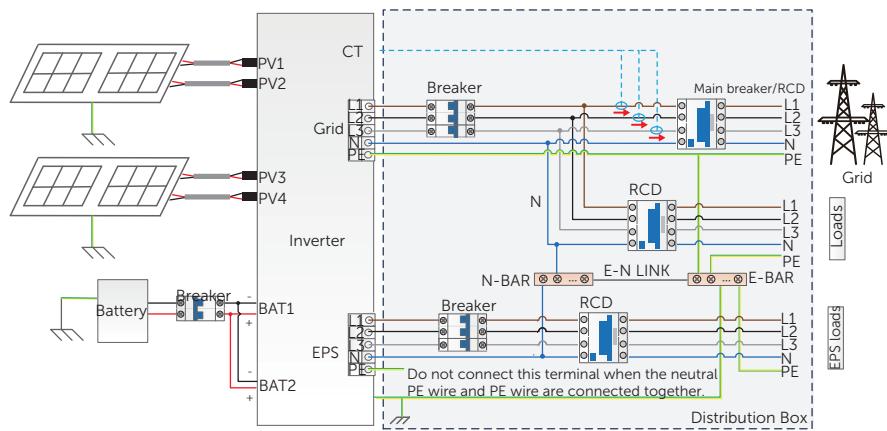


Figure 2-8 Neutral point connected to PE in distribution box

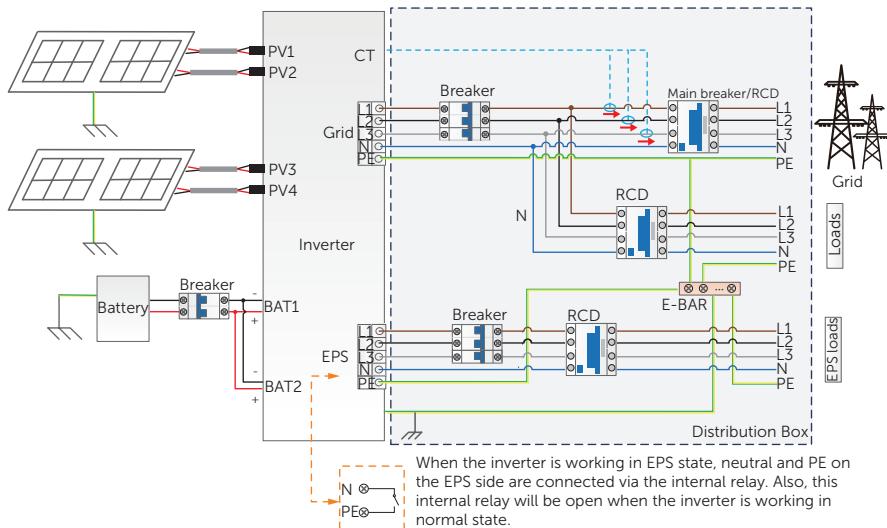


Figure 2-9 Neutral point separate from PE in distribution box

## 2.6 Working State

The series inverter supports Wait, Check, Normal, Fault, Update, EPS Check, EPS Wait, EPS, GEN Check, and GEN working modes.

Table 2-3 Description of working state

State	Description
Wait	<ul style="list-style-type: none"><li>The inverter is waiting for the conditions to be met in order to enter Checking state.</li></ul>
Check	<ul style="list-style-type: none"><li>The inverter is checking for conditions to enter Normal state.</li></ul>
Normal	<ul style="list-style-type: none"><li>The inverter is working normally.</li></ul>
Fault	<ul style="list-style-type: none"><li>The inverter detects error and prompts error code.</li></ul>
Update	<ul style="list-style-type: none"><li>The inverter is updating ARM, DSP or BMS, etc.</li></ul>
EPS Check	<ul style="list-style-type: none"><li>The inverter is checking for conditions to enter EPS state.</li></ul>
EPS wait	<ul style="list-style-type: none"><li>Without utility power, the inverter waits to enter the EPS state (Overload or low SOC will cause the inverter to enter the EPS wait).</li></ul>
EPS	<ul style="list-style-type: none"><li>The inverter is working in EPS state.</li></ul>
GEN Check	<ul style="list-style-type: none"><li>The inverter is checking for conditions to enter generator state.</li></ul>
GEN	<ul style="list-style-type: none"><li>The inverter is in the generator operating state.</li></ul>

## 2.7 Working Mode (For Pakistan)

There are different work modes of the inverter based on different needs.

Applicable areas	Work modes
Pakistan	SUB, SBU, MKS/EPS, Force Time Use, Manual
Countries other than Pakistan	Back Up, Self Use, Manual, Feed-in Priority, Peak Shaving

For how to set the working mode, please refer to the section "[11.3 Work Mode Setting](#)".

### 2.7.1 SUB Mode

The mode uses the energy storage system as a backup power source and is suitable for applications with frequent power outage or wish to feed excess electricity generated by solar power into the grid.

Figure 2-10 Description of SUB mode

Battery SOC	Battery Charge Source	Power Supply Situation
	PV Only	<p>PV → load → battery → grid</p> <ul style="list-style-type: none"> <li>PV prioritizes supplying power to the load. If the PV output exceeds the load demand, the surplus energy is first used to charge the battery. Once the battery is fully charged, the excess energy is fed into the grid according to the <b>Grid Control</b> settings. For specific settings, please refer to "<a href="#">11.4 Grid Settings</a>".</li> <li>In off-grid situation, both PV and the battery supply power to the load.</li> </ul>
The battery is not fully charged	PV Then Utility	<p>PV is available: (PV → load → battery → grid)</p> <ul style="list-style-type: none"> <li>Consistent with the PV Only charging situation.</li> </ul> <p>PV is not available: (grid → load+battery)</p> <ul style="list-style-type: none"> <li>The grid supplies power to the load and draws electricity from the grid to charge the battery based on the <b>Max Utility Charge Current</b>.</li> </ul>
	PV And Utility	<p>PV → load → battery → grid</p> <ul style="list-style-type: none"> <li>PV is prioritized for the load, with excess used to charge the battery. Simultaneously, power is drawn from the grid to charge the battery based on the <b>Max Utility Charge Current</b>. After the battery is fully charged, surplus energy is either fed into the grid or curtailed according to <b>Grid Control</b> settings. For specific settings, please refer to "<a href="#">11.4 Grid Settings</a>".</li> </ul>

### 2.7.2 SBU Mode

This mode is suitable for applications where electricity prices are high and PV cannot be fed into the grid. PV is prioritized for loads, and excess power is stored in the battery for later use. This mode is ideal for customers with low daytime electricity consumption and higher night time electricity consumption.

Figure 2-11 Description of SBU mode

Battery SOC	Battery Charge Source	Power Supply Situation
BAT<Return to Utility Voltage/SOC	PV Only	<p>PV → battery, grid → load</p> <ul style="list-style-type: none"> <li>PV charges the battery, and the load is supplied by the grid.</li> </ul>
	PV Then Utility	<p>PV is available: (PV → battery → load)</p> <ul style="list-style-type: none"> <li>PV prioritizes supplying power to the battery. If the PV output exceeds the battery demand, the surplus energy is first used to charge the load.</li> </ul>
	PV And Utility	<p>PV is not available: (grid → load+battery)</p> <ul style="list-style-type: none"> <li>The grid supplies power to the load and charge the battery based on the <b>Max Utility Charge Current</b>.</li> </ul>
	Load First	<p>PV+grid → battery, grid → load</p> <ul style="list-style-type: none"> <li>All electricity generated by the PV is used to charge the battery, and concurrently, power is drawn from the grid to charge the battery based on the <b>Max Utility Charge Current</b>. For specific settings.</li> </ul>
BAT > Return to Battery Voltage/SOC	Battery Discharge	<p>PV → Load → Battery → Grid</p> <ul style="list-style-type: none"> <li>PV power prioritizes supplying the load. When the PV output exceeds the load demand, the excess energy is first used to charge the battery and is then supplied to the grid.</li> </ul>
		<p>PV+battery → load</p> <ul style="list-style-type: none"> <li>PV is priority to supply power to the load. If the PV is insufficient, the battery supplies power to the load until the battery voltage is less than the <b>Return to Utility Voltage/SOC</b>. The grid terminal relay is disconnected, the LCD screen displays normal, and the grid-connected flow line becomes dashed.</li> </ul>

### 2.7.3 MKS/EPS Mode

This mode is suitable for customers who have higher electricity consumption during the day and lower consumption at night.

When PV is available, this mode is basically the same as the SBU mode, the discharge capability of the battery is more extensive than SBU mode. At night when PV is unavailable, this mode is basically the same as the SUB mode, with the battery only charging and not discharging, which prevents the battery from being depleted.

Figure 2-12 Description of MKS mode

PV input	Battery SOC/voltage	Power Supply Situation
With PV input	SOC/voltage $\geq$ return to SBU	<ul style="list-style-type: none"> <li>When MKS mode is set, the inverter will run in SBU mode logic. The grid terminal relay is disconnected, the LCD screen displays normal, and the grid-connected flow line becomes dashed.</li> </ul>
	SOC/voltage $<$ return to SUB	<ul style="list-style-type: none"> <li>The inverter runs in SUB logic until SOC/voltage <math>&gt;</math> <b>Return to SBU</b> and the inverter changes to the logic of SBU mode. The grid terminal relay is disconnected, the LCD screen displays normal, and the grid-connected flow line becomes dashed.</li> <li>In <b>Load First</b> mode, PV power supplies the load first. Then, any remaining power is used to charge the battery.</li> </ul>
No PV input	-	<p>Grid <math>\rightarrow</math> Load+battery</p> <ul style="list-style-type: none"> <li>When you set the <b>Charge Source</b> to <b>PV Then Utility or PV And Utility</b>, the grid supplies power to the load and draws electricity from the grid to charge the battery based on the <b>Max Utility Charge Current</b>.</li> <li>When you set the <b>Charge Source</b> to <b>PV Only</b>, the grid can supply energy to the load but will not charge the battery.</li> </ul>

## 2.7.4 Force Time Use Mode

This mode is suitable for application with peak and valley price difference. When the price of electricity is high, the battery is discharged to the load, and when the price of electricity is low, the battery is charged from the solar or the grid to fill the battery.

Figure 2-13 Description of Force Time Use Mode

Time Period	Battery Charge Source	Power Supply Situation
Charge period	PV Only	<p>PV → battery, grid → load</p> <ul style="list-style-type: none"> <li>PV charges the battery, and the load is supplied by the grid.</li> </ul>
	PV Then Utility	<p>PV+grid → battery+load</p> <ul style="list-style-type: none"> <li>PV prioritizes charging the battery, if the PV is insufficient, electricity is drawn from the grid to charge the battery. The load is supplied by the grid.</li> </ul>
	PV And Utility	<p>PV+grid → battery+load</p> <ul style="list-style-type: none"> <li>All electricity generated by the PV is used to charge the battery, and concurrently, power is drawn from the grid to charge the battery based on the <b>Max Utility Charge Current</b>. For specific settings, please refer to "<a href="#">11.4 Grid Settings</a>".</li> </ul>
Load First		<p>PV → Load → Battery → Grid</p> <ul style="list-style-type: none"> <li>PV power prioritizes supplying the load. When the PV output exceeds the load demand, the excess energy is first used to charge the battery and is then supplied to the grid.</li> </ul>
Home load removed from utility time periods	Battery Discharge	<p>Grid+battery → load</p> <ul style="list-style-type: none"> <li>The battery discharges to supply the load until the battery voltage is less than the <b>Battery Stop Discharge Voltage</b>, after which the load will be supplied by the grid.</li> </ul>
Outside of peak-valley scheduled time periods		The battery charges according to the priority settings of the battery charging source mode.

## 2.7.5 Manual Mode

This mode allows the user to set the battery charging and discharging power.

- Battery ChrgDischrg Power** (Negative value means the battery is discharged, positive value means the battery is charged. )

## 2.8 Working Mode (For Countries other than Pakistan)

### 2.8.1 Self Use Mode (Priority: Loads > Battery > Grid)

The self use mode is suitable for areas with low feed-in subsidies and high electricity prices. The power of PV will supply the loads first, and the surplus power will charge the battery, then the remaining power will be fed into the power grid.

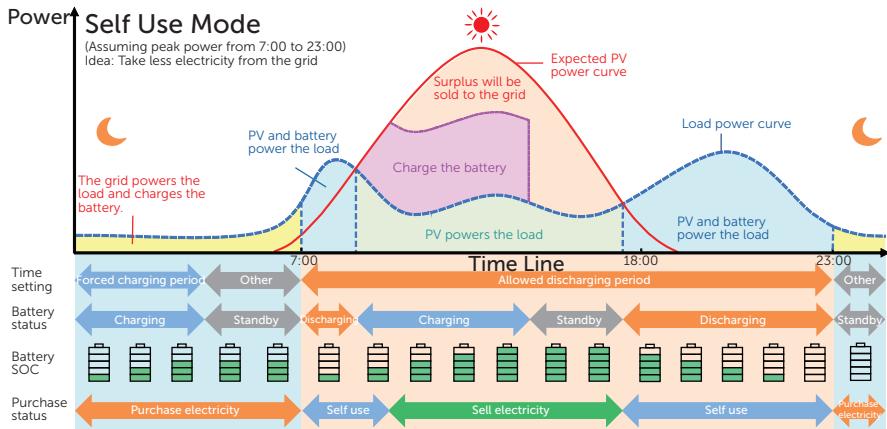


Figure 2-14 Self use mode

Table 2-4 Description of self use mode

Time period	Inverter working state
Charging period	<ul style="list-style-type: none"> <li>Charge the battery first until the battery SOC/Voltage reaches the specified <b>Charge battery to</b> value. You can configure the inverter to either draw power from the grid or not.</li> </ul>
Discharging period	<p>PV is sufficient (PV → load → battery → grid)</p> <ul style="list-style-type: none"> <li>The power generated from PV prioritizes supplying the load. Any excess power is then directed towards charging the battery, and if there is still surplus electricity, it can be fed into the power grid. In the event that the local utility restricts the sale of electricity to the power grid, the <b>Grid Control</b> value can be set on the inverter. Please refer to "<a href="#">11.4 Grid Settings</a>".</li> </ul>
	<p>PV is insufficient (PV+battery → load)</p> <ul style="list-style-type: none"> <li>The battery discharges power to the load. Once its capacity reaches <b>Min SOC/Voltage</b>, it automatically ceases discharging.</li> </ul>

**Note:**

**Charge battery to:** The target battery SOC/Voltage charged from power grid. 10%/47V by default, the settable range is 10%–100%/42 V–60 V.

**Min SOC/Voltage:** Minimum SOC/Voltage of the battery under grid connection. 10%/42V by default, the settable range is 10%–100%/40 V–47 V.

**Charge from grid:** Setting whether the inverter draws power from the grid or not.

### 2.8.2 Feed-in Priority (Priority: Loads > Grid)

The feed-in priority mode is suitable for areas with high feed-in subsidies. The power generated from PV is directed towards supplying the loads. Any excess power beyond the load requirements will be fed into the power grid.

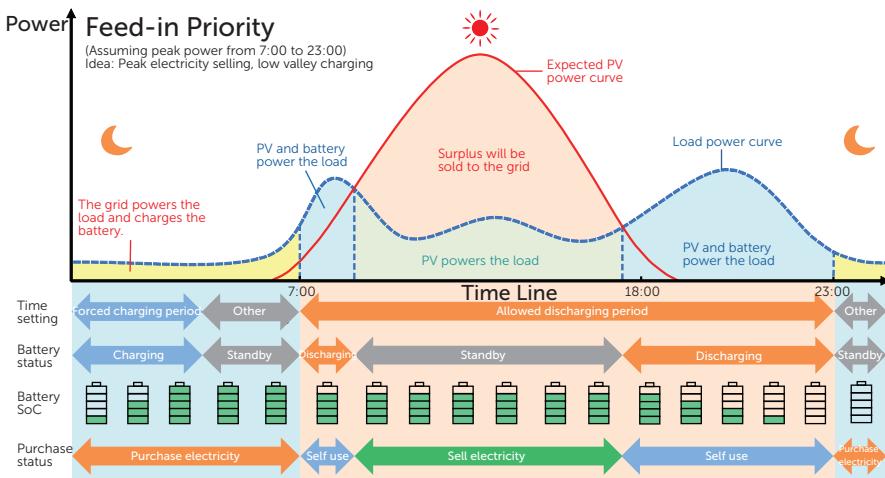


Figure 2-15 Feed-in priority

Table 2-5 Description of feed-in priority

Time period	Inverter working state
Charging period	<ul style="list-style-type: none"> <li>Charge the battery first until the battery SoC reaches the specified <b>Charge battery to</b> value. You can configure the inverter to either draw power from the grid or not.</li> </ul>

Time period	Inverter working state
	<p>PV is sufficient (PV → load → grid)</p> <ul style="list-style-type: none"><li>• The power generated from PV is directed towards supplying the loads. Any excess power beyond the load requirements will be fed into the power grid.</li></ul>
Discharging period	<p>PV is insufficient (PV+battery → load)</p> <ul style="list-style-type: none"><li>• The PV and battery supply power to the load at the same time. Once the battery capacity reaches <b>Min SOC</b>, it automatically ceases discharging.</li></ul>

**Note:**

**Charge battery to:** The target battery SoC charged from power grid. 50% by default, the settable range is 10%–100%.

**Min SOC:** Minimum SoC of the battery under grid connection. 10% by default, the settable range is 10%–100%.

**NOTICE!**

- You can set two configurable working periods: charging period and discharging period.
- In feed-in priority mode, considering whether the battery can be charged during the daytime. If not, it is recommended to set forced charging period during off-peak hours.

### 2.8.3 Backup Mode (Priority: Loads > Battery > Grid)

The backup mode is suitable for areas with frequent power outages.

This mode will maintain the battery capacity at relatively high level to ensure that the emergency loads can be used when the grid is off. Same working logic with self use mode.

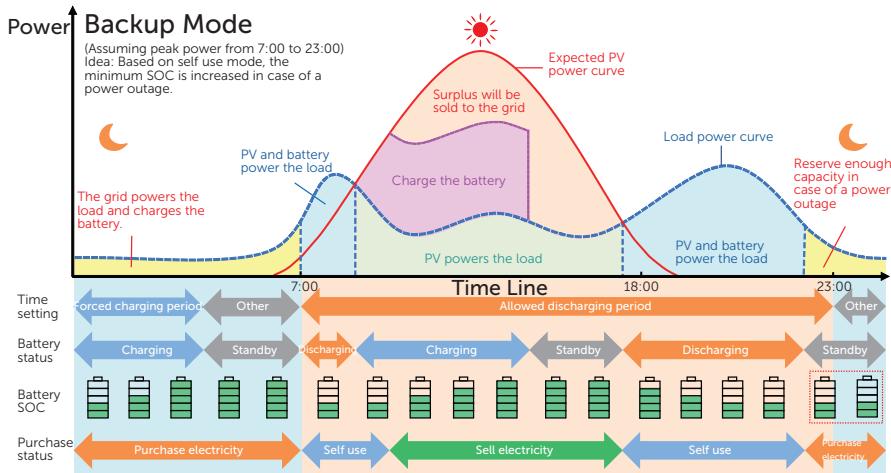


Figure 2-16 Backup mode

Table 2-6 Description of backup mode

Time period	Inverter working state
Charging period	The working logic remains the same as for self use mode.
Discharging period	

#### Note:

**Charge battery to:** The target battery SOC/Voltage charged from power grid. 10%/47 V by default, the settable range is 10%–100%/42 V–60 V.

**Min SOC/Voltage:** Minimum SOC/Voltage of the battery under grid connection. 10%/42 V by default, the settable range is 10%–100%/40 V–47 V.

#### NOTICE!

- You can set two configurable working periods: Charging period and discharging period. Please refer to "[2.7.8 Period Setting](#)" for details.
- If there is a foreseeable power outage, switch from other working modes to the backup mode in advance.

## 2.8.4 Peak Shaving Mode

Peak shaving mode is set for levelling out peaks in electricity use. The system is intelligently controlled to ensure charging takes place during off-peak hours and discharging occurs during peak hours.

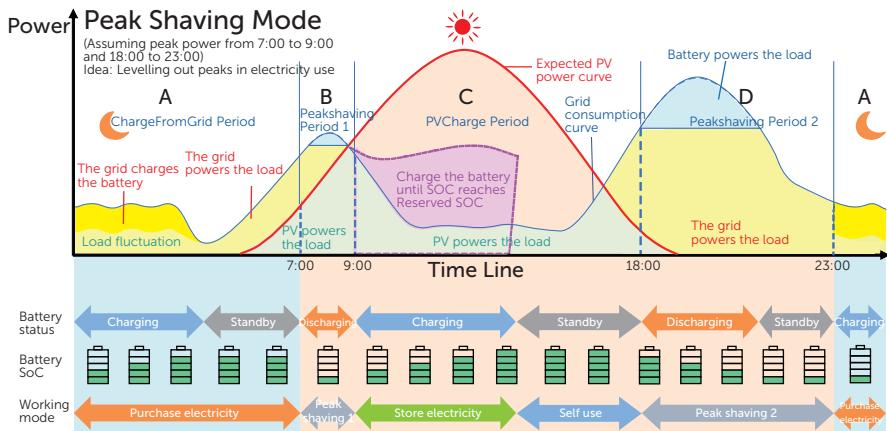


Figure 2-17 Peak shaving mode

Table 2-7 Description of peak shaving mode

Time period	Inverter working state
Period A	<ul style="list-style-type: none"> <li>The grid can charge the battery to <b>MaxSOC</b> within the set <b>ChargePowerLimits</b>. In this period, the battery will not discharge power.</li> </ul>
Period B & D	<p>Grid consumption power &lt; <b>PeakLimits</b> (PV+grid → load)</p> <ul style="list-style-type: none"> <li>The PV and grid will power the load. The battery will not charge or discharge power.</li> </ul> <p>Grid consumption power &gt; <b>PeakLimits</b> (PV + battery+grid → load)</p> <ul style="list-style-type: none"> <li>The battery will discharge power for loads and thus reduce the amount of power purchased from the power grid.</li> </ul>

---

Period C	<p>(PV → battery → load → grid)</p> <ul style="list-style-type: none"> <li>Only when you set the <b>Charge Source</b> to <b>PV Then Utility</b> or <b>PV And Utility</b>, the battery does not discharge power. The PV charges the battery up to the <b>Reserved SOC</b> before supplying power to the loads. Any excess power beyond the load requirements is fed into the power grid.</li> </ul>
----------	--

---

**Note:**

**MaxSOC:** The maximum battery SOC charged from power grid. 50% by default, the settable range is 10%–100%.

**ChargePowerLimits:** The charging power from power grid. 1000 W by default, the settable range is 0–60000 W.

**PeakLimits:** The load consumption power from power grid. 0 W by default, the settable range: 0–60000 W.

**Reserved SOC:** The battery SOC reserved for later peak shaving period. 50% by default, the settable range is 10–100%.

## 2.8.5 Manual Mode

The working logic remains the same as for "[2.7.5 Manual Mode](#)".

## 2.8.6 Period Setting

You can set two configurable working periods: Charging period and discharging period. The interval not in the charging & discharging period belongs to other time periods.

- Charge T1/T2** (Default period: 00:00–00:00, closed by default)

In the forced charging period, the inverter will charge the battery first until the battery SOC reaches the specified **Charge battery to** value set in each working mode. You have the option to configure the inverter to either draw power from the grid or not.

- Discharge T1/T2** (Default period: 00:00–23:59)

In the allowed discharging period, the inverter will allow the battery to discharge and charge power in accordance with the working mode and load conditions.

- Period not set as forced charging or allowed discharging period

In this period, the inverter will allow the battery to charge but can not discharge power.

### NOTICE!

- The charging and discharging period is applicable for self-use mode and backup mode. The priority of forced charging period is higher than all working modes.

## 2.9 Grid Control Function

Solar export control is a limit on the amount of energy your solar system that can export into the grid. You have a set limit on how much energy you can export to the grid.

### How Grid Control works

- CT/Meter required
- Correct setting of the limit value of **Grid Control** through inverter. (For parallel system, set on the master inverter)
- **Grid Control** value can be set from 0W to more than the rated output power.

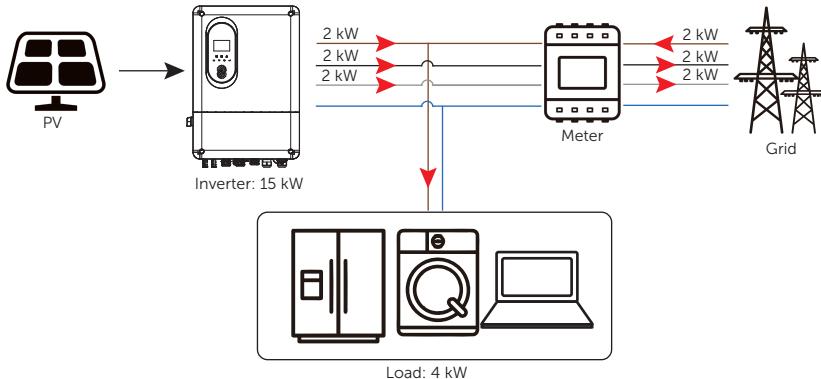


Figure 2-18 Zero grid control with **Phase Unbalance** disabled

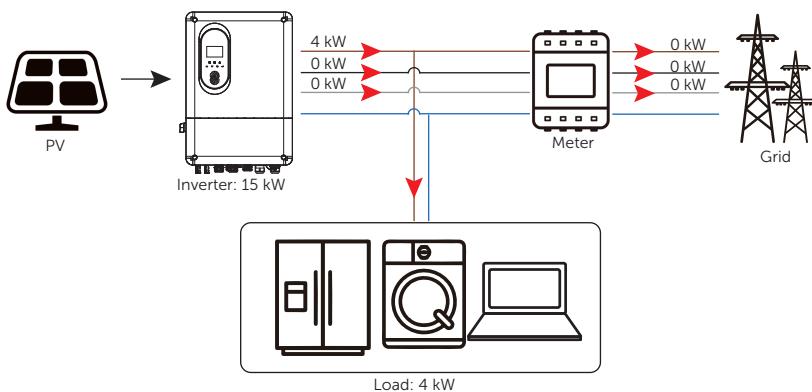


Figure 2-19 Zero grid control with **Phase Unbalance** enabled

# 3 System Overview

## System Overview

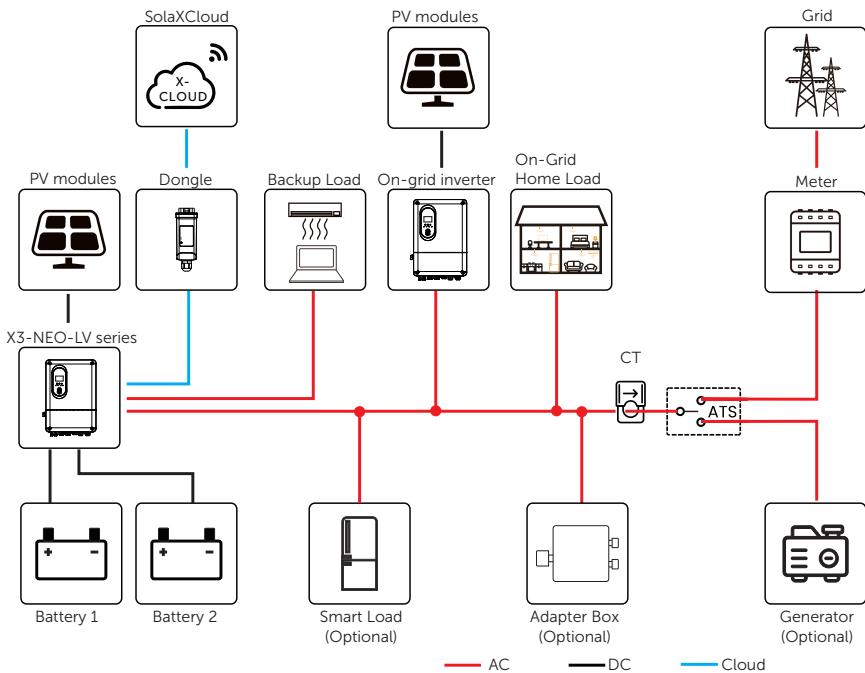


Figure 3-1 System diagram

Table 3-1 System item description

Item	Description
X3-NEO-LV series (the device covered in this manual)	The X3-NEO-LV series is an energy storage inverter that supports grid connection of a photovoltaic system.
PV modules	PV modules work in MPPT mode.
Battery	The series inverter can be connected with lithium-ion batteries or lead-acid batteries. Lithium-ion batteries communicate with the inverter through the BMS.
Meter/CT	The Meter/CT is used by the inverter for import or export or consumption readings, and manages the battery charge and discharge accordingly for smart energy management applications.
Additional on-grid inverter (Optional)	The series inverter supports micro-grid function that makes hybrid inverter simulate the grid to active on-grid inverter during off-grid period by connecting on-grid inverter to hybrid inverter's EPS terminal. On-grid inverter and generator are not connected at the same time.
Adapter Box G2 (Optional)	With SolaX Adapter Box G2, you can connect the smart heat pump to the energy storage systems, realizing the control of the heat pump through inverter.
Generator (Optional)	SolaX PV-Genset solution ensures optimum interaction between the photovoltaic and diesel generator, which saves fuel, lowers energy costs and ensures a stable and reliable power supply.
Smart Load (Optional)	This mode utilizes the GEN input connector as an output which only receives power when the battery SOC is above a user programmable threshold.
Grid	400 V/230 V and 380 V/220 V grid are supported.
SolaXCloud	SolaXCloud is an intelligent, multifunctional monitoring platform that can be accessed either remotely or through a hard wired connection. With the SolaXCloud, the operators and installers can always view key and up to date data.

# 4 Transportation and Storage

---

If the inverter is not put into use immediately, the transportation and storage requirements need to be met:

## Transportation

- The inverter must be transported in its original packaging. SolaX will not be held responsible for any damage to the inverter caused by improper transportation or by transportation after it has been installed.
- Observe the caution signs on the packaging of inverter before transportation.
- Pay attention to the weight of the inverter. Carry the inverters by the required number of personnel as specified by local regulations.
- Wear protective gloves when carrying the equipment by hand to prevent injuries.
- When lifting up the inverter, hold the handle position and the bottom position of the carton. Keep the inverter horizontal in case of falling down.

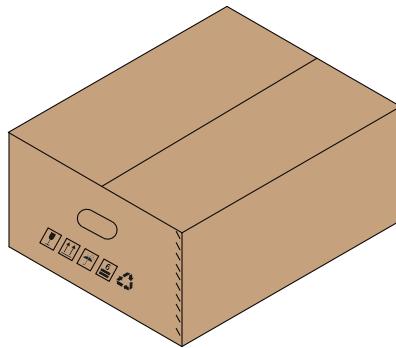


Figure 4-1 Caution signs on the packaging

## Storage

- The inverter must be stored indoors.
- Do not remove the original packaging material and check the outer packaging material regularly.
- The storage temperature should be between -40°C and +70°C. The relative humidity should be between 5%RH and 65%RH.
- Stack the inverter in accordance with the caution signs on the inverter carton to prevent their falling down and device damage. Do not place it upside down.





# 5 Preparation before Installation

## 5.1 Selection of Installation Location

The installation location selected for the inverter is quite critical in the aspect of the guarantee of machine safety, service life and performance. It has the IP65 ingress protection, which allows it to be installed outdoor. The installation position shall be convenient for wiring connection, operation and maintenance.

### 5.1.1 Environment Requirement

- The ambient temperature: -25 to +60°C.
- The relative humidity shall be between 0-100%RH.
- Do not install the inverter in the areas where the altitude exceeds 3000 m.
- Install the inverter in a well-ventilated environment for heat dissipation. It is recommended to install an awning over the inverter if it is installed on a support outdoor.
- Do not install the inverter in areas with flammable, explosive and corrosive materials or near antennas.
- Avoid direct sunlight, rain exposure and snow accumulation.

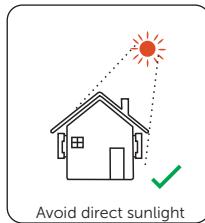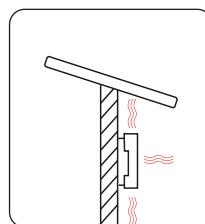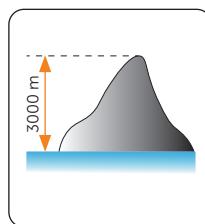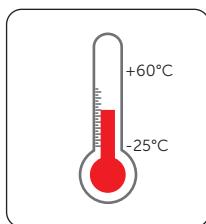

**NOTICE!**

- For outdoor installation, precautions against direct sunlight, rain exposure and snow accumulation are recommended.
- Exposure to direct sunlight raises the temperature inside the device. This temperature rise poses no safety risks, but may impact the device performance.
- Install the inverter at least 500 meters away from the coast and avoid sea breeze directly hit.

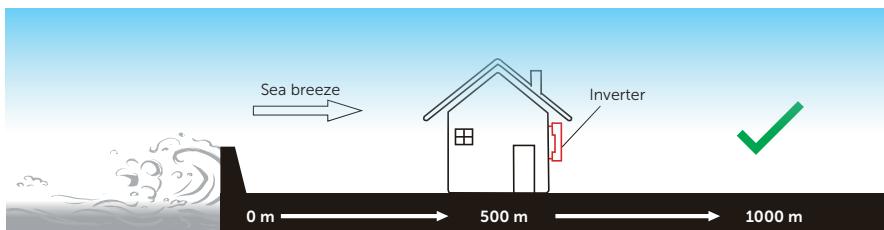


Figure 5-1 Recommended installation position

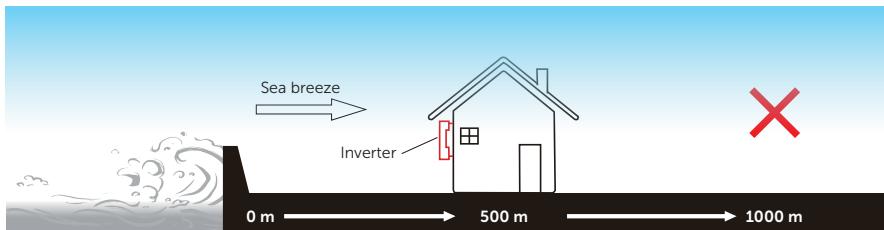


Figure 5-2 Incorrect installation position

**NOTICE!**

- For the installation of the whole system, please refer to the specific environment requirement of each unit.

### 5.1.2 Installation Carrier Requirement

The installation carrier must be made of a non-flammable material, such as solid brick, concrete, etc. and be capable of supporting the weight of the inverter and suitable of the dimensions of the inverter. If the wall strength is not enough (such as wooden wall, the wall covered by a thick layer of decoration), it must be strengthened additionally.

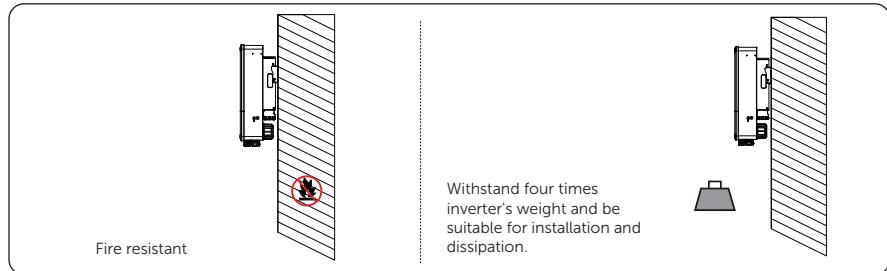


Figure 5-3 Installation carrier requirement

#### NOTICE!

- Please take the weight of battery into account when wall-mounting the whole system.

### 5.1.3 Clearance Requirement

When planning installation space, please reserve space in the bottom of the inverter and consider the bend radius of the cables at the same time.

To guarantee proper heat dissipation and ease of disassembly, the minimum space around the inverter must meet the standards indicated below.

For installations with multiple inverters, make sure to leave a minimum space of 600 mm between each inverter laterally and 1000 mm vertically. In areas with high ambient temperatures, increase the clearances between the inverters and provide adequate fresh air ventilation if feasible.



Figure 5-4 Clearance requirement for single inverter

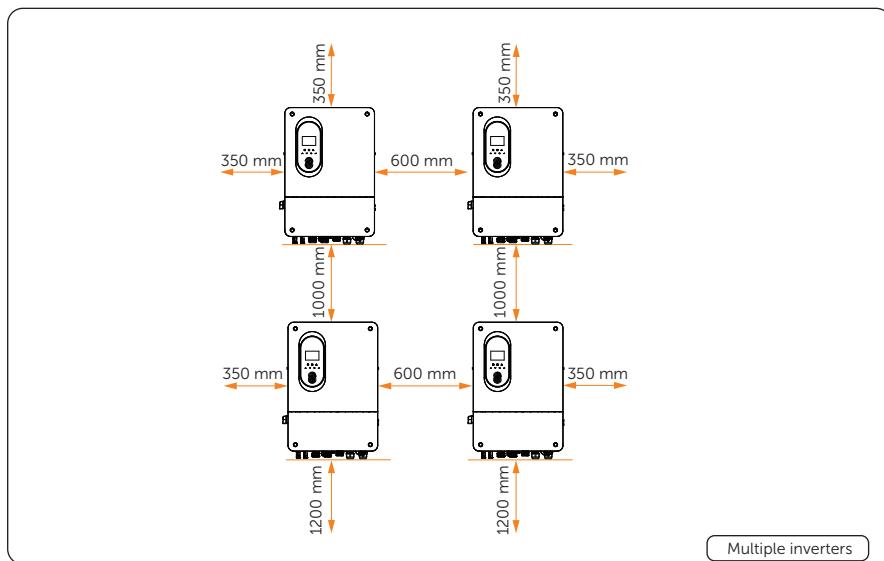


Figure 5-5 Clearance requirement for multiple inverters

## 5.2 Tools Requirement

Installation tools include but are not limited to the following recommended ones. If necessary, use other auxiliary tools on site. Please note that the tools used must comply with local regulations.



### 5.3 Additionally Required Materials

Table 5-1 Additionally required wires

No.	Required Material	Type	Conductor Cross-section
1	PV wire	 Dedicated PV wire with a voltage rating of 1000 V, a temperature resistance of 105°C, a fire resistance grade of VW-1	4–6 mm <sup>2</sup>
2	Communication wire	 Network cable CAT5E	/
3	Grid, GEN and EPS wire	 Five-core copper cable	6 mm <sup>2</sup> for EPS terminal; 8–10 mm <sup>2</sup> for Grid & GEN terminal
4	Battery power wire (2 sets, length<3 m)	 /	40–55 mm <sup>2</sup>
5	Additional PE wire	 Conventional yellow and green wire	10–16 mm <sup>2</sup>

Table 5-2 Breaker recommended for grid connection (with EPS)

Model	5 kW	8 kW	10 kW	12 kW	15 kW	20 kW
On-grid Breaker	25 A	32 A	50 A	50 A	50 A	63 A

Table 5-3 Breaker recommended for grid connection (without EPS)

Model	5 kW	8 kW	10 kW	12 kW	15 kW	20 kW
On-grid Breaker	25 A	32 A	50 A	50 A	50 A	63 A

Table 5-4 Breaker recommended for off-grid connection (only EPS)

Model	5 kW	8 kW	10 kW	12 kW	15 kW	20 kW
EPS Breaker	25 A	32 A	50 A	50 A	50 A	63 A

Table 5-5 Breaker recommended for battery connection

## Preparation before Installation

---

Model	5 kW	8 kW	10 kW	12 kW	15 kW	20 kW
DC Breaker	200 A	320 A	320 A	400 A	400 A	400 A

Table 5-6 Anti-theft lock recommended

Required Material	Type	Remark
(Optional) Anti-theft lock	< Ø8 mm	Installed on the left side of the inverter for anti-theft purposes.

# 6 Unpacking and Inspection

---

## 6.1 Unpacking

- The inverter undergoes 100% testing and inspection before delivery. However, damages may still occur during transportation. Before unpacking, please carefully check the external packaging for any signs of damage, such as punctures or cracks.
- Unpacking the inverter according to the following figure.

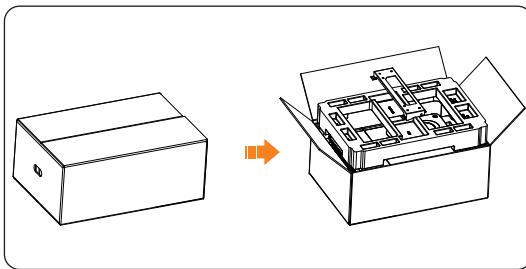


Figure 6-1 Unpacking the inverter

- Properly handle all the packaging materials in case they may be reused for storage and transportation of the inverter in the future.
- Upon opening the package, check whether the inverter is intact and whether all accessories are included. If any damage is found or any parts are missing, contact your dealer immediately.

## 6.2 Scope of Delivery

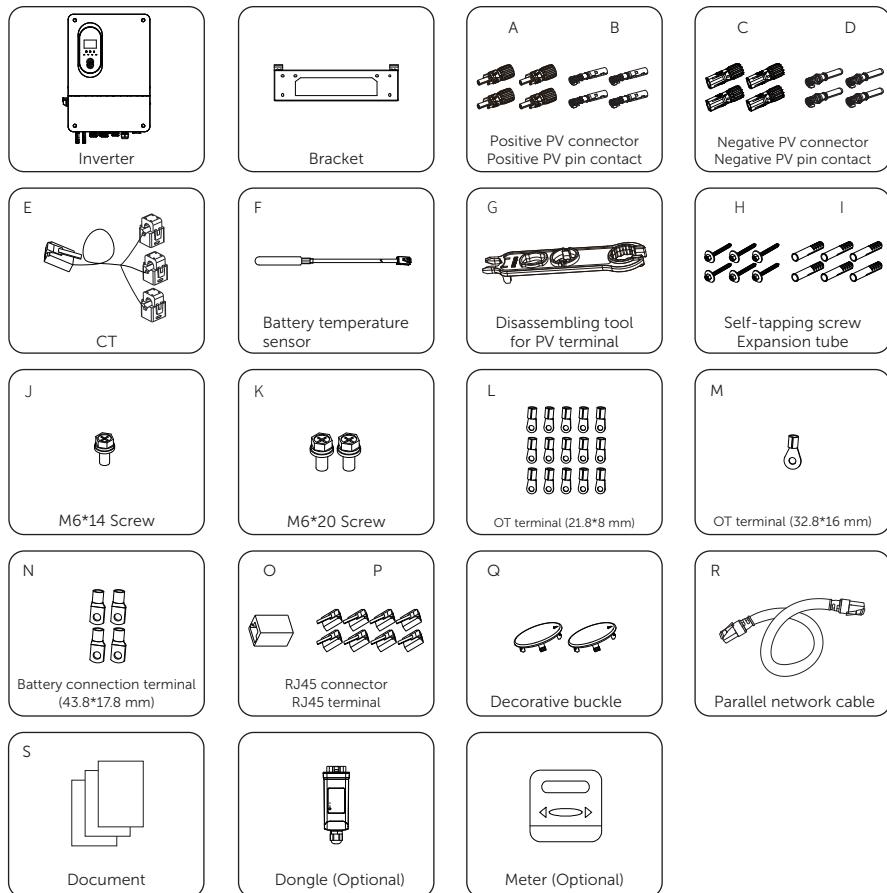


Table 6-1 Packing list

Item	Description	Quantity	Remark
/	Inverter	1 pc	
/	Bracket	1 pc	

Item	Description	Quantity	Remark
A	Positive PV connector	4 pcs	
B	Positive PV pin contact	4 pcs	
C	Negative PV connector	4 pcs	4 pcs for 12kW, 15kW and 20 kW inverter; 3 pcs for 10 kW inverter; 2 pcs for 5kW and 8kW inverter.
D	Negative PV pin contact	4 pcs	
E	CT	1 pc	
F	Battery temperature sensor	1 pc	Temperature sensor for lead-acid batteries
G	Disassembling tool for PV terminal	1 pc	
H	Self-tapping screw	6 pcs	
I	Expansion tube	6 pcs	Bracket mounting
J	M6*14 Screw	1 pc	
K	M6*20 Screw	2 pcs	
L	OT terminal (21.8*8 mm)	15 pcs	5 pcs for Grid terminal 5 pcs for GEN terminal 5 pcs for EPS terminal
M	OT terminal (32.8*16 mm)	1 pc	For grounding the inverter
N	Battery connection terminal (43.8*17.8 mm)	4 pcs	
O	RJ45 connector	1 pc	
P	RJ45 terminal	8 pcs	
Q	Decorative buckle	2 pcs	For the upper cover of inverter
R	Parallel Network cable	1 pc	For parallel connection
S	Document	/	
/	Dongle (Optional)	1 pc	
/	Meter (Optional)	1 pc	

### NOTICE!

- Refer to the actual delivery for the optional accessories.
- The figures of packing list takes 15 kW inverter as an example.

## 7 Mechanical Installation

### ⚠ WARNING!

- Only qualified personnel are allowed to perform the mechanical installation in accordance with local laws and regulations.
- Check the existing power cables or other piping in the wall to prevent electric shock or other damage.
- Use insulated tools and wear personal protective equipment throughout the installation and maintenance process.

### ⚠ CAUTION!

- During installation, always be cautious about the weight of the inverter. Improper lifting or dropping of the inverter may result in personal injury.

### NOTICE!

- Install the inverter at a maximum back tilt of 5 degrees and avoid it being forward tilted, side tilted, or upside down.

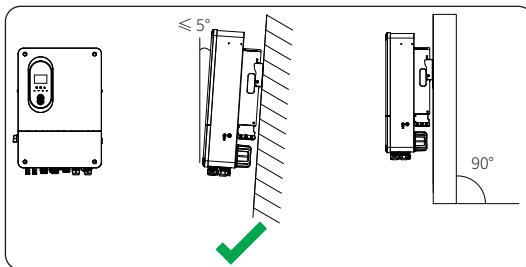


Figure 7-1 Correct installation

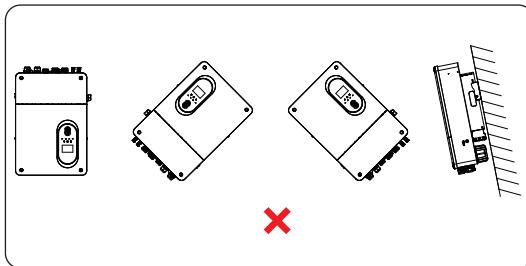


Figure 7-2 Incorrect installation

## 7.1 Dimensions for Mounting

Before installation, check the dimensions of the wall mounting bracket and ensure that enough space is reserved for the installation and heat dissipation of the entire system.

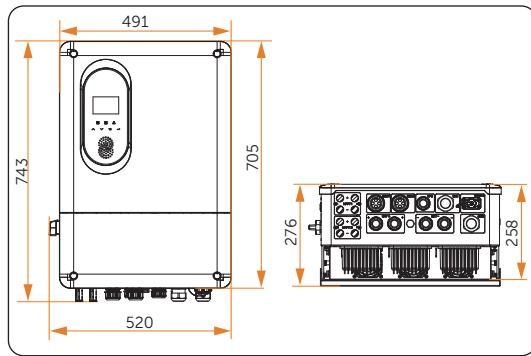


Figure 7-3 Dimensions 1 (Unit: mm)

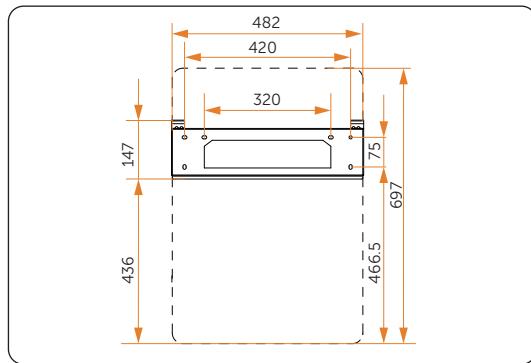


Figure 7-4 Dimensions 2 (Unit: mm)

## 7.2 Installation Procedures

**Step 1:** Horizontally align the wall mounting bracket with the wall, adjust the position of the bracket with a spirit level until the bubble stays in the middle, and then mark holes. Please note that take the height of the battery into account when determining the position of the wall mounting bracket.

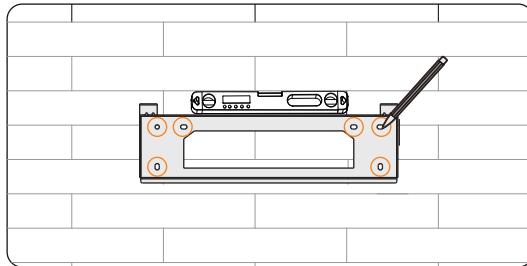


Figure 7-5 Marking the holes

**Step 2:** Set the wall mounting bracket aside and drill holes with Ø10 drill bit. The depth of the holes should exceed 55 mm.

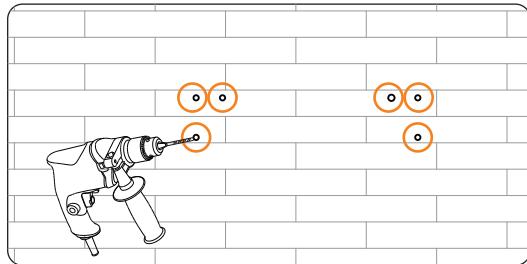


Figure 7-6 Drilling holes

**Step 3:** Knock the expansion tubes (part I) into the holes.

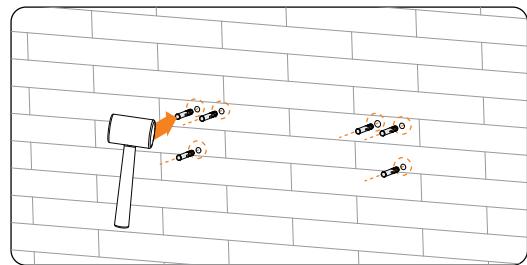


Figure 7-7 Knock the expansion tubes

**Step 4:** Use expansion screws (part H) to attach the wall mounting bracket on the wall again and secure them to the wall by torque wrench.

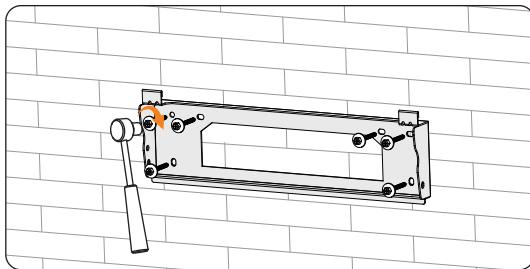


Figure 7-8 Securing the wall mounting bracket

**Step 5:** Open the anti-static bag, take out the inverter. Lift up the inverter collaboratively by the required number of personnel in accordance with the local regulation and hang it onto the wall mounting bracket. Make sure that the inverter is mounted on the bracket as shown in the diagram.

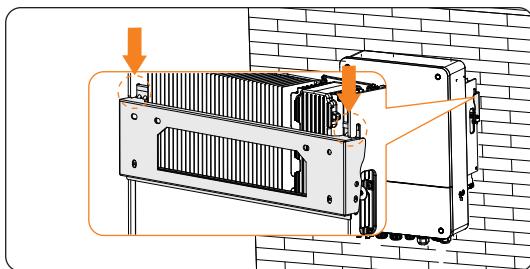


Figure 7-9 Hanging the inverter

**Step 6:** Use M6\*20 screws (part K) to secure the inverter on both sides.

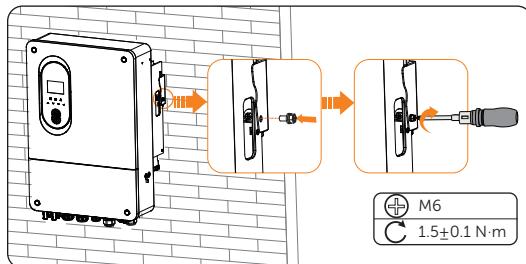


Figure 7-10 Securing the inverter (Right side)

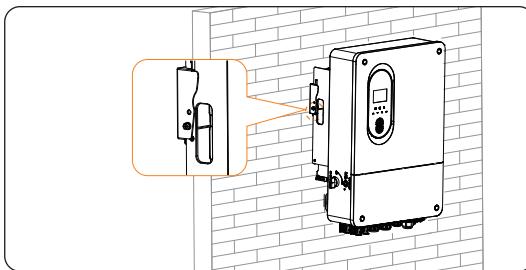


Figure 7-11 Securing the inverter (Left side)

**Step 7:** (Optional) For safety reason, install an anti-theft lock. The anti-theft lock is not in the scope of delivery. If necessary, prepare a lock with a diameter < Ø8 mm by yourself, and keep the key to the lock in a safe place.

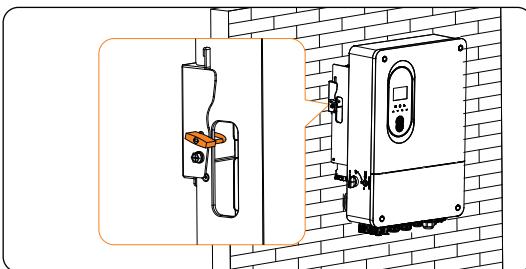


Figure 7-12 Locking the inverter

# 8 Electrical Connection

## DANGER!

- Before electrical connection, make sure the PV switch, System Switch and AC breaker are disconnected. Otherwise, the high voltage may cause electric shock, resulting in severe personal injuries or even death.

## WARNING!

- Only qualified personnel are allowed to perform the electrical connection following local laws and regulations.
- Strictly follow the instructions of this manual or other related documentation for electrical connection. Inverter damages caused by incorrect wiring are not covered by the warranty.
- Use insulated tools and wear personal protective equipment throughout the electrical connection process.

## 8.1 Overview of Electrical Connection

### 8.1.1 Terminals of Inverter

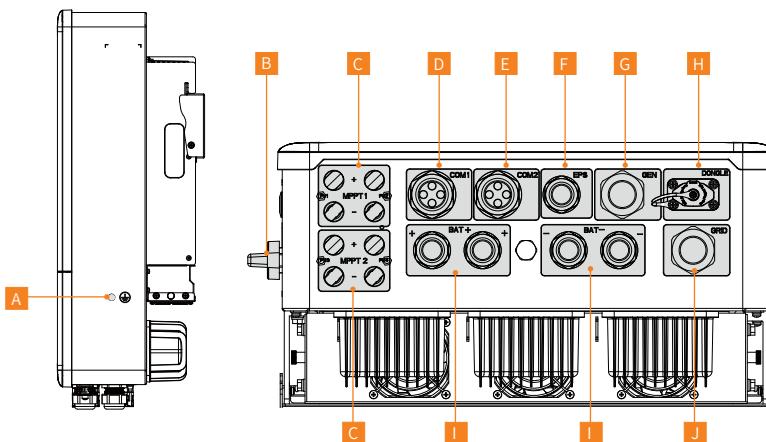


Figure 8-1 Terminals of inverter

Table 8-1 Description of terminals

Item	Name	Description	Decisive voltage class
A		Additional grounding point	-
B	PV switch	Disconnect the PV input when necessary	-
C	PV1, PV2, PV3, PV4	PV input terminal connecting to PV module. PV1 and PV3 terminals for 5kW and 8kW inverter; PV1, PV2 and PV3 terminals for 10 kW inverter; PV1, PV2, PV3 and PV4 for 12kW, 15kW and 20 kW inverter.	DVC-C
D	COM 1	COM 1 communication terminal	DVC-A
E	COM 2	COM 2 communication terminal	DVC-A
F	EPS	AC terminal connecting to EPS load	DVC-C
G	GEN	AC terminal connecting to generator	DVC-C
H	DONGLE	Firmware upgrading and dongle connection	DVC-A
I	BAT+, BAT-	Battery terminal connecting battery power cable	DVC-C
J	GRID	AC terminal connecting to power grid	DVC-C

### 8.1.2 Cable Connections of Inverter

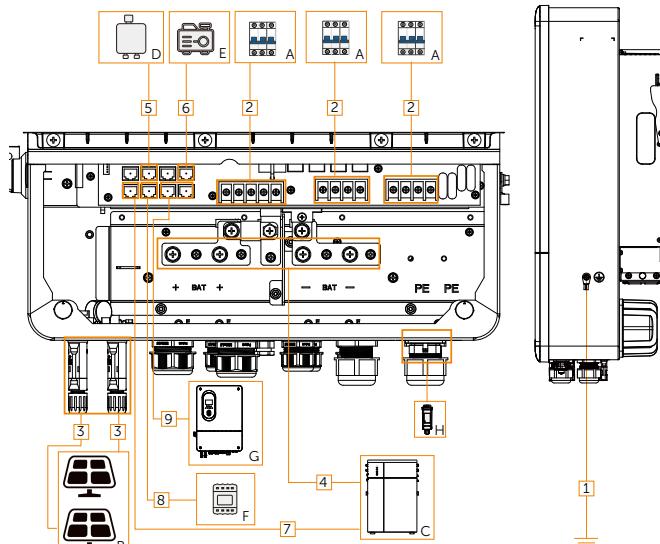


Figure 8-2 Cable connections of inverter

Table 8-2 Descriptions of connected part

Item	Part	Description	Source
A	AC switch	Select an appropriate AC switch according to the local regulations to ensure the inverter can be securely disconnected from the grid when an emergency occurs. Refer to <a href="#">"5.3 Additionally Required Materials"</a> for the recommended specifications of AC switch.	Prepared by user
B	PV module	A PV string is composed of the PV modules connected in series.	Prepared by user
C	Battery	TP-LD53, TP-LD150 and lead-acid battery can be connected with the series inverter. For lithium-ion batteries from the same brand, model, and version should be connected. For lead-acid batteries with the same voltage, current, and amp-hour (AH) capacity should be connected.	Prepared by user
D	(Optional) SolaX communication device	SolaX Adapter Box G2, DataHub are supported. Select the device as needed.	Purchased from SolaX
E	(Optional) Generator	For generator, select a generator equipped with an Automatic Transfer Switch (ATS), and the rated output power of the generator should be greater than the sum of the load power and the battery charging power.	Purchased from SolaX
F	Meter	Supported SolaX authorized DTSU666-CT or CT.	Purchased from SolaX
G	(Optional) X3-NEO-LV series inverter	Select a same model of inverter	Purchased from SolaX
H	(Optional) Monitoring dongle	Only SolaX monitoring dongle supported.	Purchased from SolaX

Table 8-3 Descriptions of cables

Item	Cable	Type and specifications	Source
1	PE cable		Prepared by user
2	AC output cable	Refer to <a href="#">"5.3 Additionally Required Materials"</a> .	Prepared by user
3	PV DC input power cable		Prepared by user

Item	Cable	Type and specifications	Source
4	Battery power cable for lithium battery	/	In the battery accessory package.
	Battery power cable for lead-acid battery	Refer to "5.3 Additionally Required Materials".	Prepared by user
5	Communication cable	Refer to "5.3 Additionally Required Materials".	Prepared by user
6	Communication cable	Refer to "5.3 Additionally Required Materials".	Prepared by user
7	Battery communication cable (lithium battery)	/	In the battery accessory package.
	Battery temperature sensor (lead-acid battery)	/	In the inverter accessory package.
8	Communication cable	Refer to "5.3 Additionally Required Materials".	Prepared by user
9	Communication cable	Refer to "5.3 Additionally Required Materials".	Prepared by user

## 8.2 PE Connection

The inverter must be reliably grounded. The PE connection point has been marked with



It is recommended to connect the inverter to a nearby grounding point.

### PE connection procedures

**Step 1:** Strip the insulation of the PE cable to an appropriate length.

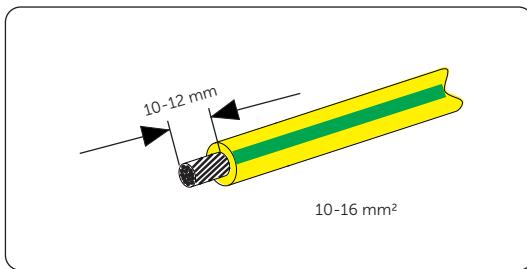


Figure 8-3 Stripping the PE cable

**Step 2:** Insert the stripped section into the OT terminal (part M).

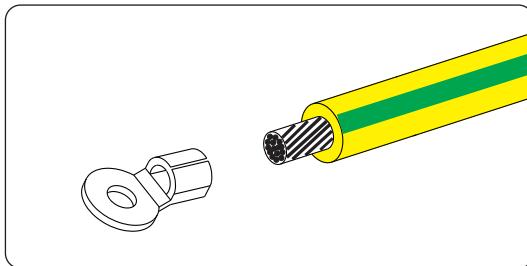


Figure 8-4 Installing the tubing and OT terminal

**Step 3:** Crimp it with crimping tool.

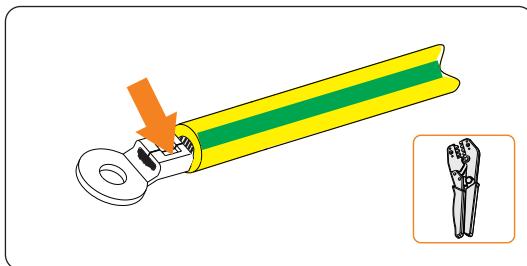


Figure 8-5 Crimping the cable

**Step 4:** Connect the assembled PE cable to the grounding point of the inverter, and secure it with M6\*14 screw (Part J). (Torque:  $1.5 \pm 0.1 \text{ N}\cdot\text{m}$ )

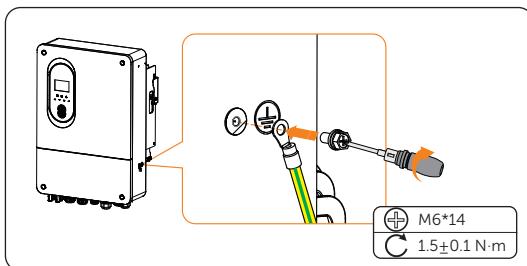


Figure 8-6 Securing the PE cable

## 8.3 Battery Power Cable Connection

 **DANGER!**

- Before connecting the cables, make sure the breaker, power button (if any) and DC switch (if any) of battery is OFF.
- Always ensure correct polarity. Never reverse the polarity of the battery cables as this will result in inverter damage.

### Requirements for battery connection

- Battery
  - » SolaX Lithium-ion battery and lead-acid battery.
  - » The inverter is equipped with two battery terminals. Max charge and discharge current is 350 A.
  - » Make sure the input voltage of each **BAT** terminal is higher than minimum voltage 40 V and lower than maximum input voltage 60 V.
- Micro circuit breaker (MCB)
  - » If the battery is integrated with a readily accessible internal DC breaker, no additional DC breaker is required. If lead-acid batteries are used, a DC circuit breaker needs to be installed between the battery and the inverter.
  - » The nominal voltage of DC MCB should be larger than maximum voltage of battery.
- Battery configuration information
  - » X3-NEO-LV series inverter matches with SolaX low voltage battery TP-LD53, TP-LD150. A single inverter can match with up to 16 batteries, with no minimum requirement.

### Wiring procedures

**Step 1:** Use a Phillips screwdriver to remove the inverter's upper cover.

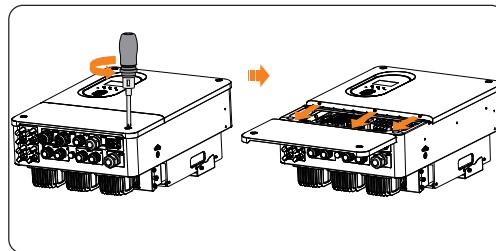


Figure 8-7 Removing the upper cover

**Step 2:** Use a Phillips screwdriver to remove the protective cover inside the inverter. Please store it properly after removal.

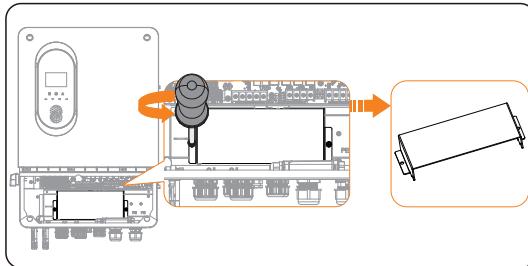


Figure 8-8 Remove the protective cover

**Step 3:** Strip the insulation of the battery power cable to an appropriate length.

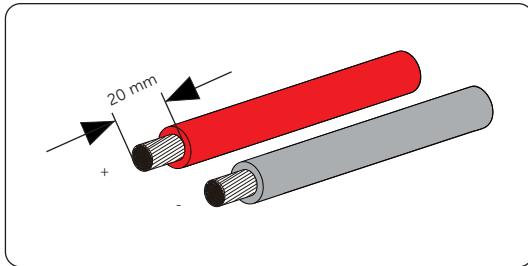


Figure 8-9 Stripping the battery cable

**Step 4:** Insert the stripped cable into the battery connection terminal (part N). Crimp it with crimping tool.

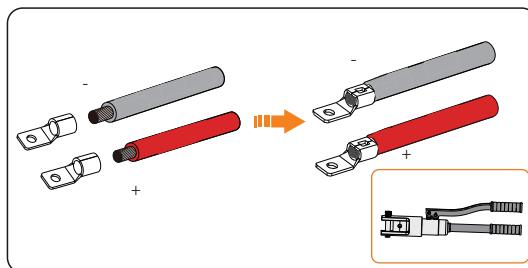


Figure 8-10 Crimping the terminal

**Step 5:** Loosen the swivel nut of the battery terminals then remove the screws.

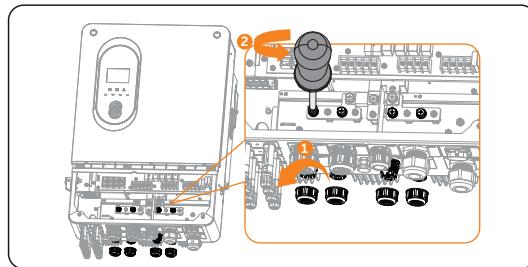


Figure 8-11 Threading the battery cable

**Step 6:** Thread the cable through the swivel nut, puncture a waterproof seal, then pass through the **BAT** terminal. Connect the positive and negative cables to their respective positions, screw back the removed screws. Gently pull the cable backward to ensure firm connection. Tighten the swivel nut clockwise.

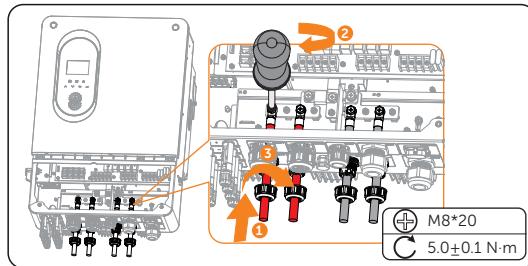


Figure 8-12 Connecting the battery cables

**Step 7:** Reinstall the protective cover onto the inverter.

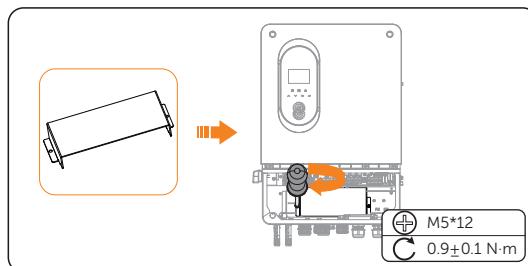


Figure 8-13 Reinstall the protective cover

## 8.4 AC Connection

### NOTICE!

- Before connecting the inverter to the grid, approval must be received by local utility as required by national and state interconnection regulations.

The inverter supports the EPS mode. When connected to the grid, the inverter outputs go through the Grid terminal, and when disconnected from the grid, the inverter outputs go through the EPS terminal.

### Requirements for AC connection

- Grid voltage requirement
  - The grid voltage and frequency must be within the allowable range (400 V/230 V, 380 V/220V, 50/60 Hz) and comply with the requirements of the local power grid.
- Residual Current Device (RCD)
  - The inverter does not require an external RCD when operating. If an external RCD is required by local regulations, a 300 mA Type-A RCD is recommended. If required by local regulations, a Type-B RCD is also permitted.
- AC breaker
  - An AC breaker that matches the power of the inverter must be used between the inverter output and the power grid. Each inverter must be equipped with an independent breaker or other load disconnection unit to ensure the safe disconnection from the grid. For specific information on the AC breaker for Grid and EPS, see ["5.3 Additionally Required Materials"](#).
- EPS load
  - Make sure that the rated power of the EPS load is within the rated output power range of the inverter. Otherwise, the inverter will report an **EPS Overload Fault** alarm. In this case, turn off some loads to suit the rated EPS output power range of the inverter, and then press the **Reset** key on the LCD screen to clear the fault.
  - When connecting to the EPS terminal, pay attention to the following points:

Medical equipment	Connection prohibited
Precision instrument	Connection prohibited
Appliances susceptible to malfunctions in the event of power outages during use.	Connection prohibited

- For inductive loads such as refrigerators, air conditioner, washing machine, etc., ensure that their start power does not exceed the EPS peak power of the inverter.

Table 8-4 EPS load information

Type of load	Equipment	Start power
Resistive load	Lamp	Rated power
	Fan	Rated power
	Hair dryer	Rated power
Inductive load	Refrigerator	3-5 times rated power
	Air conditioner	3-6 times rated power
	Washing machine	3-5 times rated power
	Microwave oven	3-5 times rated power

\* Refer to the nominal start power of the equipment for the actual start power.

### Wiring procedures

#### NOTICE!

- Please refer to "5.3 Additionally Required Materials" to view the recommended wire sizes for GRID, EPS, and GEN.

**Step 1:** Prepare a Grid cable, a GEN cable (Optional) and an EPS cable, strip the protective layer of L1, L2, L3, N and the grounding conductor according to the recommended length in the table.

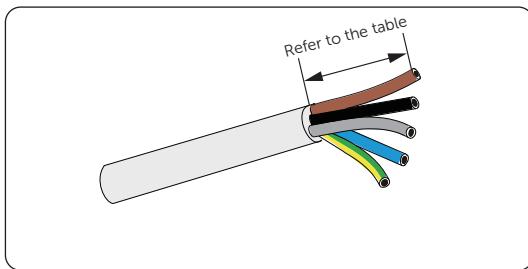


Figure 8-14 Stripping the cable

Table 8-5 Strip length (mm)

Length (mm)	L1	L2	L3	N	PE
Grid	140	140	140	140	55
GEN	120	120	120	120	110
EPS	130	130	135	120	140

**Step 2:** Strip the insulation layer of L1, L2, L3, N and the grounding conductor to a length of  $10 \pm 0.5$  mm.

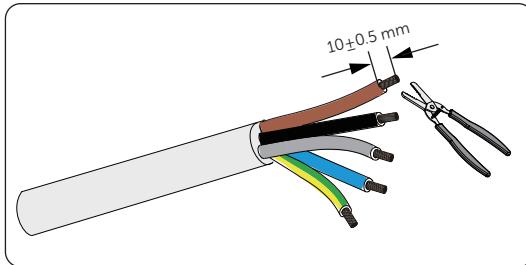


Figure 8-15 Strip the insulation

**Step 3:** Pull the heat-shrink tubing over the cable and insert the stripped section into the **OT** terminal (part L).

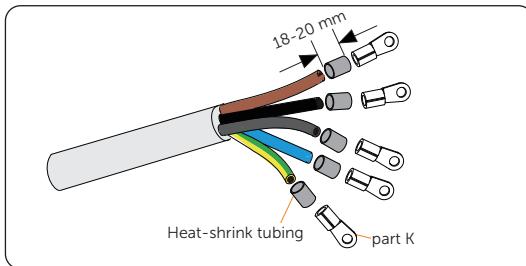


Figure 8-16 Installing the tubing and OT terminal

**Step 4:** Crimp it with crimping tool, pull the heat-shrink tubing over the stripped section of the **OT** terminal and use a heat gun to shrink it so that it can be firmly contacted with the terminal.

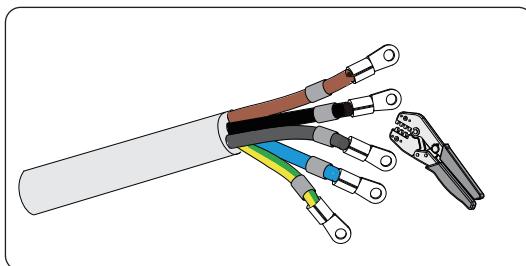


Figure 8-17 Crimping the cable

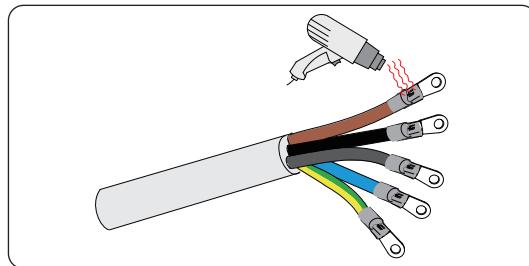


Figure 8-18 Shrinking the tubing

**Step 5:** Remove the swivel nut of **Grid**, **GEN** and **EPS** terminal. Remove the sealing ring which will be no longer used.

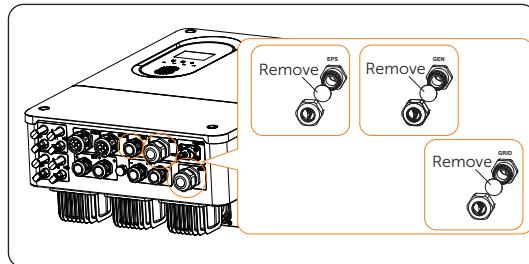


Figure 8-19 Removing the swivel nut

**Step 6:** **Grid** terminal connection: Thread the crimped cables through the swivel nut and terminal. Insert the conductors into the terminal block and tighten the terminal block screws (Torque:  $0.9 \pm 0.1$  N·m). Ensure that the conductors are firmly seated in the terminal. After connecting, tighten the swivel nut.

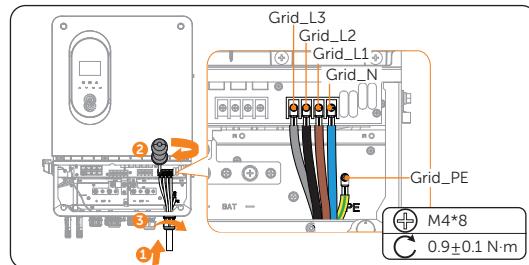


Figure 8-20 Grid terminal connection

**Step 7:** (Optional) **GEN** terminal connection: Thread the crimped cables through the swivel nut and terminal. Insert the conductors into the terminal block and tighten the terminal block screws (Torque:  $0.9 \pm 0.1 \text{ N}\cdot\text{m}$ ). Ensure that the conductors are firmly seated in the terminal. After connecting, tighten the swivel nut.

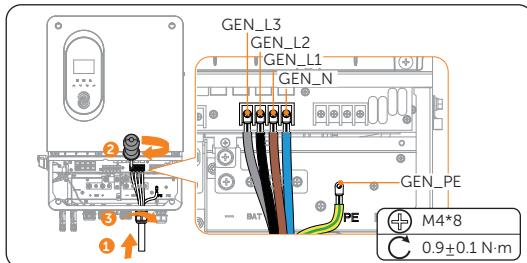


Figure 8-21 GEN terminal connection

**Step 8:** EPS terminal connection. Thread the crimped cables through the swivel nut and terminal. Insert the conductors into the terminal block and tighten the terminal block screws (Torque:  $0.9 \pm 0.1 \text{ N}\cdot\text{m}$ ). Ensure that the conductors are firmly seated in the terminal. After connecting, tighten the swivel nut.

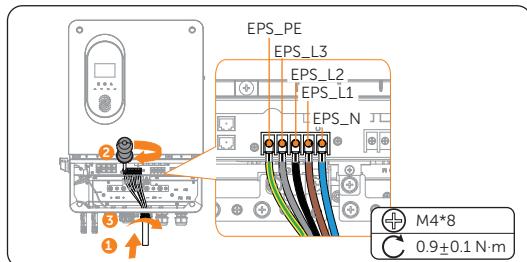


Figure 8-22 EPS terminal connection

 **DANGER!**

- Before powering on the inverter, make sure the AC connector has been installed correctly on the Grid and EPS terminal even if the EPS terminal is not wired. Otherwise, electrical shock may be caused by high voltage, resulting in serious personal injury or death.

 **WARNING!**

- Reinstall AC terminal caps immediately after removing the connectors from the terminals.

## 8.5 PV Connection

### DANGER!

- When exposed to the sunlight, PV modules will generate lethal high voltage. Please take precautions.
- Before connecting the PV modules, make sure that both PV switch and AC breaker are disconnected, and that the PV module output is securely isolated from the ground.

### WARNING!

- To mitigate the risk of fire, it is crucial to utilize a dedicated crimping tool specifically designed for PV installations to ensure secure and reliable connections.

### CAUTION!

- Power is fed from more than one source and more than one live circuit.

### Requirements for PV connection

- Open circuit voltage and operating voltage
  - » The open circuit voltage of each module array cannot exceed the maximum PV input voltage (1000 V) of the inverter. Otherwise, the inverter may be damaged.
  - » The operating voltage of PV modules must be within the MPPT voltage range (160-950 V) of the inverter. Consider the impact of low temperature on the voltage of the photovoltaic panels, as lower temperatures tend to result in higher voltages.
- PV module
  - » The PV modules within the same MPPT channel are of the same brand. Additionally, the strings within the same channel should have identical quantities, and be aligned and tilted identically.
  - » The positive or negative pole of the PV modules should not be grounded.
  - » The positive cables of the PV modules must be connected with positive DC connectors.
  - » The negative cables of the PV modules must be connected with negative DC connectors.

### Wiring procedures

**Step 1:** Strip the insulation of the PV cables to an appropriate length.

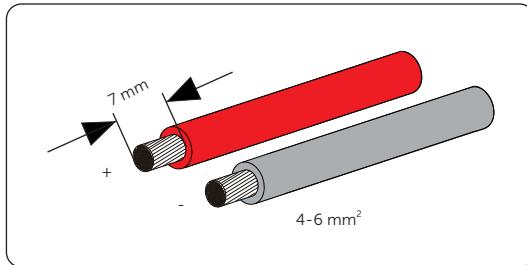


Figure 8-23 Stripping the PV cable

**Step 2:** Insert the stripped cable into the PV pin contact (part B, D). Make sure the PV cable and PV pin contact are of the same polarity.

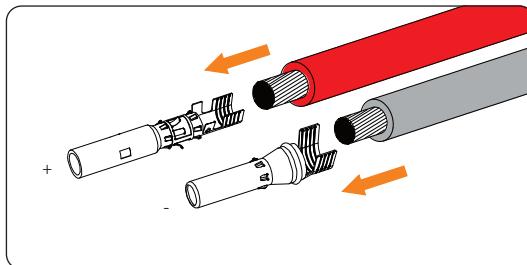


Figure 8-24 Inserting the PV pin contact

**Step 3:** Crimp it with crimping tool for PV terminal. Pay attention to the crimping position.

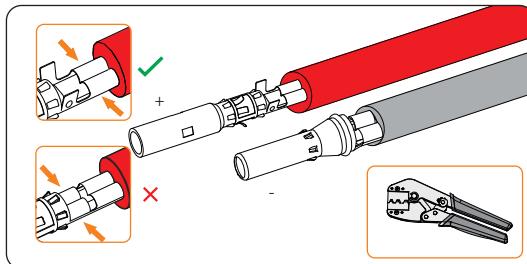


Figure 8-25 Crimping the terminal

**Step 4:** Thread the PV cable through swivel nut and insert the cable into the PV connector (part A, C).

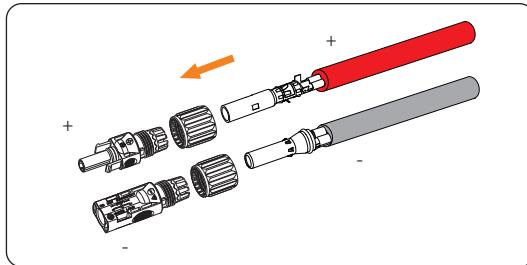


Figure 8-26 Threading the PV cable

**Step 5:** A "click" will be heard if it is connected correctly. Gently pull the cable backward to ensure firm connection. Tighten the swivel nut clockwise. Verify that the PV connectors have the correct polarity before connection.

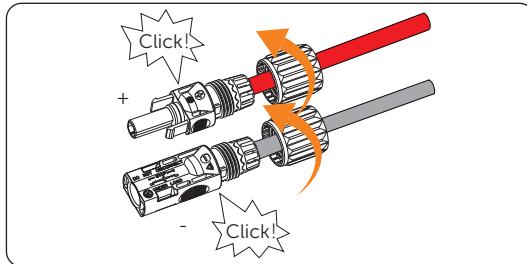


Figure 8-27 Securing the PV cable

**Step 6:** Use a voltage measuring device which complies with the local regulation to measure the positive and negative voltage of the assembled PV connectors. Make sure the open circuit voltage does not exceed the input limit of 1000 V.

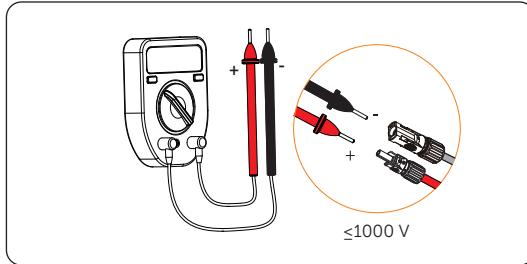


Figure 8-28 Measuring the voltage of PV connectors

**NOTICE!**

- If the voltage reading is negative, it indicates an incorrect DC input polarity. Please check if the wiring connections on the measuring device are correct or PV connectors are not mistakenly connected.

**Step 7:** Use the PV removal tool (part G) to remove the PV terminal caps and connect the assembled PV connectors to the corresponding terminals until there is an audible "Click". The PV+ on the string side must be connected to the PV+ on the inverter side, and the PV- on the string side must be connected to the PV- on the inverter side.

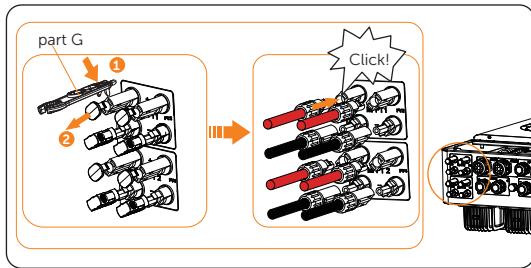


Figure 8-29 Connecting the PV cable


**⚠️ WARNING!**

- Seal the unused PV terminals with the original terminal caps. If all PV terminals are connected, keep the waterproof caps in a safe place. Reinstall them immediately after removing the connectors from the terminals.

# 9 Communication Connection

## 9.1 Pin Assignment of COM Terminal

The COM terminal is used for generator connection via I/O terminal, battery communication via BMS terminal, CT/Meter connection via CT/METER terminal, parallel connection via PAR terminal.

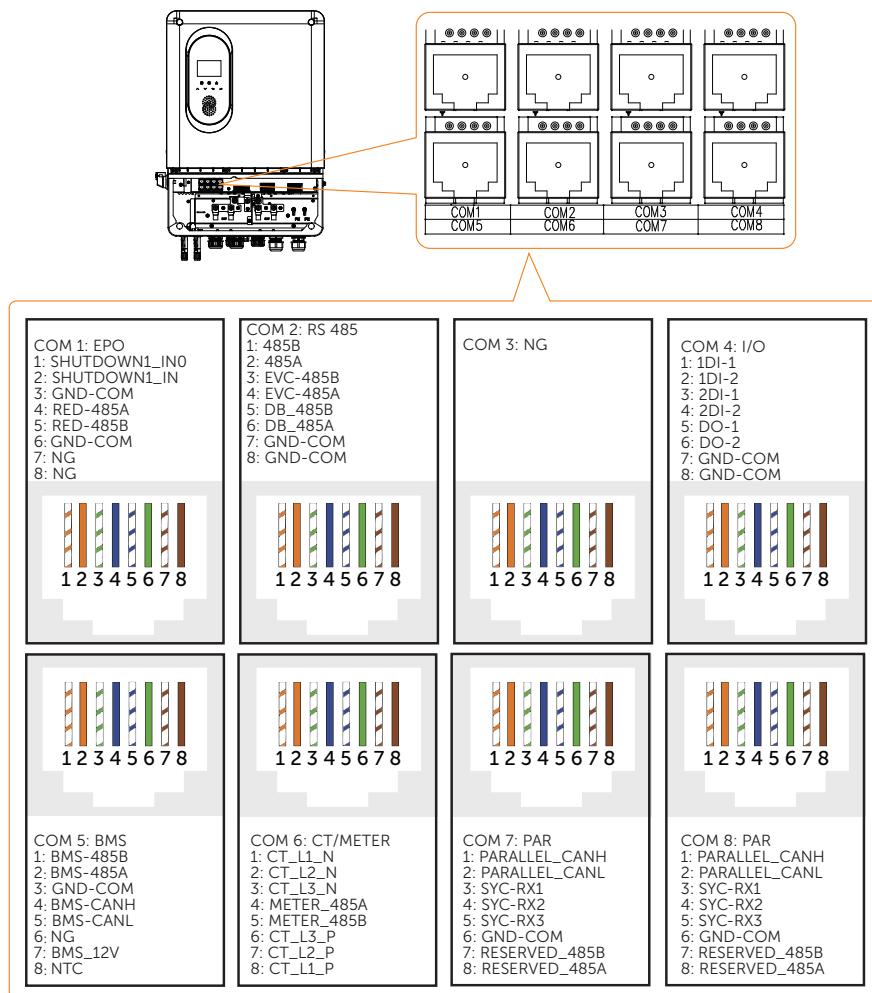

## NOTICE!

- When using the lithium battery, refer to "[9.2 Battery Communication Connection](#)" for wiring procedure.

## 9.2 COM1 Communication Connection

Table 9-6 Pin assignment of the COM1 terminal

Pin Number	Pin assignment	Description
1	SHUTDOWN1_IN0	Emergency shutdown for the entire inverter system.
2	SHUTDOWN1_IN	
4	RED-485A	Differential the data for Modbus RS-485
5	RED-485B	communication

## 9.3 COM2 Communication Connection

Table 9-7 Pin assignment of the COM2 terminal

Pin	Pin assignment	Description
3	EVC-485B	
4	EVC-485A	Connect to the EV charger's RS-485 terminal.

## 9.4 COM4 Communication Connection

The I/O terminal can be used to connect a generator.

For generator connection, please refer to "[16.1 Application of Generator](#)" for specific application.

Table 9-8 COM4 pin assignment

Pin	Pin assignment	Description
1	1DI-1	
2	1DI-2	Reserved
3	2DI-1	
4	2DI-2	Reserved
5	DO-1	
6	DO-2	For generator dry contact output
7	GND-COM	
8	GND-COM	Grounding

#### 9.4.1 Generator Communication Connection

**Step 1:** Loosen the **COM2** terminal swivel nut, and then remove the sealing plugs from the cable support sleeve as needed. Do not remove the sealing plugs from holes if you choose not to connect the cable.

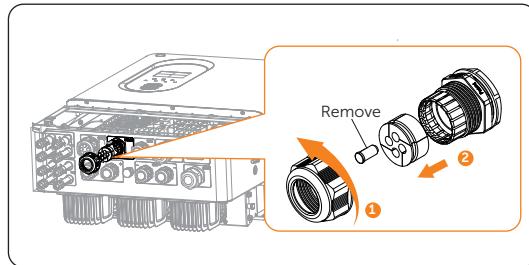


Figure 9-30 Removing the swivel nut

**Step 2:** Thread the network cable through the swivel nut, cable support sleeve and connector enclosure in sequence. Strip off the 15 mm insulation of the cable.

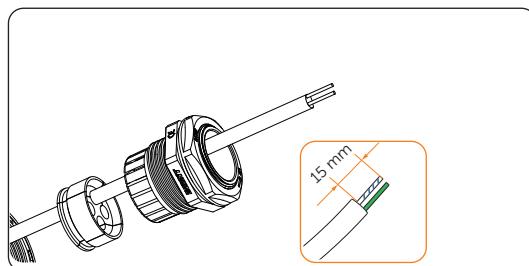


Figure 9-31 Threading the cable

**Step 3:** Insert the stripped section into the RJ45 terminal (part P). Crimp it tightly with a crimping tool for RJ45. Pay attention to the pin order of RJ45 terminal. Use a network cable tester to check if the cable has been correctly and properly crimped before connecting to inverter.

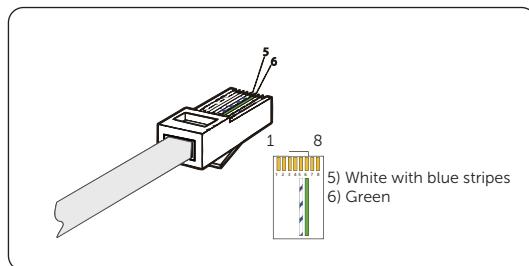


Figure 9-32 Crimping the communication cable

**Step 4:** Insert the RJ45 connector into the **COM 4** located inside the inverter. You will hear an audible "click". Tighten the swivel nut

## 9.5 COM5 Communication Connection

### 9.5.1 Battery Communication Connection

#### Connection diagram

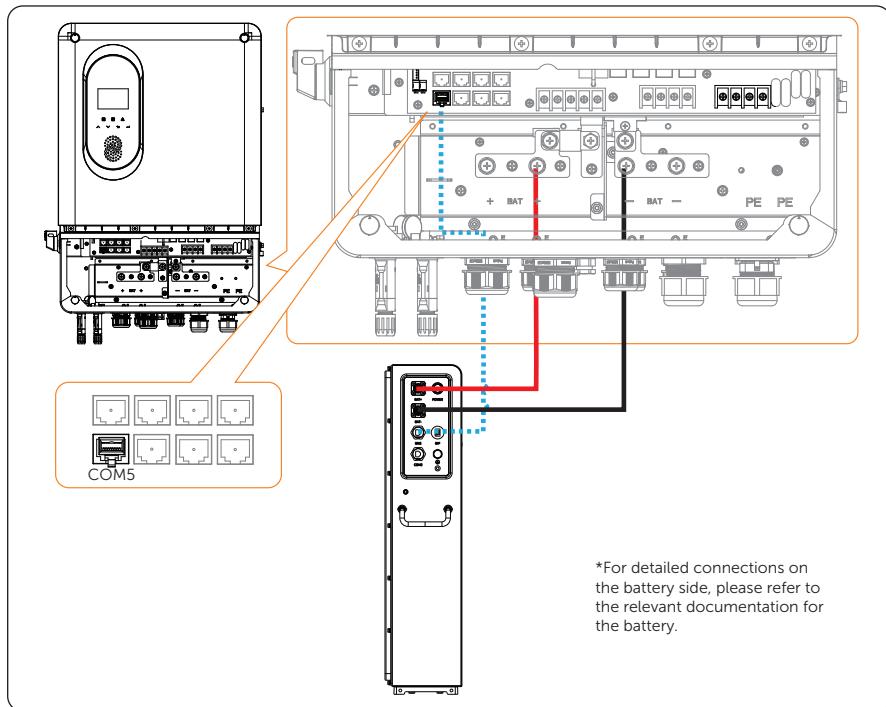


Figure 9-33 BMS connection diagram

### Wiring procedure

**Step 1:** Loosen the **COM1** swivel nut on the enclosure, and then remove the sealing plugs from the cable support sleeve as needed. Do not remove the sealing plugs from holes if you choose not to connect the cable.

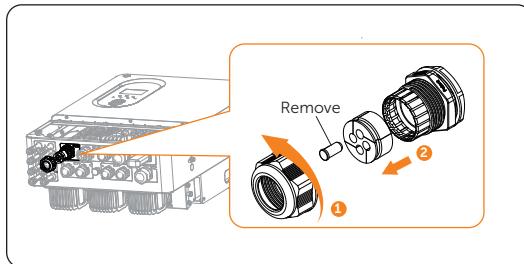


Figure 9-34 Disassembling the connector

**Step 2:** Find the battery communication cable in the battery accessory package. Directly thread the cable through the swivel nut, cable support sleeve and connector enclosure in sequence.

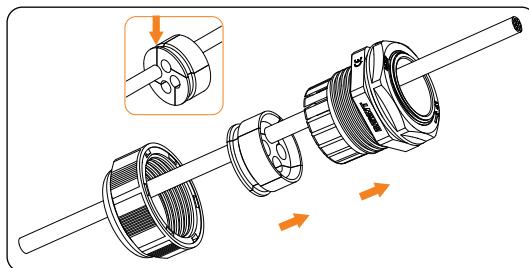


Figure 9-35 Threading the cable

**Step 3:** Strip the insulation to an appropriate length.

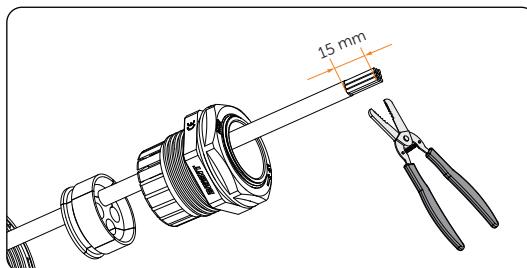


Figure 9-36 Stripping the insulation

**Step 4:** Insert the stripped section into the RJ45 terminals (part P). Crimp it tightly with a crimping tool for RJ45. Pay attention to the pin order of RJ45 terminals. Use a network cable tester to check if the cable has been correctly and properly crimped before connecting to inverter.

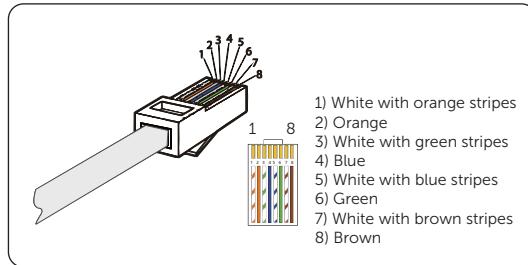


Figure 9-37 Crimping the communication cable

**Step 5:** Insert the RJ45 connector into the **COM 5** located inside the inverter. You will hear an audible "click". Tighten the swivel nut.

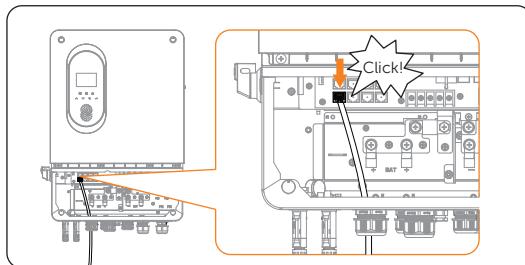


Figure 9-38 Inserting the connector to COM 1

**Step 6:** Set the DIP switch to **ON**.

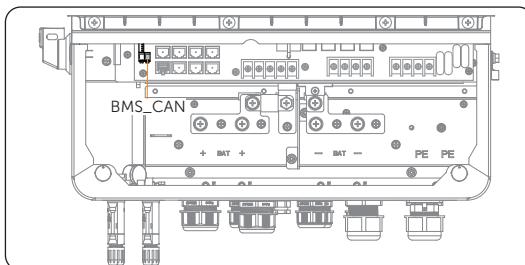


Figure 9-39 Switch on the DIP switch

## 9.6 COM6 Communication Connection

### 9.6.1 Meter/CT Connection

The inverter should work with an electric meter or current transformer (CT for short) to monitor household electricity usage. The electricity meter or CT can transmit the relevant electricity data to the inverter or platform.

#### CAUTION!

- The inverter will prompt a **CT/Meter Check Fault** alarm if a meter or CT is set up in **CT/Meter State** but not connected properly. Smart meters must be authorized by our company. Unauthorized meter may be incompatible with the inverter, thereby resulting in inverter damage and working mode malfunction. SolaX will not be responsible for the impact caused by the use of other appliances.

#### NOTICE!

- Do not place the CT on the N wire or ground wire.
- Do not put CT on the N wire and L wire at the same time.
- Do not place the CT on the side where the arrow points to the inverter.
- Do not place the CT on non-insulated wires.
- The cable length between CT and inverter should not exceed 100 meters.
- It is recommended to wrap the CT clip around in circles with insulating tape.
- Before proceeding with the CT connection, please evaluate the distance between the inverter and the CT. If the length of the CT cables provided in the accessory package is insufficient, use Case 2 connection method; otherwise, Case 1.

## Meter/CT connection diagram

## NOTICE!

- Please make PE connection for Meter if the meter has ground terminal.
- CT-R must be connected to L1, CT-S connected to L2, and CT-T connected to L3 in accordance with the L1, L2 and L3 of the inverter's Grid terminal.

- CT connection diagram

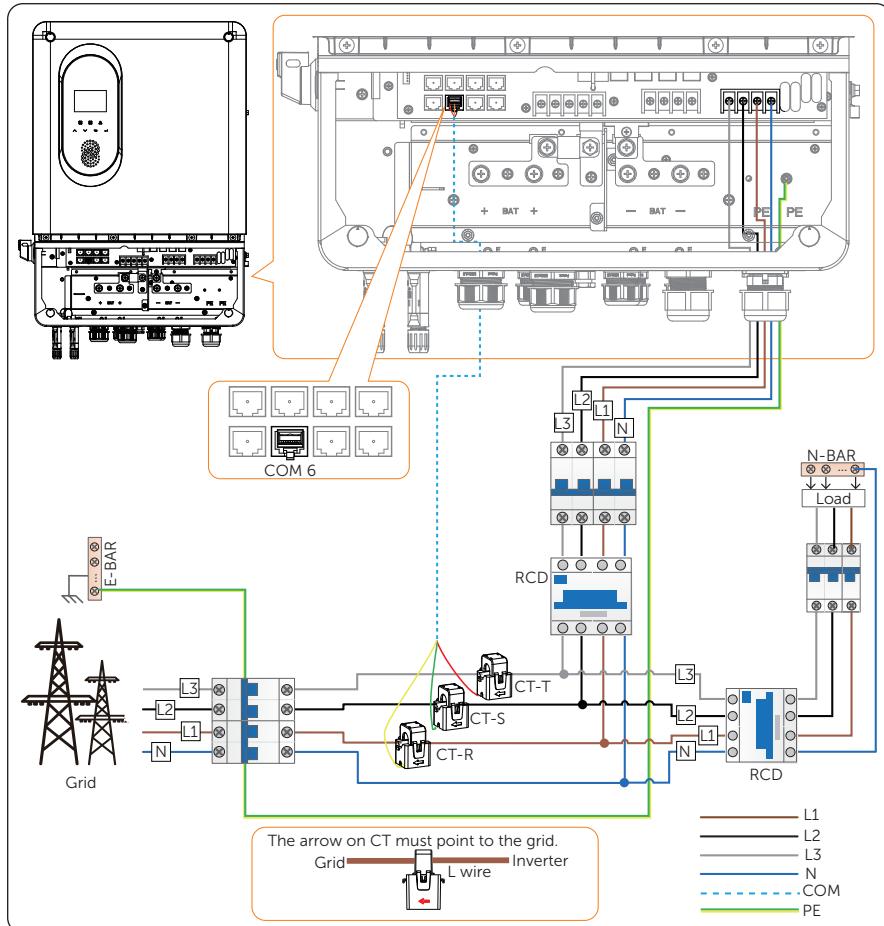


Figure 9-40 CT connection diagram

## Communication Connection

- Meter connection diagram

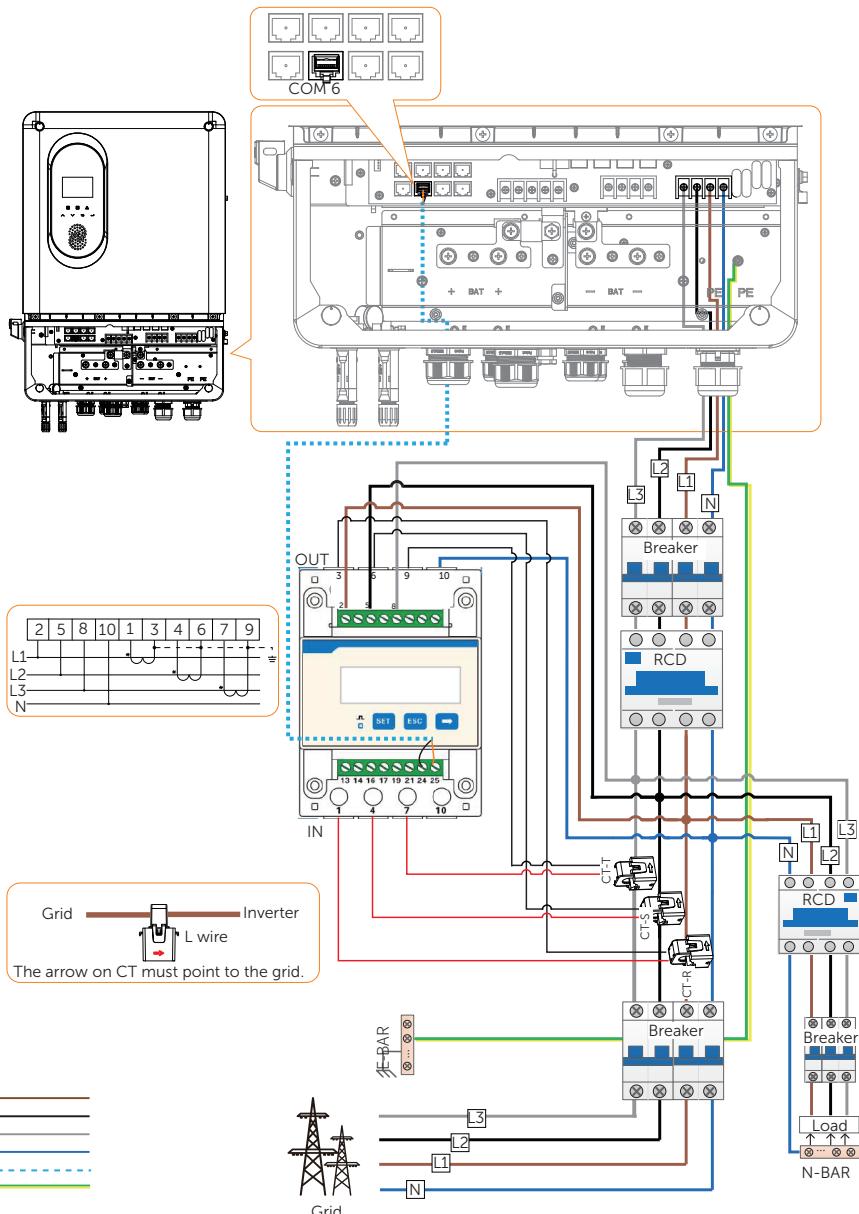


Figure 9-41 Meter connection diagram

### 9.6.2 CT Connection Procedure

#### CT connection (case 1)

**Step 1:** Insert the RJ45 terminal of the CT (part E) into the COM6 located inside the inverter, make sure that the connection is tight until you hear "Click", the CT side towards the grid is clamped on the L3, L2 and L1 cables of the Grid terminal.

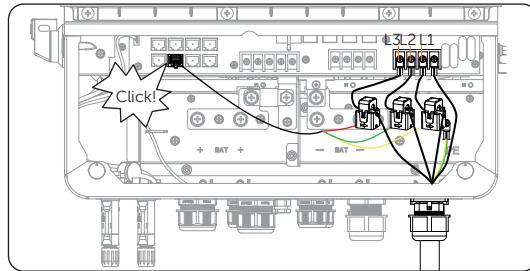


Figure 9-42 Connecting the CT

#### CT connection (case 2)

**Step 1:** Loosen the **COM1** terminal swivel nut, and then remove the sealing plugs from the cable support sleeve as needed. Do not remove the sealing plugs from holes if you choose not to connect the cable.

**Step 2:** Crimp the RJ45 terminal (part O) onto both ends of the prepared Network cable. Thread the cable through the swivel nut, cable support sleeve and connector enclosure in sequence.

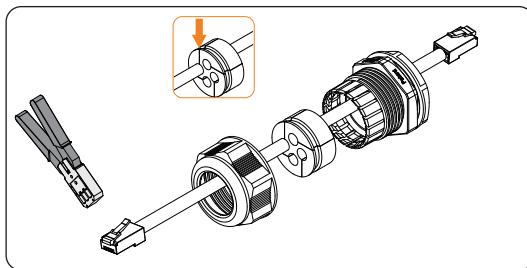


Figure 9-43 Crimping the RJ45

**Step 3:** Insert the cable into the **COM6** located inside the inverter, ensuring a secure connection until you hear a 'click'. Tighten the swivel nut.

**Step 4:** Insert the RJ45 terminal on the other end of the Network cable and the RJ45 terminal on the CT (part E) into the RJ45 connector (part N).

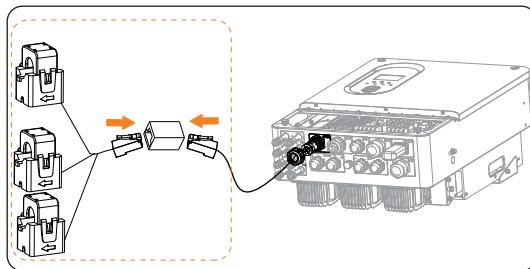


Figure 9-44 CT connection diagram

### 9.6.3 (Optional) Meter Connection Procedure

**Step 1:** Loosen the **COM1** terminal swivel nut, and then remove the sealing plugs from the cable support sleeve as needed. Do not remove the sealing plugs from holes if you choose not to connect the cable.

**Step 2:** Crimp the RJ45 terminal (part O) onto one end of the prepared Ethernet cable. Thread the cable through the swivel nut, cable support sleeve and connector enclosure in sequence.

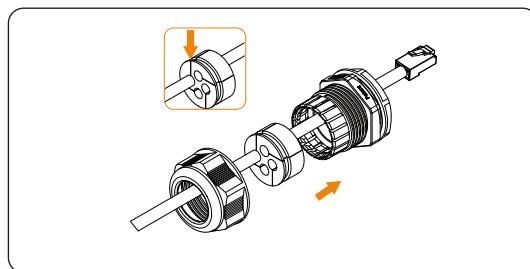


Figure 9-45 Threading the cable

**Step 3:** Insert the cable into the **COM6** terminal located inside the inverter, ensuring a secure connection until you hear a 'click'. Tighten the swivel nut

**Step 4:** Connect the stripped end of the network cable to the meter.

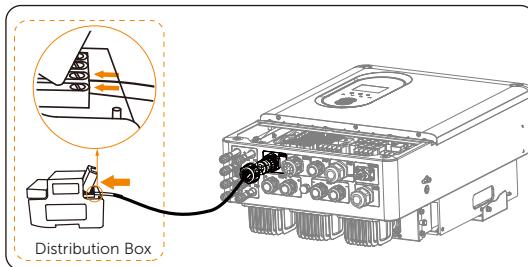


Figure 9-46 Meter connection diagram

## 9.7 COM7/COM8 Communication Connection

The inverter provides the parallel connection function. One inverter will be set as the master inverter to control the other slave inverters in the system. For details, refer to "[16.2 Application of Parallel Function](#)".

### 9.7.1 Pin assignment of the COM7/COM8 Terminal

Pin	Description
1 to 6	For parallel communication
7 and 8	Differential the data for Modbus RS-485 communication

### 9.7.2 Parallel Communication Connection

**Step 1:** Loosen the **COM2** terminal swivel nut, and then remove the sealing plugs from the cable support sleeve as needed. Do not remove the sealing plugs from holes if you choose not to connect the cable.

**Step 2:** Thread the parallel network cable (part R) through the swivel nut, cable support sleeve and connector enclosure in sequence.

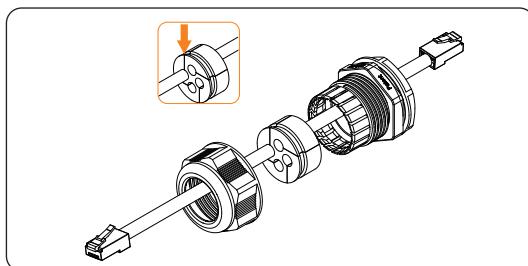


Figure 9-47 Threading the parallel network cable

**Step 3:** Insert the cable into the **COM7/COM8** located inside the inverter. You will hear an audible "click". Tighten the swivel nut.

**Step 4:** Set the DIP switches of the master and the last of the parallel units to **ON**.

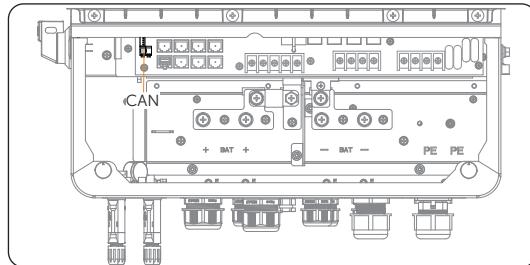


Figure 9-48 Switch on the DIP switch

**NOTICE!**

- For all slave units between the master unit and the final slave unit, the DIP switch must be in the **OFF** position.

## 9.8 Upper Cover Installation

**Step 1:** After the connection is completed, replace the upper cover as follows.

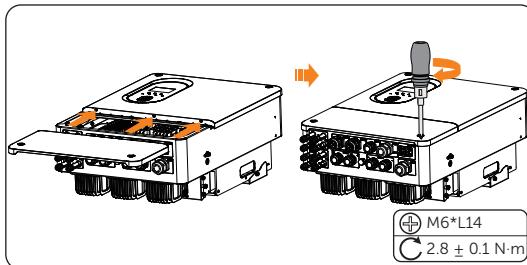


Figure 9-49 Install the upper cover

**Step 2:** Install the screw cover (part Q) into the hole position on the upper cover.

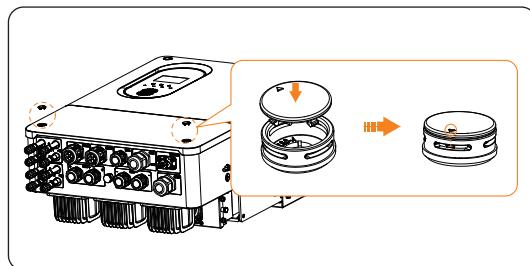


Figure 9-50 Install the upper cover

## 9.9 Monitoring Connection

The inverter provides a **DONGLE** terminal, which can transmit data of the inverter to the monitoring website via WiFi+LAN dongle (Optional). The Wi-Fi+LAN dongle is equipped with two kinds of communication modes (Wi-Fi mode or LAN mode). Users can choose based on actual needs. (If needed, purchase products from us.)

### Monitoring connection diagram

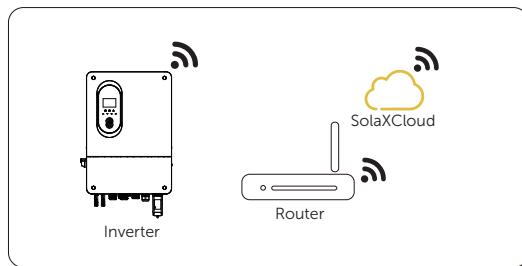


Figure 9-51 Wi-Fi mode connection diagram

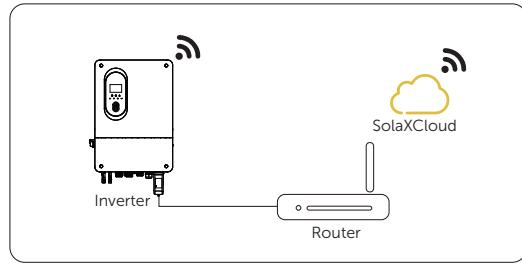


Figure 9-52 LAN mode connection diagram

### Monitoring wiring procedure

- Wi-Fi mode
- a. Assemble the dongle.

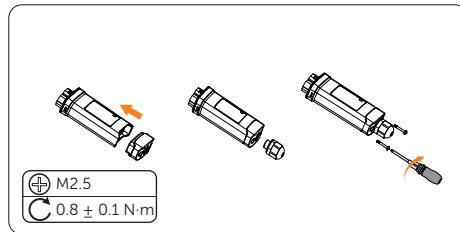


Figure 9-53 Assembling the dongle

- b. Plug the dongle to the inverter.

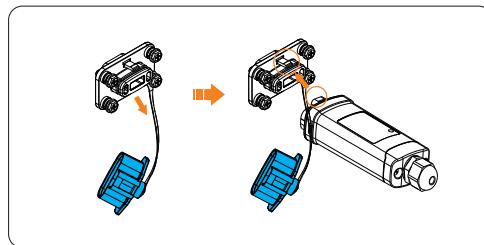


Figure 9-54 Dongle connection procedure

#### ⚠ CAUTION!

- The buckles on the inverter and dongle must be on the same side. Otherwise, the dongle may be damaged.

#### NOTICE!

- The distance between the router and the inverter must be no more than 100 meters. If there are walls in between, the distance must be no more than 20 meters.
- For locations where Wi-Fi signals are weak, install a Wi-Fi signal booster.

#### NOTICE!

- For details on Wi-Fi configuration, see *Pocket WiFi + LAN Installation Manual*. You can configure Wi-Fi only after the inverter is powered on.

- LAN mode
- a. Disassemble the waterproof connector into components 1, 2, 3, and 4; Component 1 is not used. Keep it in a safe place.

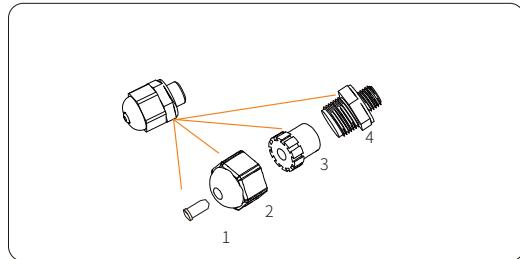


Figure 9-55 Disassembling the waterproof connector

- b. Assemble the dongle.

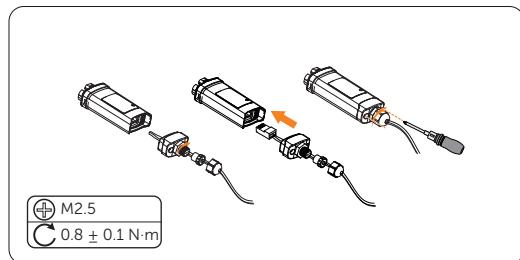



Figure 9-56 Assembling the dongle

- c. Plug the dongle to the inverter.

# 10 System Commissioning

## 10.1 Checking Before Power-on

No.	Item	Checking details
1	Installation	The inverter is installed correctly and securely. The battery is installed correctly and securely. Other device (if any) is installed correctly and securely.
2	Wiring	All DC, AC cables and communication cables are connected correctly and securely; The meter/CT is connected correctly and securely. The ground cable is connected correctly and securely;
3	Breaker	All the DC breakers and AC breakers are OFF;
4	Connector	The external AC and DC connectors are connected; The connectors on the <b>Grid</b> and <b>EPS</b> terminal are connected correctly and securely.
5	Unused terminal	Unused terminals and ports are locked by waterproof caps.
6	Screw	All the screws are tightened.
7	System switch	The system switch on the left side of the inverter is in the OFF (pop-up) state.

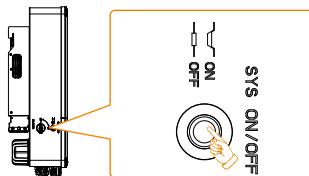

## 10.2 Powering on the System

**Step 1:** Turn on the PV switch and check the LCD screen.


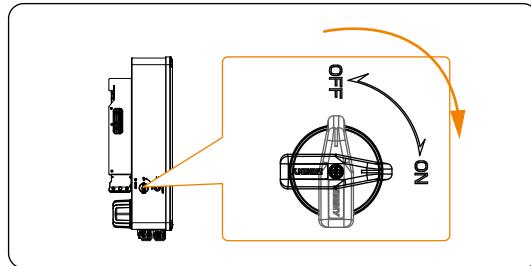


Figure 10-57 Turn on the PV switch

- » If the LCD screen is not on, turn off the PV switch and check whether the PV polarity is connected correctly.
- » If the error of any channel of PV is displayed on LCD, turn off the PV switch and check the corresponding channel of PV connection.

**Step 2:** Select **Meter/CT/None** based on actual usage, with CT as the default.

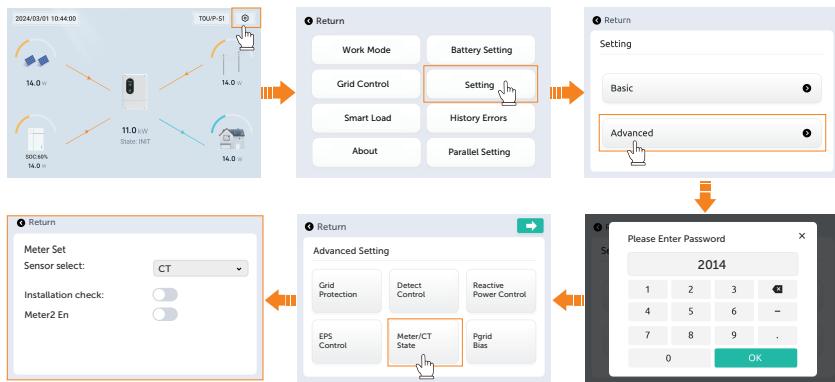

**Step 3:** Switch on the battery or the battery (see documentation of the battery).

**Step 4:** Press the system switch down to the **ON**.

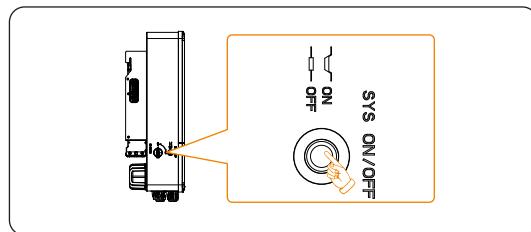



Figure 10-58 Set the system switch to **ON**

**Step 5:** Switch on the system switch on the LCD.



**Step 6:** Wait for the inverter to start up.

**Step 7:** Upon the initial power up, it is required to initiate the installation check to perform a CT check. The setup path matches **Step 2**.

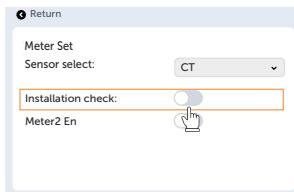

### NOTICE!

- **Installation check** is available when the CT is connected to the **Grid** terminal. If you connect a meter to the **Grid** terminal, this setting is unavailable. You must check the meter wiring manually.

# 11 Operation on LCD

## 11.1 Introduction of Control Panel

The default menu is shown as below. In this interface, you can tap on the four icons of PV, battery, grid and load to check the basic information of each part.

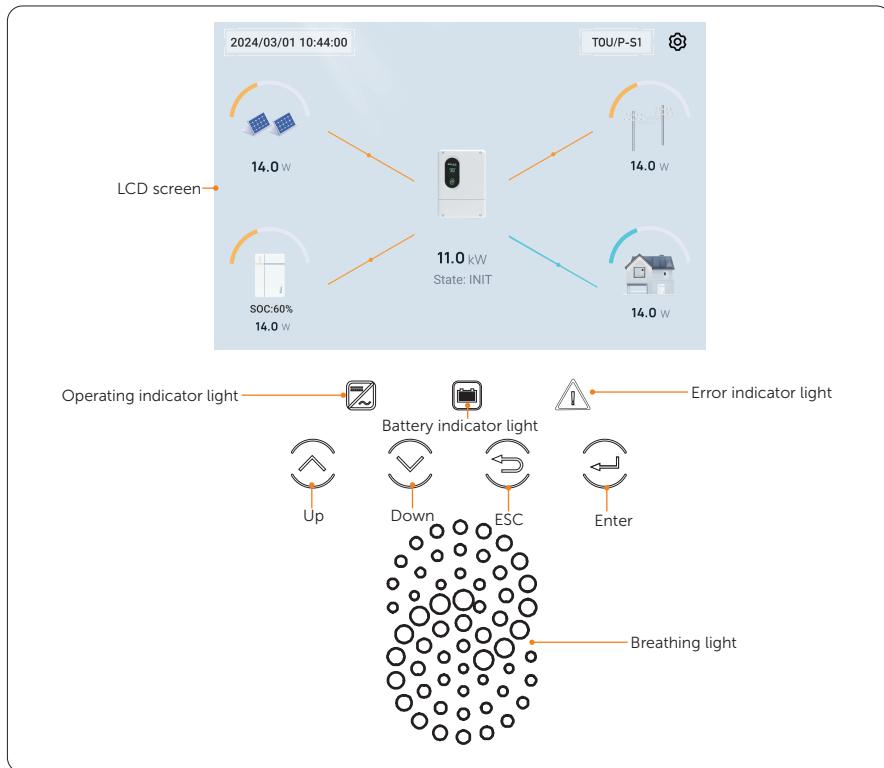


Figure 11-1 Control Panel

- The semi-circular arcs on each icon represent the ratio of current power to the full-load power.
- The position of the dots on the connecting lines between the inverter icon and the other icons indicates the current status of inputs or outputs.


Table 11-1 Definition of indicators

LED indicator	Status	Definition
	 Light on	The inverter is in grid-connected operation state or off-grid operation state..
	 Blinking	The inverter is in the process of grid connection or off-grid.
	/ OFF	The inverter is in fault or manual shutdown state.
	 Light on	The battery is online and the voltage is normal.
	/ OFF	Low battery voltage or no battery.
	 Light on	The inverter is in a fault state, stop running.
	 Blinking	The inverter has an alarm message.
	/ OFF	The inverter has no faults or alarms.

Table 11-2 Definition of keys


Key	Definition
	ESC key Exit from the current interface or function.
	Up key Move the cursor to the upper part or increase the value.
	Down key Move the cursor to the lower part or decrease the value.
	Enter key Confirm the selection.

Table 11-3 Definition of breathing light

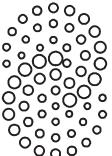
Key	Status	Definition
	 Green blinking	Both inverter and battery are in normal status.
	 Red blinking	The inverter has alarm information.
	 Blue blinking	The battery is in normal status, but the battery SOC is lower than the set min SOC.
	Green, blue and red lights flash in turns	The upgrade is in progress. After successfully upgraded, the light turns green and the buzzer sounds for one second.

## 11.2 Introduction of Menu Interface

- **PV:** Display the information about **PV1**, **PV2**, **Total**, and **Today**. Information contains input voltage, current, and power of each PV, as well as total power generation and today's power generation.

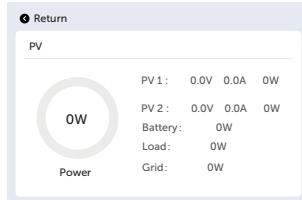

- **Battery:** Display the information about **Battery**. Information contains the power voltage, current, temperature and SOC/Voltage status. Positive value means charging; Negative value means discharging. Tap **BMS Detail**, you can see the battery's SN number, version, and the number of the online battery.

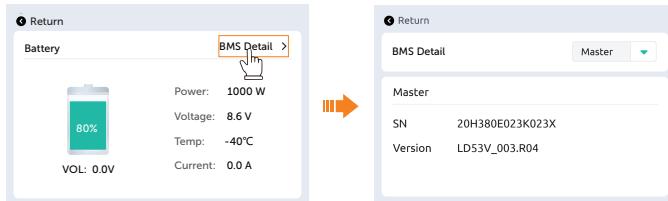


- **Grid:** Information contains the voltage, current, frequency, and output power of Grid terminal. And a record of the output and input electric energy of the inverter today and the total (through Grid terminal). Positive value with power means power output; Negative value means power input.

**Feed In Today:** The electric energy fed into the grid by the inverter today.


- » **Feed In Total:** The electric energy fed into the grid by the inverter since the inverter activated for the first time.
- » **Consume Today:** The electric energy consumed by the inverter today.
- » **Consume Total:** The electric energy consumed by the inverter since the inverter activated for the first time.



- **Load:** Information contains the total load, Load three-phase voltage, current, power
  - » **EPS Today:** A record of the output electric energy of the inverter today when it is disconnected from grid. (Through EPS terminal)
  - » **EPS Total:** A record of the output electric energy of the inverter total when it is disconnected from grid. (Through EPS terminal)

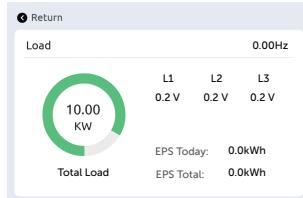

- **Inverter:** You can **Power ON/OFF** the inverter after tapping the icon of the inverter. Information contains the inverter voltage, inverter current, inverter power, Input/export electric energy of the inverter today and Total input/export electric energy since the inverter activated for the first time. Positive value with power means power output; Negative value means power input.

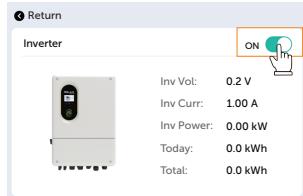

- **Setting:** Here you can set or choose the **Work Mode, Grid Control, Smart Load, About, Battery Setting, Setting, History Errors, and Parallel Setting**.



### 11.3 Work Mode Setting


Selecting path: > **Work Mode**

The working mode is related to your setting in the setting country. For details, see "[2.7 Working mode](#)".

### 11.3.1 Work Mode for Pakistan

#### SUB

Please refer to "[2.7.1 SUB Mode](#)" for working logic of this mode.

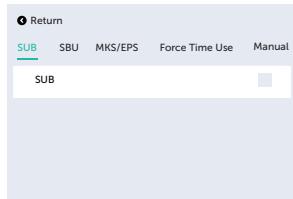


#### SBU


Please refer to "[2.7.2 SBU Mode](#)" for working logic of this mode.

There are two types of Battery: Lead-acid (Voltage type) and Lithium-ion (SOC type).

- For lead-acid battery:
  - » **Return To Utility Voltage:** When the voltage is lower than the setted value, the battery stars to charge.  
Default: 42 V, range:40–60 V;
  - » **Return To Battery Voltage:** When the voltage is higher than the setted value, the battery stars to discharge.  
Default: 47 V, range:40–60 V;
  - » **Charge To Full:** Default: **OFF**.  
**OFF:** when the battery voltage reaches the threshold of **Return To Battery Voltage**, the grid terminal relay disconnects, LCD screen displays normal, and the grid side flow line becomes a dotted line;  
**ON:** Through the charging source, continue to charge the battery, charging to the float voltage, wait for 2 min after grid terminal relay disconnect, LCD screen display is normal, grid side flow line becomes a dotted line.

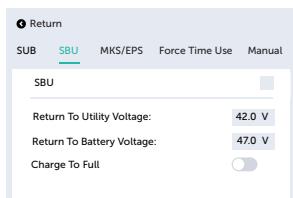

- For Lithium-ion battery:
  - » **Return To Utility SOC:** When the voltage is lower than the setted value, the battery stars to charge.  
Default: 20%, range:10–40%.
  - » **Return To Battery SOC:** When the voltage/SOC is higher than the setted value, the battery stars to discharge.  
Default: 80%, range: 50–90%

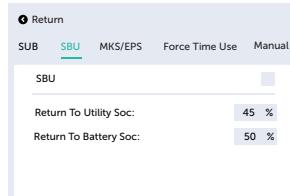


### NOTICE!

- The priority of **Alarm Voltage/SOC** is higher than **Return To Utility Voltage/SOC**.

## MKS/EPS

The operating mode depends on the setting value of **Return to SUB Mode** and **Return to SBU Mode**, please refer to "[2.7.3 MKS/EPS Mode](#)" for details.

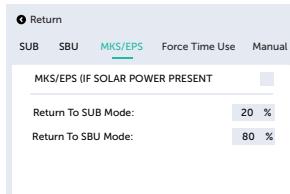


## Force Time Use

Please refer to "[2.7.4 Force Time Use Mode](#)" for working logic of this mode.

- **Charge Period:** You can set the charge time according to your own needs.
  - » **Start Time:** Time to start charging. Default: 00:00, range: 00:00–23:59
  - » **End Time:** Time to end charging. Default: 00:00, range: 00:00–23:59
  - » **Charge Period Source:** The three options to choose from are PV Only, PV Then Grid and PV + Grid.

- **Home Load Removed From Utility Time Periods:** You can set the discharge time according to your own needs.
  - » **Start Time:** Time to start discharging. Default: 00:00, range: 00:00–23:59
  - » **End Time:** Time to end discharging. Default: 00:00, range: 00:00–23:59
  - » **Battery Stop Discharge Voltage:** When the voltage/SOC is lower than the setted value, the battery stops to discharge.  
(For lead-acid battery) Default: 42 V, range: 40-60 V;  
(For Lithium-ion battery) Default: 20%, range: 5-100%.

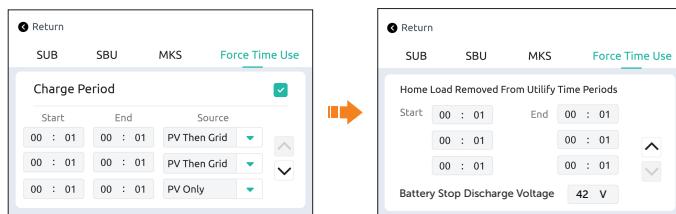


### NOTICE!

- The priority of **Alarm Voltage/SOC** is higher than **Battery Stop Discharge Voltage**.

## Manual

Please refer to "2.7.5 Manual Mode" for working logic of this mode.

- **Battery ChrgDischrg power:** Set the battery charge/discharge power, negative value for discharge.

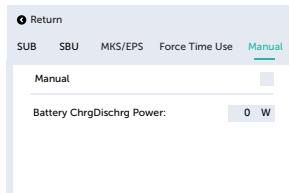


### 11.3.2 Work Mode for other Countries

#### Setting backup mode

Please refer to "2.8.2 Backup Mode" for working logic of this mode.


- **Min SOC/Voltage:** Default: 30%/42V; range: 30%–100%/40 V–47 V
  - » The minimum SOC/Voltage of the battery. The battery will not discharge power when the SOC/Voltage of the battery reaches this value.
- **Charge battery to:** Default: 50%/47V; range: 30%–100%/42 V–60 V
  - » In this mode, charging from grid function is turned on by default, and you can set the target value by yourselves, that is, during the forced charging period, the inverter will use both PV & grid power to charge the battery to the target value. If the PV power is still sufficient (enough for load and there is excess power), the inverter will continue to charge the battery.

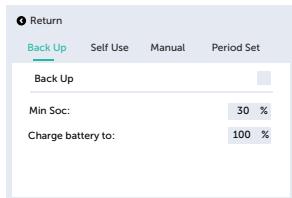

## Setting self use mode

Please refer to "2.7.6 Self Use Mode" for working logic of this mode.

- **Min SOC:** Default: 30%/42 V; range: 30%–100%/40V–47V
  - » The minimum SOC/Voltage of the battery. The battery will not discharge power when the SOC/Voltage of the battery reaches this value.
- **Charge battery to:** Default: 50%/47 V; range: 30%–100%/42V–60V
  - » Set the target SOC/Voltage to charge the battery from power grid in the forced charging period (applicable only when the **Charge from grid** is enabled).
  - » You can set your own target value, i.e. during the forced charging period, the inverter will use both PV & grid power to charge the battery to the target value. If the PV power is still sufficient (enough for load and there is excess power), the inverter will continue to charge the battery.
- **Charge from grid:**
  - » You can set whether the power can be taken from the power grid to charge the battery in the forced charging period. When **Charge from grid** is set to **Enable**, the grid power is allowed to charge the battery; when it is set to **Disable**, the grid power is not allowed to charge the battery.

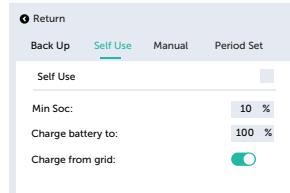

## Setting Manual mode

Please refer to "2.7.5 Manual Mode" for working logic of this mode.

- **Battery ChrgDischrg power:** Set the battery charge/discharge power, negative value for discharge.




## Setting period

Here you can set the charge and discharge period.

If two charging and discharging periods are needed, enable the **Period2 En** to activate the **Charge T2 & Discharge T2**.

- **Charge T1**: Time to charging. Default: 00:00; range: 00:00–23:59
- **Discharge T1**: Time to discharging. Default: 00:00; range: 00:00–23:59
- **Charge T2**: The second time axis is closed by default. If two charging and discharging periods are needed, turn on the **Period2 En**. This period will hold the same working logic as **Charge T1 & Discharge T1**.

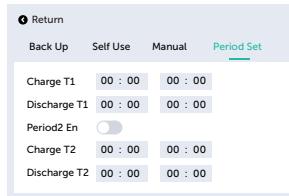

### NOTICE!

- The charging and discharging period is only applicable for self use mode and backup mode.
- In the period not set as forced charging period and allowed discharging period, the battery can charge but not discharge power.
- In the period simultaneously set as forced charging period and allowed discharging period, the battery will be charged.

## 11.4 Grid Settings

Displaying path:  > **Grid Settings**

This function allows the inverter to control the output power to the grid. If the user does not want to feed power to the grid, set the **Export** to **0**.

- **Unbalance Output:** Enable Unbalanced Three-Phase Output. How to achieve unbalanced output, refer to "[2.9 Grid Control Function](#)".
- **Export:** Default: 300000 W, range: 0–300000 W.
- **Max Utility Charge Current:** Setting the current that can be taken from the power grid when the battery is charged. Default: 0 A, range: 0–300 A.

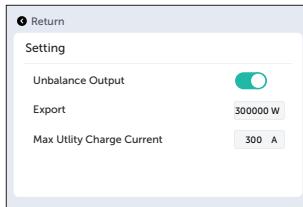


Figure 11-2

- **Active Power Limit En:** When enabled, the maximum output can exceed the rated value.
- **Active Power Limit:** Set the upper limit for active power output (as a percentage of the rated power). It is configurable only when **Active Power Limit En** is enabled.

## 11.5 Battery Setting

Displaying path:  > **Battery Setting**

- **Battery type:** Select the battery type according to the actual battery used.
- **Charge Source:** Select the source to charge the battery.

### NOTICE!

- The settings must be: **Min Discharge Voltage/SOC < Alarm Voltage/SOC**, otherwise, the settings will not be successful.
- The priority of **Alarm Voltage/SOC** is higher than all working modes.


### 11.5.1 Li-ion Battery Setting

- **Max Charge Current:** Default: 160 A, range: 0–300 A.
- **Max Discharge Current:** Default: 160 A, range: 0–300 A.
- **Battery Parallel Mode:** **Capacity Mode** and **Power Mode** are available. Default: Capacity Mode.


### NOTICE!

- For battery parallel mode wiring, see the battery user manual.
- When setting the battery parallel mode, make sure that on-site battery parallel wiring and the cable gauge of the battery power lines match the required specifications.

- **Min Discharge SOC:** If the battery SOC falls below this value, the inverter will disconnect from the grid and shutdown. Default: 10%, range: 5–100%
- **Recover SOC:** When the battery SOC drops below the **Min Discharge SOC**, the battery must recover to above the **recovery SOC** before it can resume discharging and supply power. Default: 30%, range: 5–100%
- **Alarm SOC:** If the battery SOC falls below this value, it will no longer supply power to the grid or the load. Default: 20%, range: 10–100%.
- **Active Battery:** When the battery is in a low-voltage protection state and cannot be charged normally, enable this function to allow the system to use available AC or PV power to apply a small wake-up current and reactivate the battery.
- **Max Charge SOC:** Set the maximum state of charge for the battery. Default: 100%, range: 80–100%.

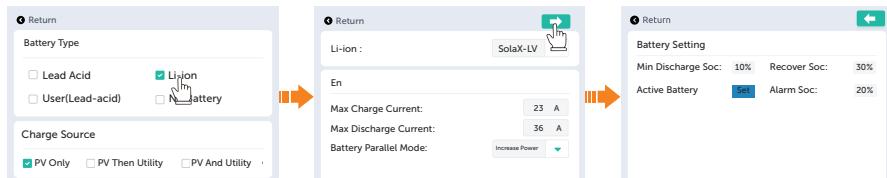


### 11.5.2 Lead Acid Battery Setting

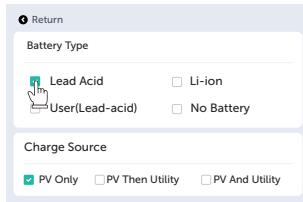

### 11.5.3 No Battery

No battery is connected.

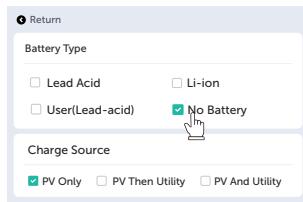


## 11.6 Smart Load

Displaying path: > Smart Load

### None


No device is connected to the generator port.

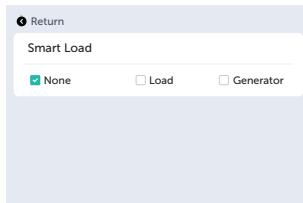

## Load

The generator port is connected to a load.

- **Smart Load Battery On Voltage** and **Smart Load Battery Off Voltage**: when the voltage is below the **Smart Load Battery Off Voltage**, the lead battery will no longer supply power to the load, until the voltage returns to the **Smart Load Battery On Voltage**.
- **Smart Load Battery On SOC** and **Smart Load Battery Off SOC**: when the voltage is below the **Smart Load Battery Off SOC**, the Li-ion battery will no longer supply power to the load, until the voltage returns to the **Smart Load Battery On SOC**.

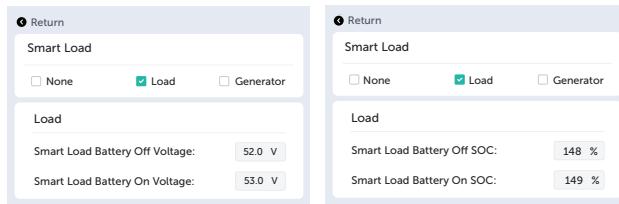

## Generator

Select the connection port and parameters for the generator.

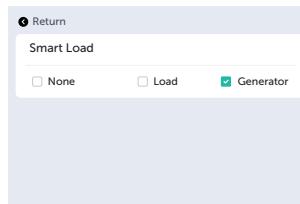


Figure 11-3

- **Connection Point: Grid Port** and **Gen Port** are available. Connect the generator to the utility grid input port or the dedicated generator input port.
- **Disable**: Disables the generator functionality. The system will not start or use the generator.
- **External Control**: Enables an external signal to control the generator.
  - » **Gen Rated Power**: Sets the rated output power (in kW) of your generator.
  - » **Gen Min Power**: Sets the minimum operational power (in kW) that your generator can run at stably.
  - » **Direct Connect**: Enable this only if the generator is connected to the **Grid** terminal and there is no ATS (Automatic Transfer Switch) between the generator and the utility grid.
  - » **Period**: Defines up to three time windows during which the system is allowed to use the generator to charge the batteries.

- **Inverter Control:** Enables an external signal to control the generator. Allows the inverter to control the generator via its **COM4** terminal (pins 5 & 6). For wiring and setup details, see "[16.1 Application of Generator](#)".
- **Start Gen Method:** Defines how the generator start signal is triggered.
  - » **Reference:** Starts the generator based on the battery's State of Charge (SOC) or voltage.
  - » **Immediately:** Starts the generator as soon as a signal is sent.


## 11.7 Parallel Setting

Displaying path:  > **Parallel Setting**

The inverter provides the parallel connection function. One inverter will be set as the master inverter to control the other slave inverters in the system. For details, please refer to "[16.2 Application of Parallel Function](#)".

## 11.8 Setting

Settings includes Basic Settings and Advanced Settings.

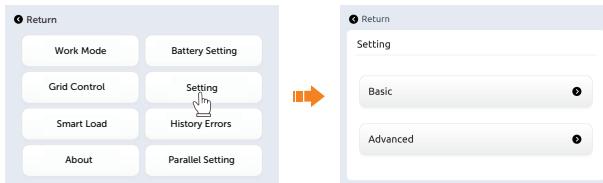

### 11.8.1 Basic Setting

Setting path:  > **Setting** > **Basic Setting**

You can set the **Country**, **Safety**, **Data&Time**, **Phase Self Adaption** and **Unbalance Output** in Basic setting.

#### Setting country




## Setting Safety Code

### NOTICE!

- The inverter cannot be connected to the grid before the safety code is correctly set. If there is any doubt about your safety code where the inverter installed, please consult your dealer or SolaX service for details.
- The setup will vary from different safety codes.


Here you can set safety code according to different countries and grid-tied standards. In addition, the inverter has an **User Defined** option which allows you to customize relevant parameters with a wider range.

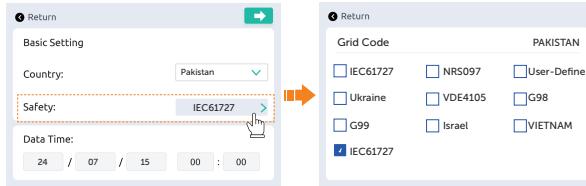

## Setting data time


The display format is "24-07-15 00:00".

- The first two numbers represent the year (e.g. 2000 to 2099).
- The third and fourth numbers represent the month (e.g. 01 to 12).
- The fifth and sixth numbers represent the date (e.g. 01 to 31).
- The remaining numbers represent the time.

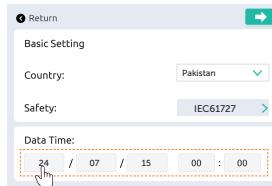


### Setting phase self adaption and unbalance output

- **Phase Self Adaption:** When the phase sequence of the three-phase power at the Grid terminal is different from the default, enabling the **Phase Self Adaption** allows the inverter to continue operating; otherwise, it will report a **Reversed Grid Phase** error.
- **Off-Grid Mute:** Default setting is **ON**, the inverter is muted when off the grid. If you want to hear a sound when the inverter is off the grid, you can turn off this setting.

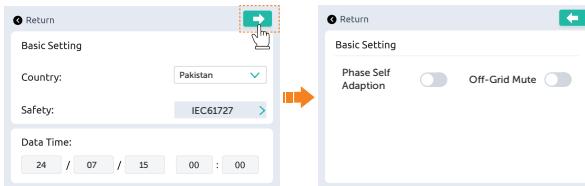

### 11.8.2 Advanced Setting

Setting path: > **Setting** > **Advance Setting**. The default password is "2014".

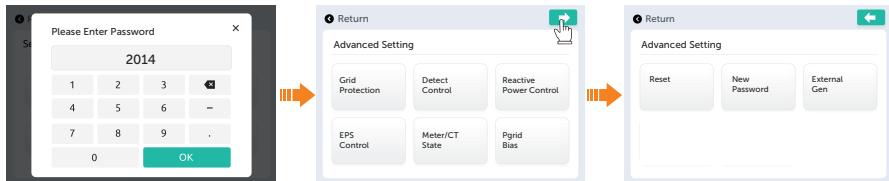

- **Micro Grid:** Enable or disable the function.
- **Connection Point:** **EPS Port** and **GEN Port** are available.

#### NOTICE!

- Unauthorized use of the installer password by unauthorized persons can lead to incorrect parameters being input, resulting in power generation loss or violation of local regulation. Get the installer password from the dealer and never open the password to unauthorized person.


## Grid protection

When **Safety** is selected, the parameters of **Grid Protection** corresponding to the selected safety code will be automatically matched. The default value is the specified value under the current safety regulations. The contents will be displayed according to the requirements of local laws and regulations. Please refer to the actual contents displayed on the LCD screen on the inverter.




## Detect control

- **Active Island:** You can set whether the active island is turned on or not.
- **ISO:** Default ON, Detect the inverter insulation impedance is normal.
- **Signal Island:** If signal island is enabled and the inverter is in EPS mode of operation, the relay between PE and N lines of the EPS load port will be closed.
- **Passive Island:** You can set whether the passive island is turned on or not.
- **NTC:** Sets whether the NTC connection is enabled or not.

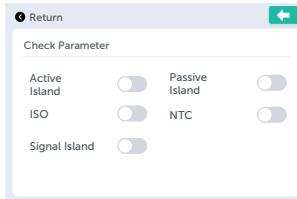


## Reactive power control

The default value is the specified value under the current safety regulations. The contents will be displayed according to the requirements of local laws and regulations. Please refer to local grid requirements.

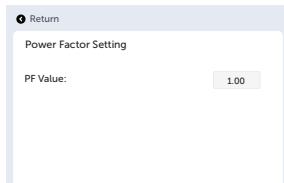

## Meter/CT state

Here you can set **Meter/CT/None** based on the actual connected. CT is set by default.

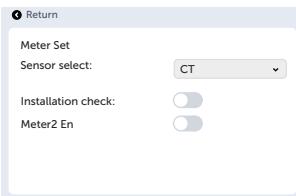

- **Sensor select:** Select the connected sensor.
  - » **CT:** Supports CT.
  - » **Meter:** Supports M3-40 or DSTU666-CT.
  - » **Meter-WiBr:** Supports M3-40 WiBr and DSTU666-CT WiBr.
  - » **Meter-Dual:** Supports M3-40-Dual.
  - » **Meter-Dual-WiBr:** Supports M3-40-Dual WiBr.
- **CT Ratio:** You can set the CT ration. Default: 3000:1.
- **INV PS:** Set the invertor phase sequence.
- **Grid PS:** You can set the grid phase sequence.
- **CT DIR Reset:** Clear the stored phase sequence and direction parameters for the CTs. The CTs are oriented to measure power flow towards the grid.

## Pgrid Bias


This function is disabled by default.

- **Disable:** Disable this function
- **Grid:** The inverter will discharge more power to the power grid.
- **INV:** The inverter will be biased to charge power from the power grid.



### Reset

Here you can reset value of History Record and restore to the factory reset.

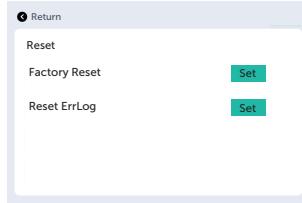

### New password


You can reset the advanced password here.



## 11.9 Logs

Displaying path: > **About**


Display the recent error messages. Information contains date and time error happened and error description.

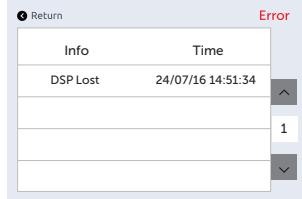

## 11.10 About

Displaying path:  > **About**

Here shows the basic information of the inverter and internal code. After entering the **About** interface, you can check those information.

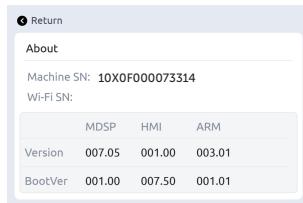

# 12 Operation on SolaX App and Web

## 12.1 Introduction of SolaXCloud

SolaxCloud is an intelligent management platform for home energy, which integrates energy efficiency monitoring, device management, data security communication and other integrated capabilities. While managing your home energy device, it helps you optimize the efficiency of electricity consumption and improve the revenue of power generation.

## 12.2 Operation Guide on SolaXCloud App

### 12.2.1 Downloading and Installing App

Download and install the SolaXCloud app. You can download the app by the following methods.

- Scan the QR code below.
- Find and scan the QR codes at the button right of the login page of [www.solaxcloud.com](http://www.solaxcloud.com).
- Search with the key word SolaXCloud on the App Store or Google Play.



Figure 12-1 QR code

### 12.2.2 Operation on the SolaXCloud App

For instructions on operations, see the online documents on the SolaXCloud app.

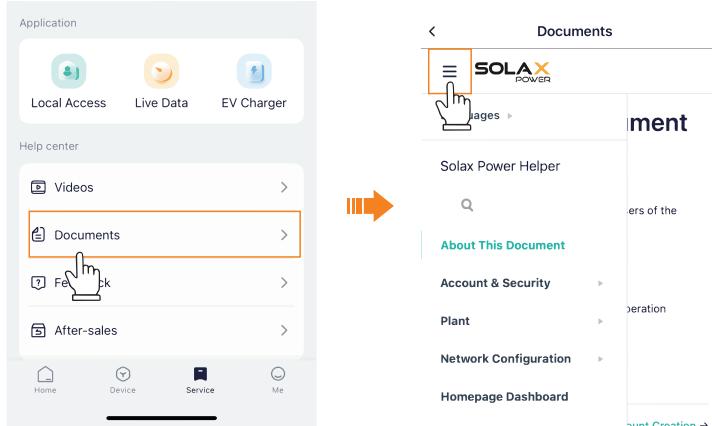


Figure 12-2 Online help on SolaXCloud

#### NOTICE!

- The user interface might change with version updates and should be subject to the actual situations.

### 12.3 Operations on SolaXCloud Web Page

Open a browser and enter [www.solaxcloud.com](http://www.solaxcloud.com) to complete registration, log in to your account, add site and other related operations according to the guide.

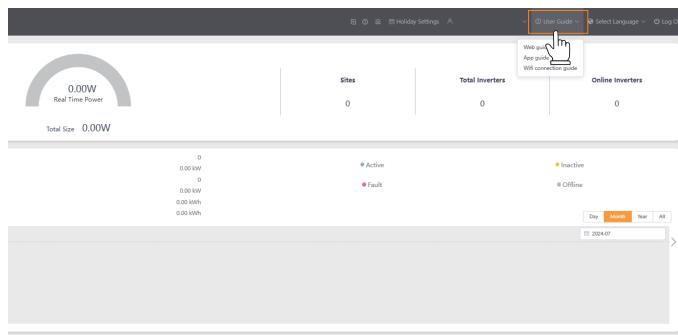


Figure 12-3 Guide on web page

# 13 Troubleshooting and Maintenance

## 13.1 Power-off

- a. Release the **System switch** on the left side of the inverter to turn it off, or turn off the system by **System ON/OFF** on LCD screen.
- b. Turn off the AC switch between the inverter and the power grid.
- c. Turn off the PV switch.
- d. Switch off the battery or the breaker, button, DC switch of the battery (see documentation of the battery manufacturer).

### WARNING!

- After the inverter is powered off, there may still be residual electricity and heat which may cause electric shocks and body burns. Please wear personal protective equipment (PPE) and start maintaining the inverter at least five minutes after power off.

## 13.2 Troubleshooting

This section lists the possible problems with the inverter, and provides information and procedures for identifying and resolving them. In case of any errors, check for the warnings or error messages on the system control panel or App, and then refer to the suggestions below. For further assistance, contact SolaX Customer Service. Please provide the model and SN of the inverter, and be prepared to describe the system installation details.

Table 13-1 Troubleshooting list

Faults	Diagnosis and solution
HW Protect Fault	Internal hardware anomaly <ul style="list-style-type: none"><li>• Contact SolaX for help.</li></ul>
Grid Lost Fault	<ul style="list-style-type: none"><li>• Check grid input voltage if it's within normal range.</li><li>• Or ask the installer for help.</li></ul>
Grid Volt Fault	Power grid voltage overrun <ul style="list-style-type: none"><li>• Wait a moment, if the utility returns to normal, the system will reconnect.</li><li>• Please check if the grid voltage is within normal range.</li><li>• Or ask the installer for help.</li></ul>
Grid Freq Fault	Electricity frequency beyond range <ul style="list-style-type: none"><li>• If the utility returns to normal, the system reconnects.</li><li>• Or ask the installer for help.</li></ul>

Faults	Diagnosis and solution
PV Volt Fault	<p>PV voltage out of range</p> <ul style="list-style-type: none"> <li>• Check the output voltage of the PV panel.</li> <li>• Or ask the installer for help.</li> </ul>
Bus Volt Fault	<ul style="list-style-type: none"> <li>• Press the <b>ESC</b> key to restart the inverter.</li> <li>• Check that the PV input open circuit voltage is in the normal range.</li> <li>• Or ask the installer for help.</li> </ul>
Bat Volt Fault	<p>Battery voltage fault</p> <ul style="list-style-type: none"> <li>• Check battery input voltage if it's within normal range.</li> <li>• Or ask the installer for help.</li> </ul>
AC10M Volt Fault	<ul style="list-style-type: none"> <li>• The grid voltage was out of range in the last 10 minutes.</li> <li>• The system will return to normal if the grid returns to normal.</li> <li>• Or ask the installer for help.</li> </ul>
DCI OCP Fault	<p>DCI overcurrent protection fault</p> <ul style="list-style-type: none"> <li>• Wait for a while to check if it's back to normal.</li> <li>• Or ask the installer for help.</li> </ul>
DCV OVP Fault	<p>DCV EPS(Off-grid) overvoltage protection failure</p> <ul style="list-style-type: none"> <li>• Wait for a while to check if it's back to normal.</li> <li>• Or ask the installer for help.</li> </ul>
SW OCP Fault	<p>Software Detection of Overcurrent Fault.</p> <ul style="list-style-type: none"> <li>• Wait for a while to check if it's back to normal.</li> <li>• Shut down photovoltaic, battery and grid connections.</li> <li>• Or ask the installer for help.</li> </ul>
RC OCP Fault	<p>Overcurrent protection fault.</p> <ul style="list-style-type: none"> <li>• Check the impedance of DC input and AC output.</li> <li>• Wait for a while to check if it's back to normal.</li> <li>• Or ask the installer for help.</li> </ul>
IsolationFault	<p>Insulation Fault</p> <ul style="list-style-type: none"> <li>• Please check the wire insulation for damage.</li> <li>• Wait for a while to check if it's back to normal.</li> <li>• Or ask the installer for help.</li> </ul>
Temperature Over Fault	<p>Temperature beyond limit</p> <ul style="list-style-type: none"> <li>• Check if ambient temperature exceeds the limit.</li> <li>• Or ask the installer for help.</li> </ul>
EPS Overload Fault	<p>EPS(Off-grid) over load fault.</p> <ul style="list-style-type: none"> <li>• Shutdown the high-power device and press the <b>ESC</b> key to restart the inverter.</li> <li>• Or ask for help from the installer if it can not return to normal.</li> </ul>

Faults	Diagnosis and solution
Bat Power Low	<ul style="list-style-type: none"> <li>Close the high-power device and press the <b>ESC</b> key to restart the inverter.</li> <li>Please charge the battery to a level higher than the protection capacity or protection voltage.</li> </ul>
BMS Lost	<p>Battery communication loss</p> <ul style="list-style-type: none"> <li>Check that the communication lines between the battery and the inverter are properly connected.</li> <li>Or ask for help from the installer if it can not return to normal.</li> </ul>
Fan Fault	<p>Fan Fault</p> <ul style="list-style-type: none"> <li>Ask for help from the installer if it can not return to normal.</li> </ul>
Parallel Fault	<p>Parallel Fault</p> <ul style="list-style-type: none"> <li>Check the communication and earth cable connection and matching resistor settings.</li> <li>Or contact SolaX for help if it can not return to normal.</li> </ul>
Hard Limit Fault	<p>HardLimitFault</p> <ul style="list-style-type: none"> <li>Check the power value set in the HardLimit setting, increase the value larger if needed.</li> <li>Or contact SolaX for help if it can not return to normal.</li> </ul>
CT/Meter Check Fault	<ul style="list-style-type: none"> <li>Check if the CT or meter is well connected.</li> <li>Or contact SolaX for help if it can not return to normal.</li> </ul>
Inter_Com_Fault	<p>Mgr InterCom Fault</p> <ul style="list-style-type: none"> <li>Shut down photovoltaic, battery and grid, reconnect.</li> <li>Or ask for help from the installer if it can not return to normal .</li> <li>Internal communication errors.</li> <li>Shut down photovoltaic, battery and grid connections.</li> <li>Or ask for help from the installer if it can not return to normal.</li> </ul>
RCD Fault	<p>Fault of Residual Current Device</p> <ul style="list-style-type: none"> <li>Check the impedance of DC input and AC output.</li> <li>Disconnect PV+, PV- and batteries, reconnect.</li> <li>Or ask for help from the installer if it can not return to normal.</li> </ul>
Grid Relay Fault	<p>Electrical relay failure</p> <ul style="list-style-type: none"> <li>Disconnect PV+, PV- grid and batteries and reconnect.</li> <li>Or ask for help from the installer if it can not return to normal.</li> </ul>
EPS Relay Fault	<p>EPS(Off-grid) relay failure</p> <ul style="list-style-type: none"> <li>Disconnect PV+, PV-, grid and batteries and reconnect.</li> <li>Or ask for help from the installer if it can not return to normal.</li> </ul>
PV ConnDirFault	<p>PV direction fault</p> <ul style="list-style-type: none"> <li>Check if the PV input lines are connected in the opposite direction.</li> <li>Or ask for help from the installer if it can not return to normal.</li> </ul>

Faults	Diagnosis and solution
Earth Relay Fault	<p>EPS(Off-grid) earth relay fault</p> <ul style="list-style-type: none"> <li>• Press the ESC key to restart the inverter.</li> <li>• Or ask for help from the installer if it can not return to normal.</li> </ul>
Power Unmatched	<p>Power type fault</p> <ul style="list-style-type: none"> <li>• Upgrade the software and press the ESC key to restart the inverter.</li> <li>• Or ask for help from the installer if it can not return to normal.</li> </ul>
EPS Port Overcurrent	<p>EPS(Off-grid) port over current fault</p> <ul style="list-style-type: none"> <li>• Check that the EPS(Off-grid) load does not exceed the system requirements.</li> <li>• Press the ESC key to restart the inverter.</li> <li>• Or ask for help from the installer if it can not return to normal.</li> </ul>
Low Bat Temp	<ul style="list-style-type: none"> <li>• Shutdown the high-power device and press the ESC key to restart the inverter.</li> <li>• Please charge the battery to a level higher than the protection capacity or protection voltage.</li> </ul>
High Bat Temp	<ul style="list-style-type: none"> <li>• Check if the battery temperature is too high or the battery temperature sampling wire is not connected or disconnected.</li> </ul>
Meter Comm Fault	<ul style="list-style-type: none"> <li>• Check if the meter is working properly.</li> <li>• Or contact SolaX for help if it can not return to normal.</li> </ul>
Other AC Fault	<ul style="list-style-type: none"> <li>• Check the AC power condition (may be missing phase).</li> <li>• Try to update the processing.</li> <li>• Or contact SolaX for help.</li> </ul>
Other DC Fault	<ul style="list-style-type: none"> <li>• Shut down and re-power on (check battery wiring).</li> <li>• Try to update the processing.</li> <li>• Or contact SolaX for help.</li> </ul>
Other PV Fault	<ul style="list-style-type: none"> <li>• General PV energy is weak, confirm the PV energy is normal, if it still exists.</li> <li>• Try to update the processing.</li> <li>• Or contact SolaX for help.</li> </ul>
Reversed Grid Phase	<ul style="list-style-type: none"> <li>• Reverse phase sequence L2, L3 can be switched arbitrarily, also can be licensed on the screen to run in reverse phase sequence.</li> </ul>
EPO Fault	<ul style="list-style-type: none"> <li>• Check the EPO wiring (loose or disconnected).</li> </ul>
Bat Overcurrent	<p>Battery overcurrent</p> <ul style="list-style-type: none"> <li>• Shut down and re-power (check the battery wiring)</li> <li>• Try to update the processing.</li> <li>• Or contact SolaX for help.</li> </ul>
PV Overcurrent	<p>PV overcurrent</p> <ul style="list-style-type: none"> <li>• Shut down and re-power (check the battery wiring)</li> <li>• Try to update the processing.</li> <li>• Or contact SolaX for help.</li> </ul>

Faults	Diagnosis and solution
NTC1 Sample Invalid	Battery temperature sampling wire is not connected or disconnected <ul style="list-style-type: none"> <li>• Check or contact SolaX for help.</li> </ul>
ExFAN1Fault	<ul style="list-style-type: none"> <li>• Check if the foreign objects stuck in the fan.</li> <li>• Or contact SolaX for help.</li> </ul>
ExFAN2Fault	<ul style="list-style-type: none"> <li>• Check if the foreign objects stuck in the fan.</li> <li>• Or contact SolaX for help.</li> </ul>
ExFAN3Fault	<ul style="list-style-type: none"> <li>• Check if the foreign objects stuck in the fan.</li> <li>• Or contact SolaX for help.</li> </ul>
BMS Lost	BMS communication loss fault <ul style="list-style-type: none"> <li>• Check the power supply, try to update the process.</li> <li>• Or contact SolaX for help.</li> </ul>
DSP Lost	DSP communication loss fault <ul style="list-style-type: none"> <li>• Check the power supply, try to update the process.</li> <li>• Or contact SolaX for help.</li> </ul>
Bat Disconnect	<ul style="list-style-type: none"> <li>• Check battery power cable access</li> <li>• Or contact SolaX for help.</li> </ul>
Cell Overvoltage	Over-voltage faults in the battery cells <ul style="list-style-type: none"> <li>• Wait for fault recovery.</li> <li>• Restart the battery.</li> <li>• Or contact SolaX for help.</li> </ul>
Cell Undervoltage	Cell undervoltage fault <ul style="list-style-type: none"> <li>• Charge the battery.</li> </ul>
High Cell Vol Diff	Excessive cell pressure difference <ul style="list-style-type: none"> <li>• Contact SolaX for help.</li> </ul>
HVB Overvoltage	Overvoltage faults on the main voltage <ul style="list-style-type: none"> <li>• Wait for fault recovery.</li> <li>• Restart the battery.</li> <li>• Or contact SolaX for help.</li> </ul>
HVB Undervoltage	Mains undervoltage fault <ul style="list-style-type: none"> <li>• Charge the battery.</li> </ul>
Overtemp Fault	Over Temperature Fault <ul style="list-style-type: none"> <li>• Stop using the battery and wait for the temperature to recover.</li> </ul>
Self-check Fault	Self-checking faults <ul style="list-style-type: none"> <li>• Check what's happening to the battery and contact SolaX for help.</li> </ul>
Main Relay Stuck (+)	Main Positive Relay Sticky Fault <ul style="list-style-type: none"> <li>• Contact SolaX for help.</li> </ul>
Main Relay Open (+)	Main positive relay open circuit fault <ul style="list-style-type: none"> <li>• Contact SolaX for help.</li> </ul>

Faults	Diagnosis and solution
Main Relay Stuck (-)	Main negative Relay Sticky Fault <ul style="list-style-type: none"> <li>• Contact SolaX for help.</li> </ul>
Main Relay Open (-)	Main negative relay open circuit fault <ul style="list-style-type: none"> <li>• Contact SolaX for help.</li> </ul>
Precharge Fail	Precharge Failure Fault <ul style="list-style-type: none"> <li>• Restart the battery.</li> <li>• If this failure occurs several times please contact solax for help.</li> </ul>
CellSampleFault	Single-unit sampling fault <ul style="list-style-type: none"> <li>• Contact SolaX for help.</li> </ul>
TempSampleFault	Temperature Sampling Fault <ul style="list-style-type: none"> <li>• Contact SolaX for help.</li> </ul>
System Fault	System fault <ul style="list-style-type: none"> <li>• Contact SolaX for help.</li> </ul>
Dischrg Overcurrent	Discharge overcurrent fault <ul style="list-style-type: none"> <li>• Stop using the battery and wait for fault recovery.</li> <li>• Restart the battery.</li> <li>• Or contact SolaX for help.</li> </ul>
Chrg Overcurrent	Charge overcurrent fault <ul style="list-style-type: none"> <li>• Stop using the battery and wait for fault recovery.</li> <li>• Restart the battery.</li> <li>• Or contact SolaX for help.</li> </ul>
AFE Comm Fault	AFE communications failure <ul style="list-style-type: none"> <li>• Contact SolaX for help.</li> </ul>
Inv Comm Fault	Extract communication failure <ul style="list-style-type: none"> <li>• Check the communication cable between the battery and the inverter, after re-plugging, it still appears to contact SolaX for help.</li> </ul>
Mid Comm Fault	Intermediate network communications failure <ul style="list-style-type: none"> <li>• Check the communication cable between the batteries, after re-plugging still appears to contact SolaX for help.</li> </ul>
Voltage Sensor Fault	Voltage Sensor Fault <ul style="list-style-type: none"> <li>• Contact SolaX for help.</li> </ul>
ID Duplicate	ID Repeat Fault <ul style="list-style-type: none"> <li>• Check if the system is connected correctly, follow the initial installation steps again for power-on operation, contact SolaX for help.</li> </ul>
Low Temp Fault	Low temperature fault <ul style="list-style-type: none"> <li>• Wait for fault recovery, restart the battery, contact SolaX for help.</li> </ul>
Current Sensor Fault	Current Sensor Failure <ul style="list-style-type: none"> <li>• Contact SolaX for help.</li> </ul>

Faults	Diagnosis and solution
Power Line Open	Power line open circuit fault <ul style="list-style-type: none"> <li>• Check that the power cables are connected, restart the battery.</li> </ul>
Flash Fault	Flash Fault <ul style="list-style-type: none"> <li>• Contact SolaX for help.</li> </ul>
AFE Self-Protect Fault	APE self-protection fault <ul style="list-style-type: none"> <li>• Contact SolaX for help.</li> </ul>
Charge Request Fault	Charge Request Fault <ul style="list-style-type: none"> <li>• Check that the inverter is properly recharging the batteries.</li> </ul>
Insulation Fault	Insulation faults <ul style="list-style-type: none"> <li>• Contact SolaX for help.</li> </ul>
MCB Fault	<ul style="list-style-type: none"> <li>• Contact SolaX for help.</li> </ul>
High Linker Temp	<ul style="list-style-type: none"> <li>• Contact SolaX for help.</li> </ul>
Bat Linker Exception	<ul style="list-style-type: none"> <li>• Contact SolaX for help.</li> </ul>

Table 13-1 Other faults

Faults	Diagnosis and solution
Screen not on	<ul style="list-style-type: none"> <li>• Check if the inverter correctly and normally connected to PV, battery or grid.</li> <li>• Contact SolaX for help if the inverter is connected correctly.</li> </ul>
Abnormal sound on fan	<ul style="list-style-type: none"> <li>• Check if there is foreign objects stuck in the fan.</li> <li>• Contact SolaX for help.</li> </ul>
Screen on but no content display	<ul style="list-style-type: none"> <li>• Contact SolaX for help.</li> </ul>
No readings after CT connection	<ul style="list-style-type: none"> <li>• Check if CT is correctly clipped on the L wire</li> <li>• Check if the arrow on the CT points at Grid.</li> <li>• Contact SolaX for help if it can not return to normal.</li> </ul>
No readings on Load (on App or Web)	<ul style="list-style-type: none"> <li>• Check if the load is connected correctly.</li> <li>• Check if the power of load on the LCD screen displays normally.</li> <li>• Check if the monitoring module works normally.</li> <li>• Contact SolaX for help if it can not return to normal.</li> </ul>
No readings on Grid (on App or Web)	<ul style="list-style-type: none"> <li>• Check if the grid connection is normal.</li> <li>• Check if the grid parameter on the LCD screen displays normally.</li> <li>• Check if the monitoring module works normally.</li> <li>• Contact SolaX for help if it can not return to normal.</li> </ul>

Faults	Diagnosis and solution
No readings on battery (on App or Web)	<ul style="list-style-type: none"> <li>Check if the battery is connected correctly.</li> <li>Check if the battery parameter on the LCD screen displays normally.</li> <li>Check if the monitoring module works normally.</li> <li>Contact SolaX for help if it can not return to normal.</li> </ul>
No Feedin data (on App or Web)	<ul style="list-style-type: none"> <li>Check if the meter/CT is connected correctly.</li> <li>Check if the meter/CT parameter on the LCD screen displays normally.</li> <li>Check if the monitoring module works normally.</li> <li>Contact SolaX for help if it can not return to normal.</li> </ul>
No data on App or Web	<ul style="list-style-type: none"> <li>Check if the monitoring module works normally.</li> <li>Contact SolaX for help.</li> </ul>
No display on meter after power on	<ul style="list-style-type: none"> <li>If the meter connection is abnormal, reconnect them according to the wiring diagrams.</li> <li>Wait for the grid voltage to restore.</li> <li>Contact SolaX for help if it can not return to normal.</li> </ul>
Abnormal electrical data on meter	<ul style="list-style-type: none"> <li>If the wiring is incorrect, reconnect them based on the wiring diagrams.</li> <li>Set the voltage and current ratio according to the setting steps of meter user manual.</li> <li>Contact SolaX for help if it can not return to normal.</li> </ul>

## 13.3 Maintenance

Regular maintenance is required for the inverter. Please check and maintain the following items based on the instructions below to ensure the optimal performance of the inverter. For inverters working in inferior conditions, more frequent maintenance is required. Please keep maintenance records.

 **WARNING!**

- Only qualified person can perform the maintenance for the inverter.
- Only spare parts and accessories authorized by SolaX can be used for maintenance.

### 13.3.1 Maintenance Routines

Table 13-2 Proposal of Maintenance

Item	Check notes	Maintenance interval
Fans	<ul style="list-style-type: none"> <li>• Check if the fan makes noise or is covered by dust.</li> <li>• Clean the fan with a soft and dry cloth or brush, or replace the fan if necessary.</li> </ul>	Every 12 months
Electrical connection	<ul style="list-style-type: none"> <li>• Ensure that all cables are firmly connected.</li> <li>• Check the integrity of the cables, ensuring that there are no scratches on the parts touching the metallic surface.</li> <li>• Verify that the sealing caps on idle terminals are not falling off.</li> </ul>	Every 12 months
Grounding reliability	<ul style="list-style-type: none"> <li>• Check if the grounding cables are firmly connected to the grounding terminals. Use a ground resistance tester to test the grounding resistance from the inverter enclosure to the PE bar in the power distribution box.</li> </ul>	Every 12 months
Heat sink	<ul style="list-style-type: none"> <li>• Check if there are foreign objects in the heat sink.</li> </ul>	Every 12 months
General status of inverter	<ul style="list-style-type: none"> <li>• Check if there is any damage on the inverter.</li> <li>• Check if there is any abnormal sound when the inverter is running.</li> </ul>	Every 6 months

### 13.3.2 Replacement of Fans

When the fan is not rotating and the feedback speed of the fan is 0, the LCD screen will display **ExFAN1Faul**, **ExFAN2Faul**, and **ExFAN3Faul** error. Refer to the following steps for replacement.

**Step 1:** Loosen the screw on the inverter with cross screwdriver.

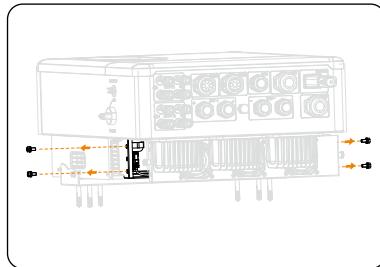


Figure 13-1 Loosening the screws

**Step 2:** Remove the spring pin, remove the outer casing of the inverter, proceed to disconnect the terminals that are connected to the fans.

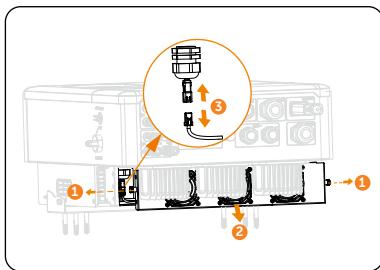


Figure 13-2 Disconnecting the fan

**Step 3:** Loosen the screws on the fan assembly and after disassembling it, replace the fans. After the replacement is complete, please check if the fan can operate normally.

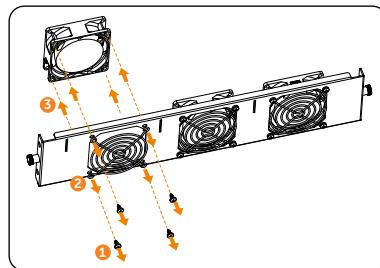


Figure 13-3 Replacing the fan

### 13.3.3 Upgrading Firmware

#### ⚠ WARNING!

- Make sure that the type and format of the firmware file are correct. Do not modify the file name. Otherwise, the inverter may not work properly.
- Do not modify the folder name and file path where the firmware files are located, as this may cause the upgrade to fail.

#### ⚠ WARNING!


- Before upgrading, ensure that the PV input voltage is higher than 150 V (preferably on sunny day), or that the battery SOC is higher than 20%, or the battery input voltage is higher than 150 V. Failure to meet one of these conditions may result in upgrade process failure.

### Upgrade preparation

- Prepare a USB drive (USB 2.0/3.0, <32 GB, FAT 16/32).
- Check for the current firmware version of the inverter.
- Contact our service support for the update firmware file, and save it to the USB drive.
- Find out if the directory "\update\combin" exists on the USB drive.
  - » If it exists, find xxx\_X3-NEO-LV\_ALL\_Vxxx\_xxx.bin
  - » If not, check for xxx\_X3-NEO-LV\_ALL\_Vxxx\_xxx.bin in the root directory of the USB drive.

### Upgrade steps

- a. Insert the U disk into the dongle terminal. If the Dongle is connected to the terminal, please remove the dongle first. For the position of Dongle terminal, refer to ["8.1.1 Terminals of Inverter"](#).
- b. The inverter will automatically enter the upgrade process and displays the current upgrade progress.
- c. After the upgrade is completed, the LCD screen displays **Success**. If the upgrades fail, the LCD screen displays **Fail**.

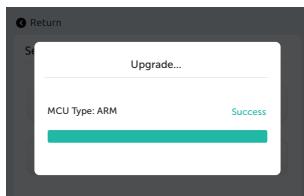

 CAUTION!

- If the ARM firmware upgrade fails or stops, do not unplug the USB drive. Power off the inverter, restart it, and then repeat the above upgrade steps.

 CAUTION!

If the DSP firmware upgrade fails or stops, perform operations below to troubleshoot:

- Check if the PV switch is turned off. If it is off, turn it on.
- (Recommended) If the PV switch is already on, check if the battery and PV parameters meets the upgrade requirements (The PV or battery input voltage should be larger than 150 V, or the battery SOC be higher than 20%).

NOTICE!

- If the LCD screen lags or freezes after the upgrade, turn off the PV switch, and then restart the inverter. Check if the inverter returns to normal. If not, contact us.

# 14 Decommissioning

## 14.1 Disassembling the Inverter

### ⚠️ WARNING!

- Strictly follow the steps below to disassemble the inverter.
- Only use the dedicated removal tool delivered with the inverter to disassemble the PV connector.

**Step 1:** Follow the "13.1 Power-off" and wait for the inverter to power off.

**Step 2:** Disconnect the PV connectors: Insert the removal tool into the notch of PV connectors and slightly pull out the connectors.

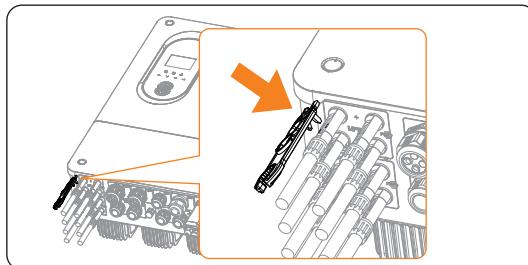


Figure 14-4 Releasing the PV connector

**Step 3:** Slightly pull out the dongle module.

**Step 4:** Open the upper cover of the inverter.

**Step 5:** Remove the internal cables (battery cable, Grid, GEN and EPS cable, communication cable) and the CT.

**Step 6:** Put the original terminal caps on the terminals.

**Step 7:** Reinstall the upper cover.

**Step 8:** Unscrew the grounding screw by cross head screw and remove the grounding cable.

**Step 9:** (Optional) Unlock the anti-theft lock.

**Step 10:** Unscrew the M6 screw on the both sides of inverter and vertically lift up the inverter to dismantle the inverter.

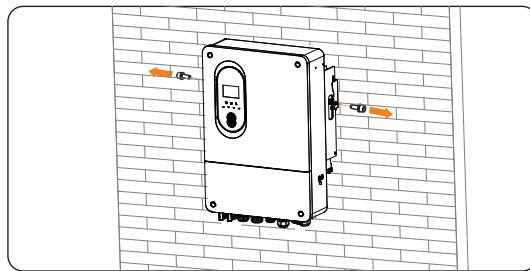


Figure 14-5 Unscrewing the M6 screws

**Step 11:** Unscrew the screws for fastening the wall mounting bracket and remove the wall mounting bracket if needed.

## 14.2 Packing the Inverter

- Use the original packaging materials if available.

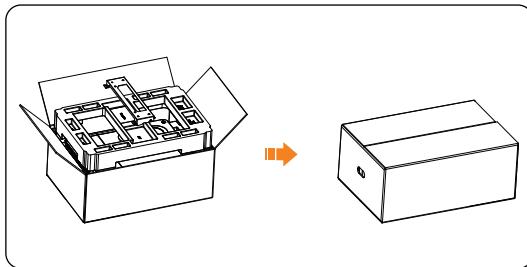


Figure 14-6 Packing the inverter

- If the original packing material is not available, use the packing material which meets the following requirements:
  - » Suitable for the weight and dimension of product
  - » Convenient for transportation
  - » Can be sealed with adhesive tape

## 14.3 Disposing of the Inverter

Properly dispose of the inverter and accessories in accordance with local regulations on the disposal of electronic waste.

# 15 Technical Data

---

## PV Input

Model	X3-NEO-5K-LV	X3-NEO-8K-LV	X3-NEO-10K-LV	X3-NEO-12K-LV	X3-NEO-15K-LV	X3-NEO-20K-LV
Max. PV Array Input power [Wp]	10000	16000	20000	24000	30000	40000
Max. PV Input Power [W] (derating above +45 °C)	10000	16000	20000	24000	30000	30000
Max. PV input voltage <sup>1</sup> [V]				1000		
Start Output Voltage [V]				150		
Nominal Input Voltage [V]				640		
MPPT operating voltage range <sup>2</sup> [V]				160–950		
No. of MPPT/Strings per MPPT	2(1/1)	2(1/1)	2(2/1)	2(2/2)	2(2/2)	2(2/2)
Max. Input Current <sup>3</sup> [A]	18/18	18/18	36/18	36/36	36/36	36/36
Max. Short Circuit Current [A]	25/25	25/25	50/25	50/50	50/50	50/50
Max. Inverter Backfeed Current to the Array [A]				0		

## Note:

<sup>1</sup> The maximum input voltage is the upper limit of the DC voltage. Any higher input DC voltage would probably damage inverter.

<sup>2</sup> Input voltage exceeding the operating voltage range may triggers inverter protection.

<sup>3</sup> When both strings are connected to a single MPPT, the Max. output current for a single string is 18 A; When a single string is connected to one MPPT, the Max output current for a single string is 20 A.

## AC Input/Output

Model	X3-NEO-5K-LV	X3-NEO-8K-LV	X3-NEO-10K-LV	X3-NEO-12K-LV	X3-NEO-15K-LV	X3-NEO-20K-LV
Nominal AC Output Power [W]	5000	8000	10000	12000	15000	20000

Model	X3-NEO-5K-LV	X3-NEO-8K-LV	X3-NEO-10K-LV	X3-NEO-12K-LV	X3-NEO-15K-LV	X3-NEO-20K-LV
Max. AC Output Apparent power [VA]	5500	8800	11000	13200	16500	22000
Rated Output Current [A] (230V)	7.3	11.6	14.5	17.4	21.8	29
Max. Output continuous current [A] @230V/400V	8.0	12.8	16.0	19.2	24.0	31.9
Max. AC Input apparent power [VA]	10000	16000	20000	24000	30000	30000
Max. AC Input current [A] @220V/380V	15.15	24.24	30.30	36.4	45.5	45.5
Max. AC Input Current [A] @230V/400V	14.5	23.2	29.0	34.8	43.5	43.5
Nominal AC Voltage (AC Voltage Range)[V]			220/380, 230/400			
Nominal Grid Frequency [Hz]			50/60			
Displacement Power Factor			0.8 leading - 0.8 lagging			
THDi (Rated Power)[%]			<3			
AC Connection			3L/N/PE			
DC Disconnection Switch			Yes			
Maximum Fault Current [A]			50			
Maximum Output Overcurrent Protection [A]			72			
Inrush Current [A]			65			

## · EPS Output

Model	X3-NEO-5K-LV	X3-NEO-8K-LV	X3-NEO-10K-LV	X3-NEO-12K-LV	X3-NEO-15K-LV	X3-NEO-20K-LV
Nominal Output power [W]	5000	8000	10000	12000	15000	20000
Peak Apparent Power [VA]	2 times of rated power, 10 s					
Nominal AC Output Frequency [Hz]	50/60					
Rated EPS Output Current [A]	7.3	11.6	14.5	17.4	21.8	29.0
Nominal AC Voltage [V]	220/380, 230/400					
Switch Time [ms]	< 3					
THDv (@Linear load)	< 2%					

**Note:**

## Load requirements

- » The instantaneous peak current (baseline current + inrush current) during load switching shall not exceed 1.1 times the PCS rated current.
- » Direct-on-line or star-delta starting motors: shall not exceed 10% of the PCS rated power.
- » Variable-frequency drive or soft-start motors: shall not exceed 2/3 of the PCS rated power.
- » If the PCS is already under load, the switching capability for motor loads shall be reduced proportionally.
- » The isolation transformer associated with the PCS must be started simultaneously with the PCS.
- » Load-side transformers with a power rating not exceeding 50% of the PCS rated power may be switched at no-load. For load-side transformers exceeding this power rating, simultaneous startup with the PCS is recommended.

## · Battery Data

Model	X3-NEO-5K-LV	X3-NEO-8K-LV	X3-NEO-10K-LV	X3-NEO-12K-LV	X3-NEO-15K-LV	X3-NEO-20K-LV
Battery type	Lithium/Lead-Acid					
Battery voltage range [V]	40–60					
Nominal battery voltage [V]	48					
Max. Charging/Discharging Current [A]	125	200	250	280	300	350
Charging Strategy for Lead-Acid Battery	3 stages curves					
Temperature Sensor	Yes					

## · Protection Device

Model	X3-NEO-5K-LV	X3-NEO-8K-LV	X3-NEO-10K-LV	X3-NEO-12K-LV	X3-NEO-15K-LV	X3-NEO-20K-LV
Active anti-islanding method	Yes					
PV String Input Reverse Polarity Protection	Yes					
Insulation Resistor Detection	Yes					
Residual Current Monitoring Unit	Yes					
Output Over Current Protection	Yes					
Output Short Protection	Yes					
Output Over Voltage Protection	Yes					
Surge Protection	AC Type II/DC Type II					
Battery Terminal Temp Protection	Yes					

## Technical Data

### • Environment Limit

Model	X3-NEO-5K-LV	X3-NEO-8K-LV	X3-NEO-10K-LV	X3-NEO-12K-LV	X3-NEO-15K-LV	X3-NEO-20K-LV
Degree of protection	IP65					
Operating temperature range[°C ]	-25–+60 (derating above +45)					
Pollution level	III					
Relative humidity [%]	0–100 (condensing)					
Max. operation altitude [m]	<3000					
Storage Temperature[°C ]	-40 to +70					
Noise Emission(typical)[dB]	<55					

### • General

Model	X3-NEO-5K-LV	X3-NEO-8K-LV	X3-NEO-10K-LV	X3-NEO-12K-LV	X3-NEO-15K-LV	X3-NEO-20K-LV
Dimension (W*H*D) [mm]	520 × 705 × 258					
<b>Net Weight [kg]<sup>1</sup></b>	44.6					
Cooling concept	/	/	FAN	FAN	FAN	FAN
Topology	Non-isolated					
HMI Interface	LED+LCD					
Communication Interfaces	RS485, CAN, USB, DI/DO					

### • System Data

Model	X3-NEO-5K-LV	X3-NEO-8K-LV	X3-NEO-10K-LV	X3-NEO-12K-LV	X3-NEO-15K-LV	X3-NEO-20K-LV
MPPT Efficiency	> 99.9%					
Max. efficiency	97.6%					
Euro. efficiency	97.0%					

### • Standard

Model	X3-NEO-5K-LV	X3-NEO-8K-LV	X3-NEO-10K-LV	X3-NEO-12K-LV	X3-NEO-15K-LV	X3-NEO-20K-LV
Safety	IEC 62109-1/-2					
EMC	EN61000-6/1/2/3/4					
Certification	IEC 61727, IEC 62116, IEC 61683, IEC 60068, EN 50530					

### Note:

<sup>1</sup> The specific weight is subject to the actual situation of the whole machine.

# 16 Appendix

---

## 16.1 Application of Generator

### 16.1.1 Introduction of Generator Application

When utility power supply is unavailable, the system can seamlessly switch to the generator for power supply and collaborate with the energy storage system to ensure the uninterrupted use of the load. In this case, the generator functions as the power grid to supply power for the load, and the hybrid inverter converts the solar energy to electricity.

You can connect the generator to both a single-inverter system and a parallel-inverter system.

### 16.1.2 Generator Wiring Connection Diagram

You can connect a generator to the inverter's **GEN** or **Grid** terminal.

## Generator at GEN terminal

This diagram shows dry-contact control (inverter control) wiring on the **GEN** terminal using a single inverter as an example.

## NOTICE!

- If the dry-contact DO control is wired between the **COM4** terminal and the generator, set the inverter to **Inverter Control** mode. Otherwise, select **External Control** mode.

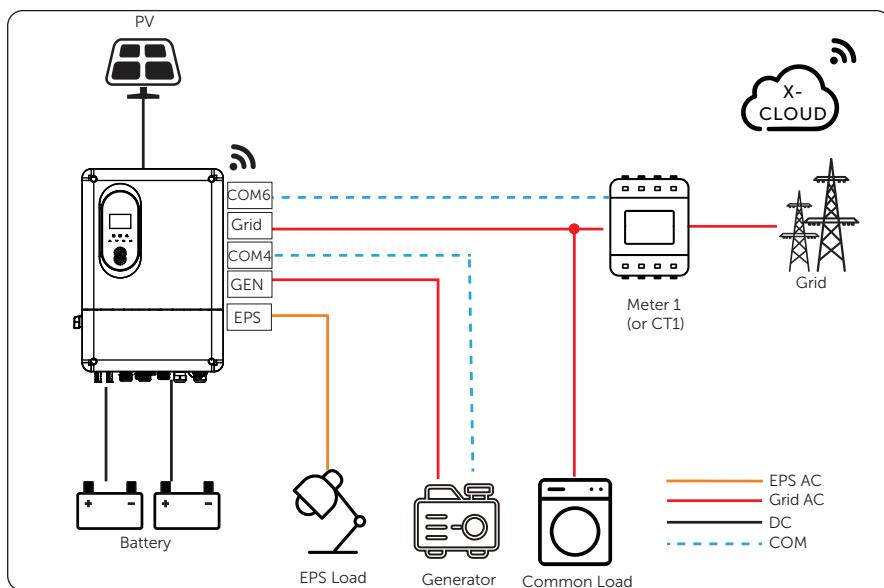


Figure 16-1 Diagram for generator connecting to the GEN terminal (single inverter)

## Generator at Grid terminal

This diagram shows dry-contact control (inverter control) wiring on the **Grid** terminal using a single inverter and parallel inverters as an example.

### NOTICE!

- If the dry-contact DO control is wired between the **COM4** terminal and the generator, set the inverter to Inverter Control mode. Otherwise, select **External Control** mode.
- When the generator is connected to the inverter's **Grid** terminal, an ATS is required to switch between the utility grid and the generator. An external ATS is not required for a off-grid scenario.
- When a generator is connected to the **Grid** terminal, it is normal for the inverter to report **Meter Comm Fault** after a grid failure.
- Single inverter

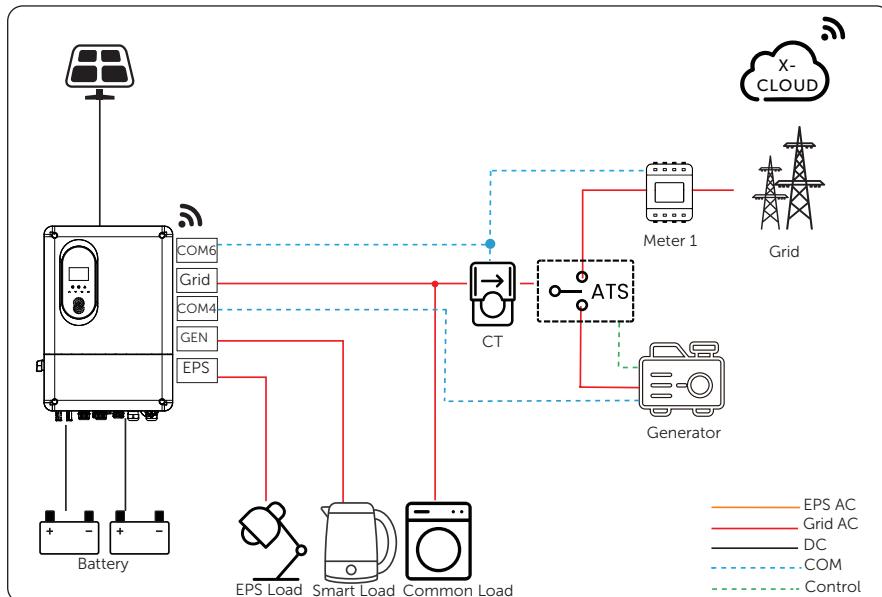


Figure 16-2 Diagram for generator connecting to the Grid terminal (single inverter)

- Parallel inverters

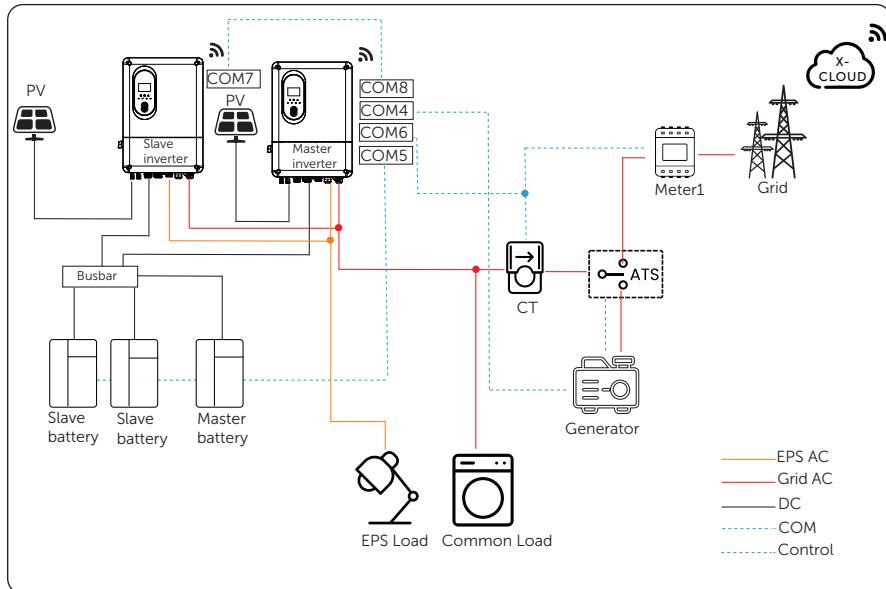


Figure 16-3 Diagram for generator connecting to the Grid terminal (parallel inverters)

### 16.1.3 Generator Control Mode

The generator control mode depends on whether dry-contact control via the COM4 DO port is used.

#### Inverter control

This mode utilizes the inverter's internal Digital Output (DO) to trigger the generator's Digital Input (DI) for automatic startup. You can connect the generator to the inverter's **GEN** or **Grid** terminals.

#### External control

When you connect the generator to the inverter's **GEN** terminal, you must start it manually to activate the generator mode. When connected to the **Grid** terminal, automatic startup is supported via an ATS.

#### NOTICE!

- An ATS is required for automatic switching between the grid and a generator connected to the **Grid** terminal. However, if the inverter is operating in the off-grid scenario, an external ATS is not required.

#### 16.1.4 Cable Connection

- Connection terminal-DO terminal

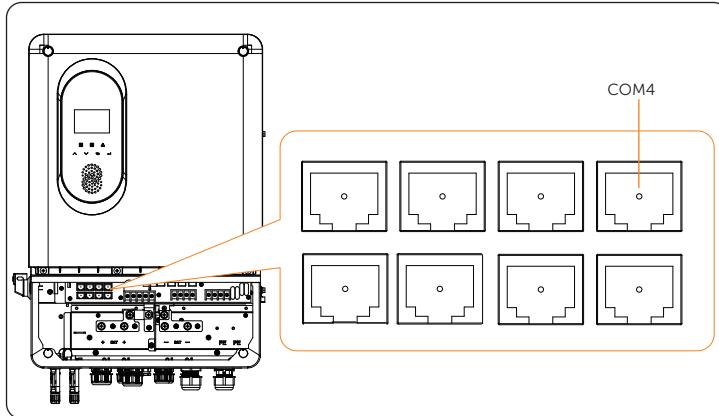


Figure 16-4 Connection terminal for generator

- Connection pins

Table 16-1 Connection pins for generator

Pin	Assignment	Description
5	DO_1	For generator connection
6	DO_2	

- Connection steps: Please refer to "[9.4.1 Generator Communication Connection](#)" for specific wire making and connection.

#### 16.1.5 Inverter settings for Meter1

Set the meter communication address to **1**. For details, see the user manual of the meter.

## 16.2 Application of Parallel Function

### 16.2.1 Introduction of Parallel Application

The series inverters supports parallel operation in both grid and EPS modes. It supports up to 10 units

### 16.2.2 Notice for Parallel Application

- All inverters should be of the same software version.
- All inverters must be the same model.
- In parallel system, there are three states: **Single**, **Slave** and **Master**.

Table 16-2 Three states

Single	The inverter is operating as an independent, single-unit system.
Slave	Once one inverter is set as <b>Master</b> , all other inverters will enter <b>Slave</b> state automatically. <b>Slave</b> mode can not be changed from other states by LCD setting.
Master	When one inverter is set as <b>Master</b> , this inverter enters <b>Master</b> state. <b>Master</b> mode can be changed to <b>Single</b> state when <b>System Switch</b> is set to <b>Off</b> .

- Master inverter has an absolute lead in the parallel system to control all slave inverter's energy management and dispatch control. Once master inverter has some error and stop working, all slave inverters will be stopped simultaneously. But master inverter is independent of all slave inverters to work and will not be affected by the slave inverter's fault.
- Once the slave inverter has exited the parallel system and is operating as a stand-alone unit, it needs to be rewired and set to **Single**.
- The parallel system is extremely complex and requires a large number of cables to be connected. Therefore, the cables must be connected in the correct wire sequence. Otherwise, any small mistake can lead to system failure.
- The communication cable between two inverters should not exceed 1.5 m.
- When connecting batteries, it supports the same type of batteries to be paralleled together and output to the inverter, only the master communicates with the batteries.

## 16.2.3 System Wiring Diagram

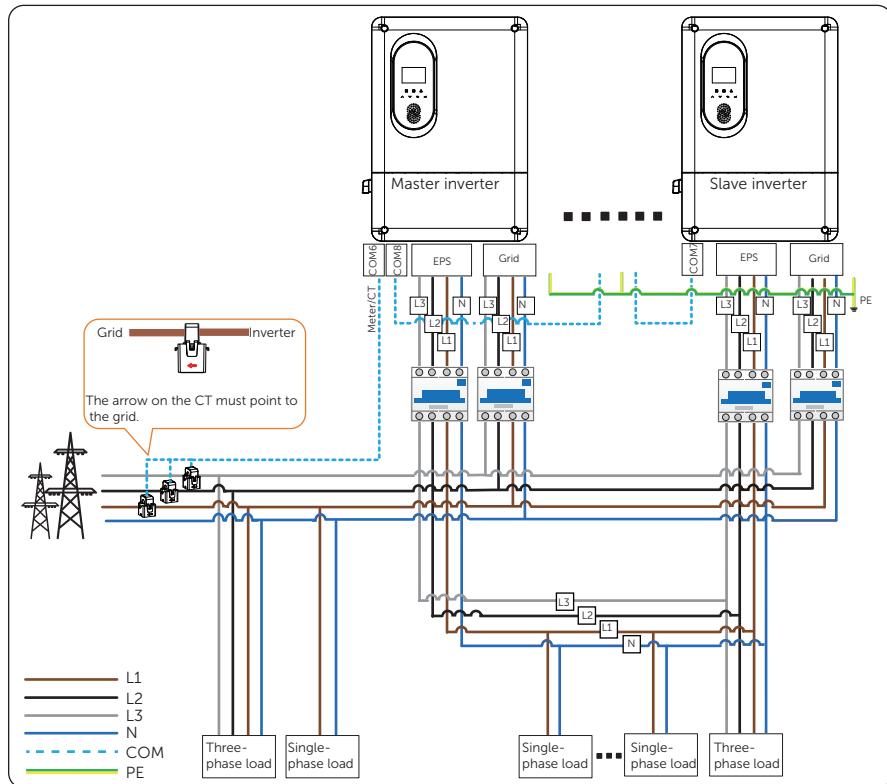


Figure 16-5 Parallel system wiring diagram

### 16.2.4 System Wiring Procedure

#### Power cable wiring—Grid and EPS terminal

- Use five-core copper cable to connect master-slave inverter.
- Grid** terminal of master and slave inverter: L1 connects to L1, L2 connects to L2, L3 connects to L3 and N connects to N,
- EPS** terminal of master and slave inverter: L1 connects to L1, L2 connects to L2, L3 connects to L3 and N connects to N,
- All PE cables connect to the E-BAR nearby.

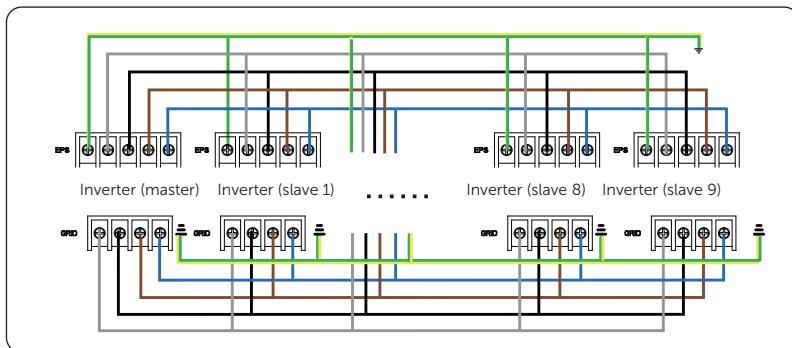


Figure 16-6 Power cable wiring

#### Communication cable wiring—COM7 terminal and COM8 terminal

- Use standard network cables for master-slave inverter connection.
- Master inverter **COM8** connects to slave 1 inverter **COM7**.
- Slave 1 inverter **COM8** connects to slave 2 inverter **COM7**. And so on.
- Meter connects to Meter/CT terminal of the master inverter. Please refer to "9.6.1 Meter/CT Connection".
- Set the DIP switches of the master and the last of the parallel units to **ON**.

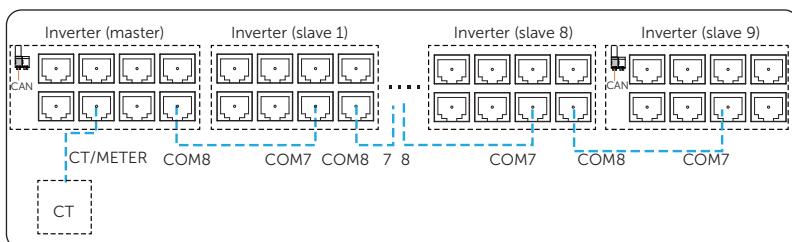


Figure 16-7 Communication cable wiring

## NOTICE!

- For details on the specific wiring of the inverter, see "8.4 AC Connection" and "9.6 Parallel Connection".

## Battery wiring diagram

## NOTICE!

- When using a lithium battery in a parallel system, a battery communication cable is required between the master inverter and the master battery unit. For details, see "9.5.1 Generator Communication Connection".
- The following diagram illustrates the wiring method for the battery power expansion mode. If connected as shown below, the inverter settings must be configured as follows: Go to **Battery > Li-ion > Battery Parallel Mode** and set it to **Power Mode**. For details, see "11.5 Battery Setting".

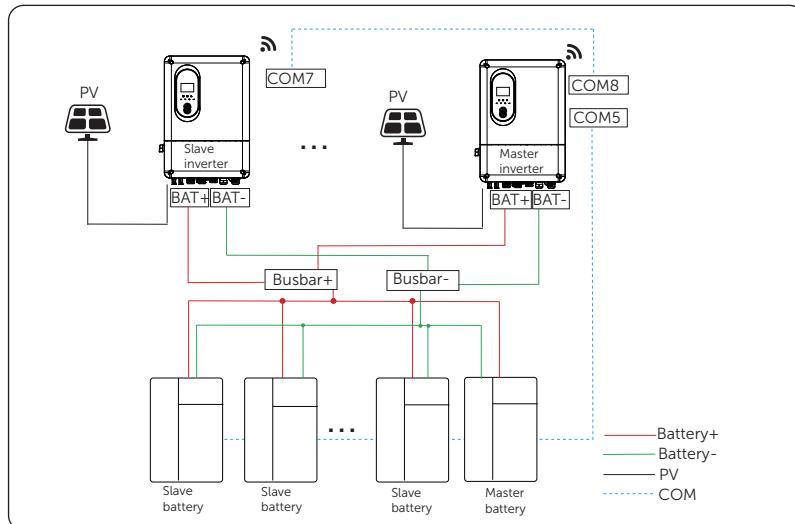


Figure 16-8 Diagram for battery wiring


### 16.2.5 Settings for Parallel Connection

#### Parallel setting

Setting path: Select  > **Parallel Setting**.

#### How to build the parallel connection

- Turn on the power of the entire system; find the inverter which needs to be set as master inverter; enter the setting interface of the master inverter LCD screen; select the **Parallel Setting**, and select **Master**.

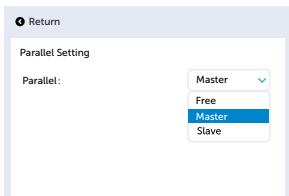

#### How to remove the parallel connection

- Disconnect all the network cables on the **COM7** and **COM8** terminal.
- Find the inverter which needs to be set as a single inverter. Select the **Parallel Settings** and select **Single** for the inverter.
- Disconnect Grid and EPS from parallel connection.
- Disconnect the parallel CT connection. If necessary, connect as a single CT connection, and then perform the **Installation Check** in the "**Meter/CT State**" function.

#### NOTICE!

- If the network cable of a slave inverter is disconnected with master inverter but not be set to **Single**, this slave inverter will stop working.

#### Meter/CT settings

Setting path:  > **Setting** > **Advance Setting** > **Meter/CT Settings**. For details, see "**Meter/CT State**".

#### NOTICE!

- If the output power does not meet the expectation, you can check whether the **Grid Control** value is set reasonably through the setting path:  > **Setting** > **Advance Setting** > **Grid Control**.
- To use a higher-range CT in a parallel system, go to the **Meter/CT State Settings** and set **CT Ratio** accordingly.
- In a parallel system, you may need to use a CT with a larger measurement range. Adjust the **CT Ratio** accordingly to support it.

### 16.2.6 Parallel Display

#### NOTICE!

- The exact display is based on what is on the actual inverter.
- The working mode in the main interface will show this inverter as **Master** or **Slave**.  
Master displays mode-**M**;  
Slave 1 displays mode-**S1**;  
Slave 2 displays mode-**S2**, and so on.
- Grid display: Inputs and outputs are displayed on the master inverter and **0** on the slaves;
- PV display: Each inverter displays PV power generation individually;
- Battery display: If the batteries are connected together in parallel and output to the master inverter, all inverters will display power and SOC.



## 16.3 Application of Micro-grid

### 16.3.1 Introduction of Micro-grid Application

Due to Islanding Effect, on-grid inverter is unable to work during off-grid. This characteristic makes user losing the on-grid inverter PV energy when off-grid. Micro-grid is the function that making hybrid inverter simulate the grid to active on-grid inverter during off-grid by connecting on-grid inverter to hybrid inverter's **EPS** or **GEN** terminal.

- When the grid is disconnected, this series of inverters replaces the grid, maintains the operation of the on-grid inverter, and together with the on-grid inverter, supplies power to the off-grid loads. If there is surplus power, charge the battery.
- Any brand of on-grid inverter that supports **Frequency Protection**.
- On-grid inverter output power  $\leq$  Max. hybrid inverter EPS output power.
- On-grid inverter output power  $\leq$  Max. battery charging power.

### 16.3.2 System Wiring Diagram

#### Micro-grid at EPS terminal

- Single inverter

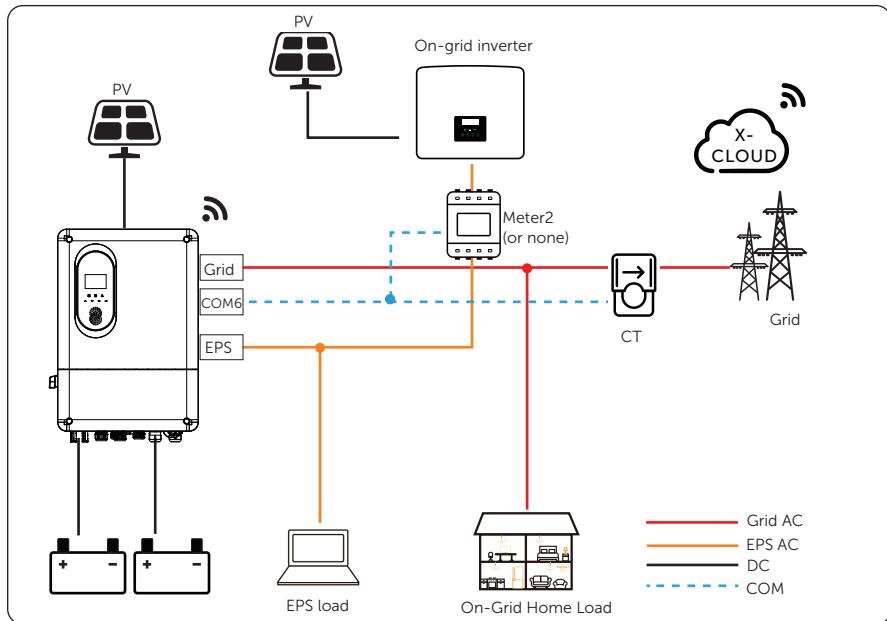


Figure 16-9 Micro-grid for a single inverter at EPS terminal

- Parallel inverters

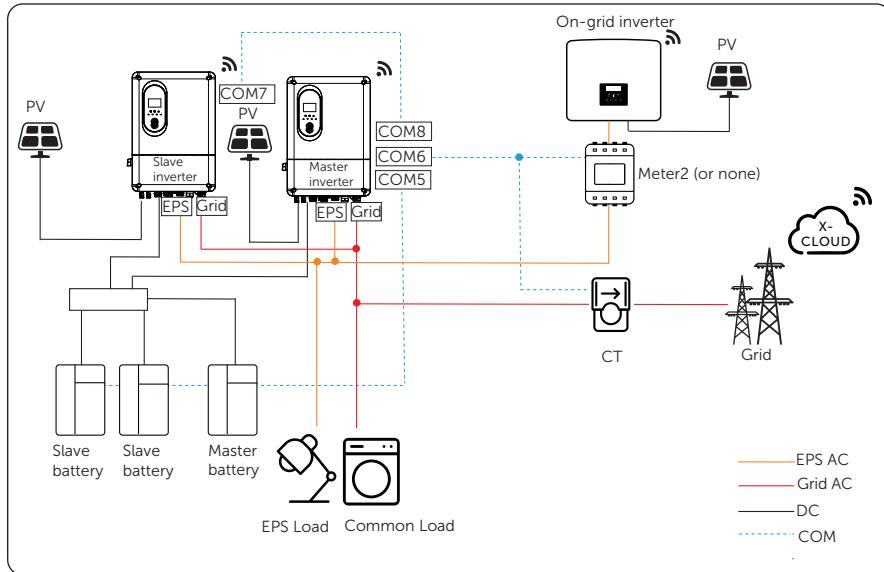


Figure 16-10 Micro-grid for parallel inverters at EPS terminal

#### NOTICE!

- In EPS mode, due to limited battery charging power, the hybrid inverter will increase the EPS output frequency to restrict and shut down the on-grid inverter, ensuring the stable operation of the entire system. In this period, the on-grid inverter may report a **Grid Freq Fault** which is a normal phenomenon.

### Micro-grid at GEN terminal

- Single inverter

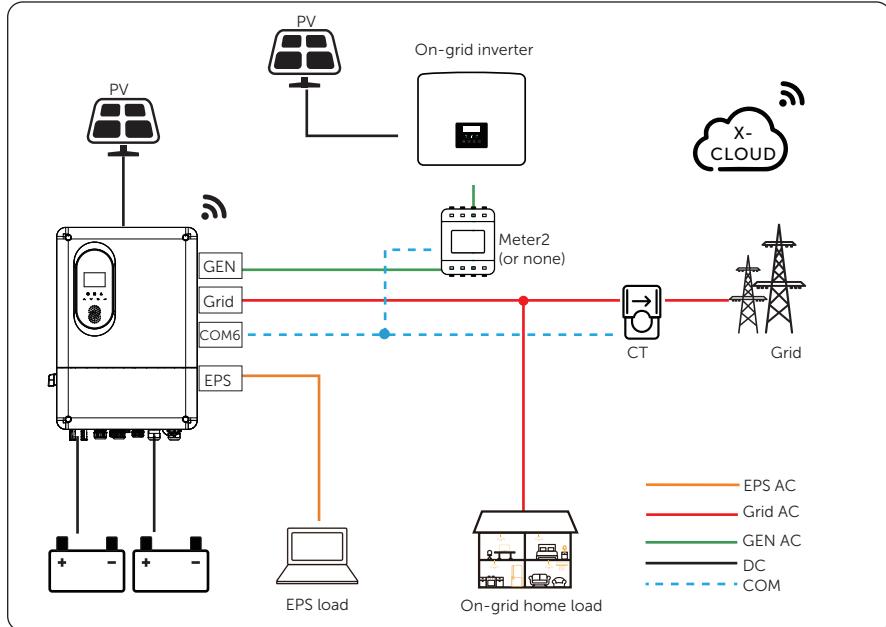


Figure 16-11 Micro-grid for a single inverter at GEN terminal

- Parallel inverters

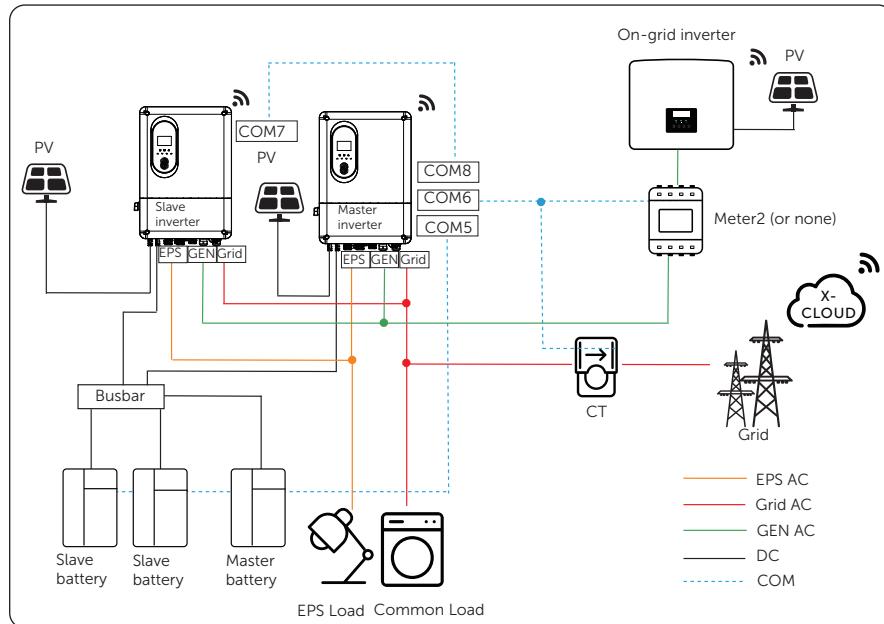


Figure 16-12 Micro-grid for parallel inverters at EPS terminal

### 16.3.3 Cable Connection

#### Hybrid inverter


For details about cable connection for the X3-NEO-LV series inverter, see "[8.4 AC Connection](#)" for Grid, EPS, and GEN connection.

#### On-grid inverter

Connect the AC cable of the on-grid inverter to the **GEN** terminal of the hybrid inverter. For details about cable connection for the on-grid inverter, see its user manual.

### 16.3.4 Inverter Settings for Meter2

- a. Set the meter communication address to **2**. For details, see the user manual of the meter.
- b. Select  > **Setting** > **Advance Setting** > **Meter/CT State**.
- c. Enable **Meter2 En**.

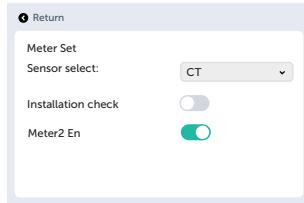

## 16.4 Application of AC Coupling

### 16.4.1 Introduction of AC Coupling

AC coupling integrates storage with existing PV systems via parallel AC connection. It stores excess solar energy, enables backup power during grid outages, and increases self-consumption. This retrofit solution requires no modification to the original PV system and maintains compatibility with most on-grid inverters.

#### NOTICE!

- The AC-coupled system does not support a zero-power output mode.

### 16.4.2 System Wiring Diagram

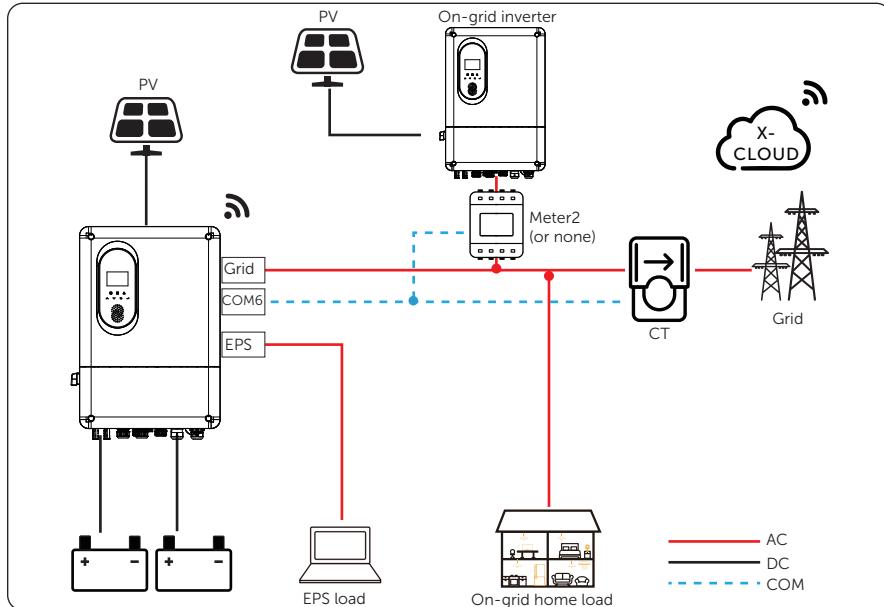


Figure 16-13 AC Coupling wiring diagram

### 16.4.3 Cable Connection

#### Hybrid inverter


For details about cable connection for the X3-NEO-LV series inverter, see "8.4 AC Connection" for Grid, EPS, and GEN connection.

#### On-grid inverter

Connect the AC cable of the on-grid inverter to the **GEN** terminal of the hybrid inverter. For details about cable connection for the on-grid inverter, see its user manual.

#### 16.4.4 Inverter Settings for Meter2

- a. Set the meter communication address to **2**. For details, see the user manual of the meter.
- b. Select  > **Setting** > **Advance Setting** > **Meter/CT State**.
- c. Enable **Meter2 En**.

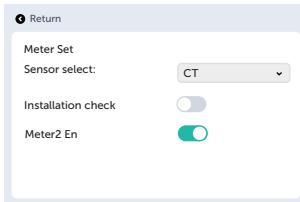

### 16.5 Application of Meter

#### 16.5.1 Introduction of Meter Connection

To detect and monitor the power data generated from the on-grid inverter or the grid status when a generator is connected to the **Grid** terminal of the X3-NEO-LV series inverter, the meter is required.

#### 16.5.2 System Wiring Diagram

### Meter1 connection with generator at Grid terminal

To monitor the grid status when a generator is connected to the **Grid** terminal of the X3-NEO-LV series inverter, **Meter1** is required to be installed on the grid side and set to **Enable**.

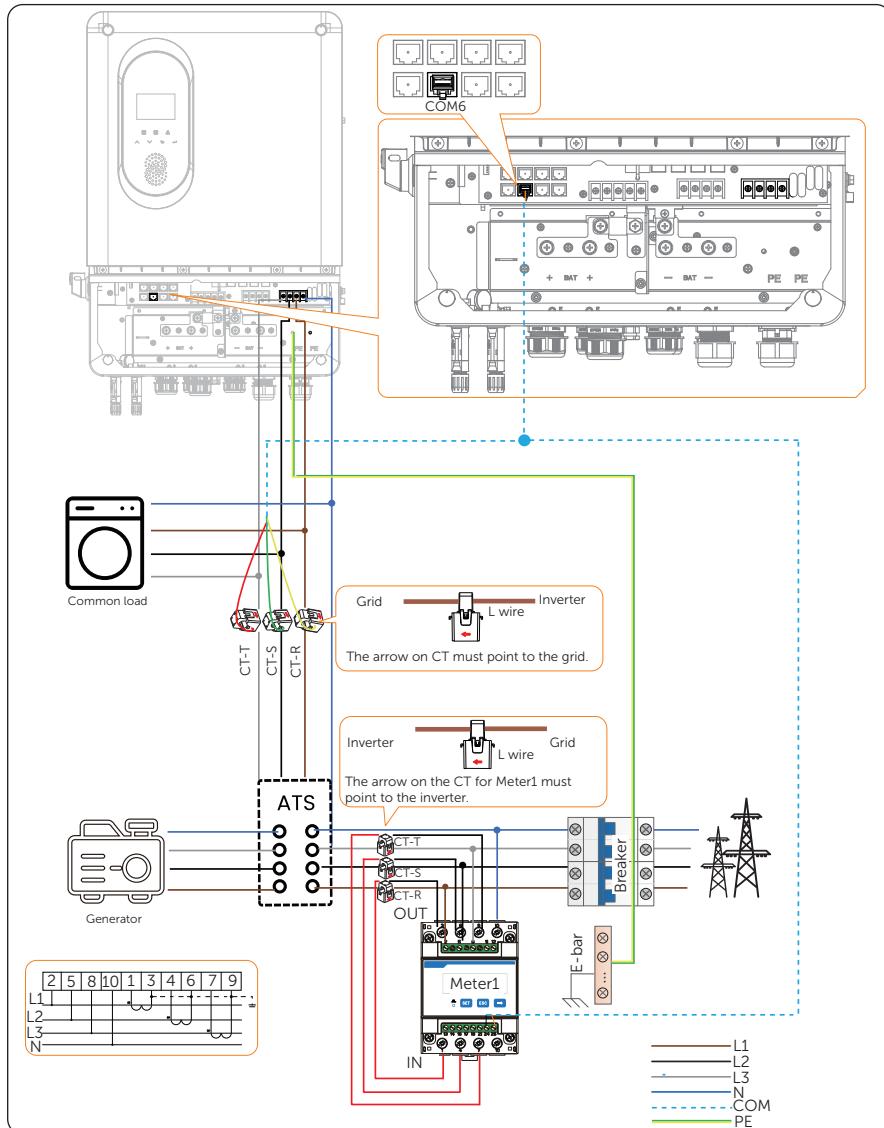


Figure 16-14 Connection diagram for Meter1 with generator at Grid terminal

### Meter2 connection in AC coupling

In AC coupling, **Meter2** is installed on the on-grid inverter side to measure net power flow, allowing the inverter to dynamically control energy import and export.

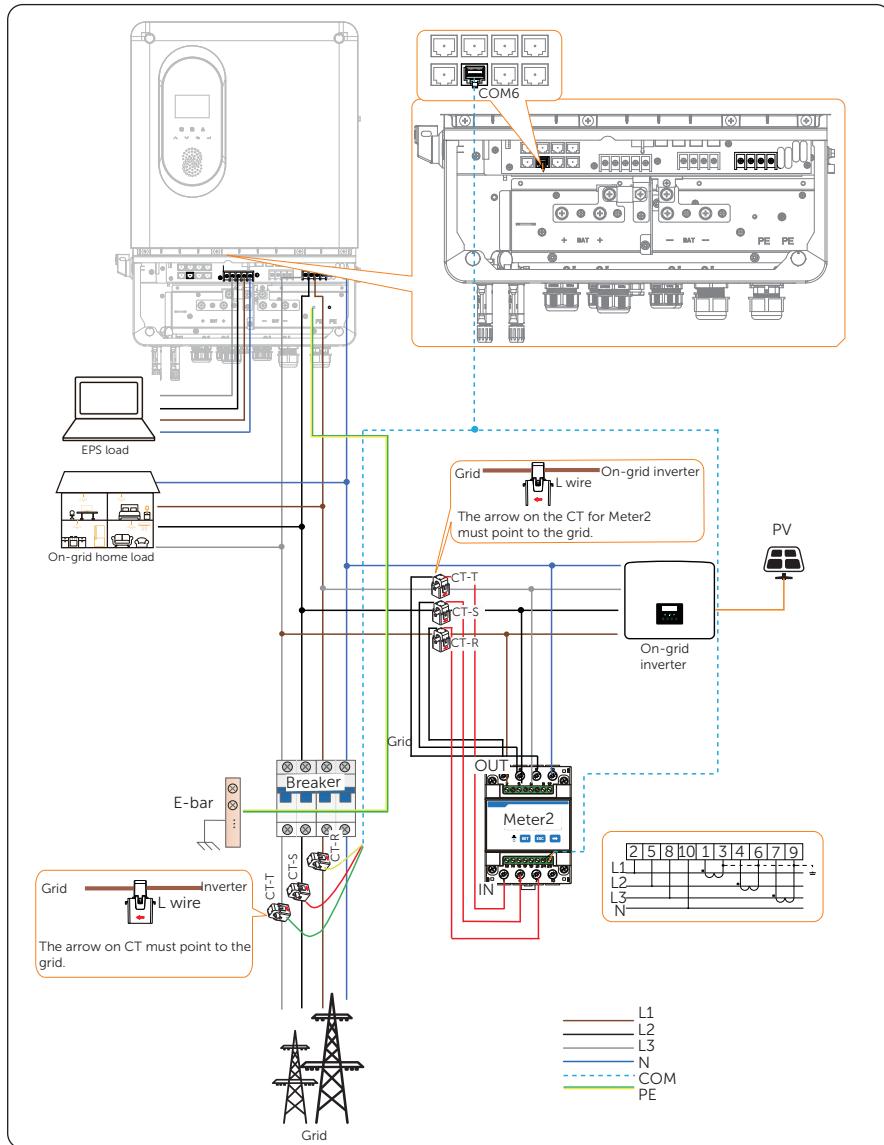


Figure 16-15 Connection diagram for Meter2 in AC coupling

## NOTICE!

- For Meter/CT connection steps, refer to "[9.6.1 Meter/CT Connection](#)" and meter /CT user manual for specific connection steps.

### 16.5.3 Pin Assignment of COM6

Table 16-3 Pin assignment of COM6 for meter


Pin	Assignment	Description
4	METER_485A	For meter connection
5	METER_485B	

### 16.5.4 Inverter Settings for Meter1

Set the meter communication address to **1**. For details, see the user manual of the meter.

### 16.5.5 Inverter Settings for Meter2

- Set the meter communication address to **2**. For details, see the user manual of the meter.
- Select  > **Setting** > **Advance Setting** > **Meter/CT State**.
- Enable **Meter2 En**.

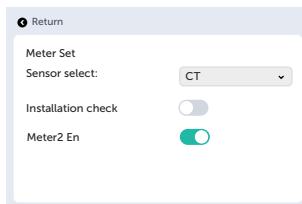

## 16.6 Application of Smart Load

### 16.6.1 Introduction of Smart Load

The smart load function is an advanced operational mode that utilizes the **GEN** terminal of an inverter as a controllable load. In this configuration, the inverter actively draws power from an available AC source to supply specific, non-critical loads. This enables critical applications such as generator testing, burner-in cycles, and strategic power diversion, turning excess energy into a usable resource rather than wasting it.

#### NOTICE!

- For smart load settings, see "[11.6 Smart Load](#)".

### 16.6.2 System Wiring Diagram

#### Smart load for a single inverter

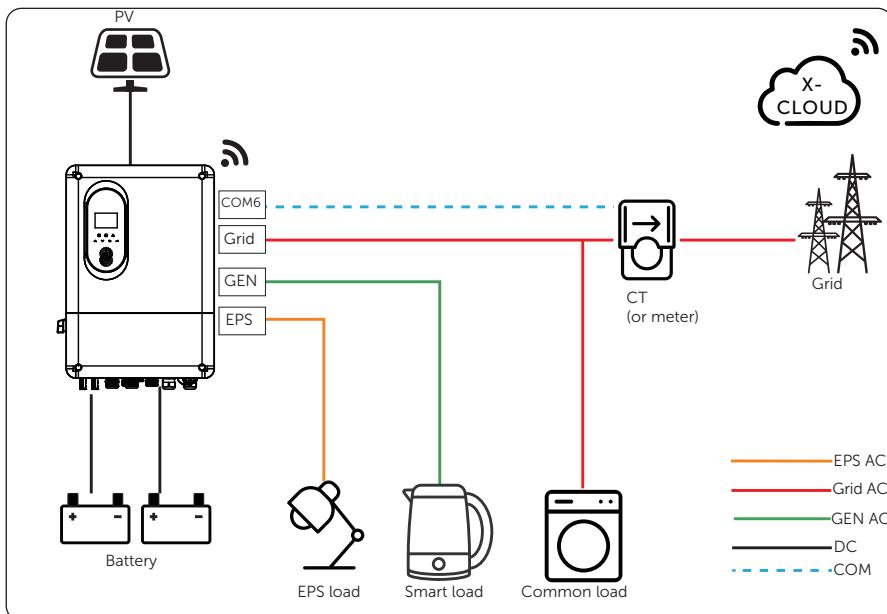


Figure 16-16 Diagram for smart load for a single inverter

## Smart load for parallel inverters

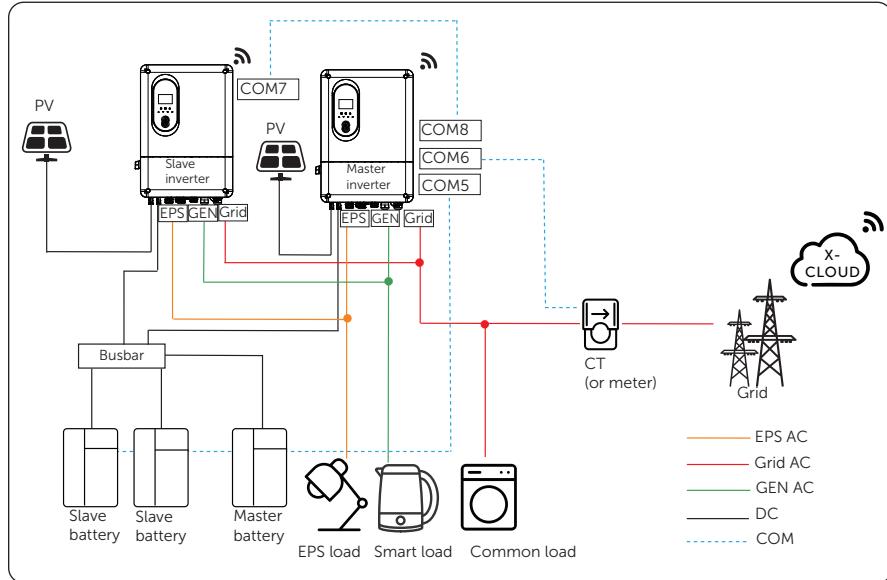


Figure 16-17 Diagram for smart load for parallel inverters



## **SolaX Power Network Technology (Zhejiang) Co., Ltd.**

ADD.: No. 278, Shizhu Road, Chengnan Sub district, Tonglu County,  
Hangzhou, Zhejiang, China  
E-mail: [info@solaxpower.com](mailto:info@solaxpower.com)